

Installation Manual

PCSK-04

Introduction

This installation manual explains how to install PCSK-04 on typical computers (does not cover all computers).

PC

page 4
page 5
page 6
page 7
page 8
page 9
page 10
page 12
page 13
page 14
page 15
page 16
page 18
page 19

HP is a registered trademark of HP Hewlett Packard Group LLC.

EliteDesk and Elite Slice are a registered trademark of Hewlett-Packard Development Company, L.P. Dell is a registered trademark of Dell Inc.

Wyse is a trademark or a registered trademark of Dell Inc.

GIGABYTE is a registered trademark of GIGA-BYTE Technology Co., Ltd.

Lenovo, Think Centre and Think Station are registered trademarks of Lenovo Corporation.


TORX is a registered trademark of Acument Intellectual Properties, LLC.

FUTRO is a registered trademark of Fujitsu Client Computing Limited.

EIZO, the EIZO Logo and DuraVision are registered trademarks of EIZO Corporation in Japan and other countries.

All other company names, product names, and logos are trademarks or registered trademarks of their respective companies.

How to Install a PC on a Monitor

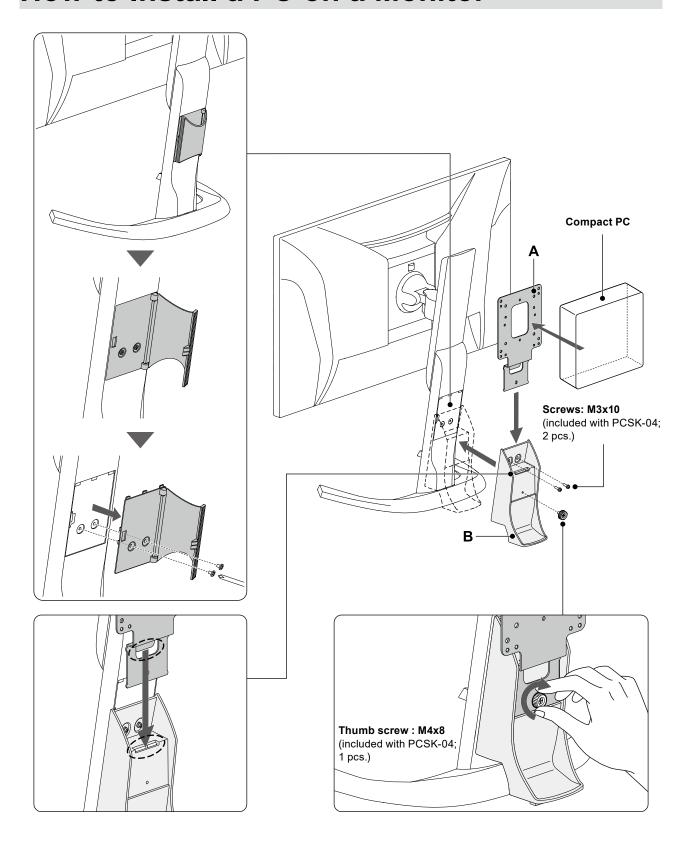


HP t520 Thin Client

Parts required

• Screws: M4x8 (included with PCSK-04; 4 pcs.)

Tools required

- Phillips screwdriver (#2)
- TORX driver (T10)

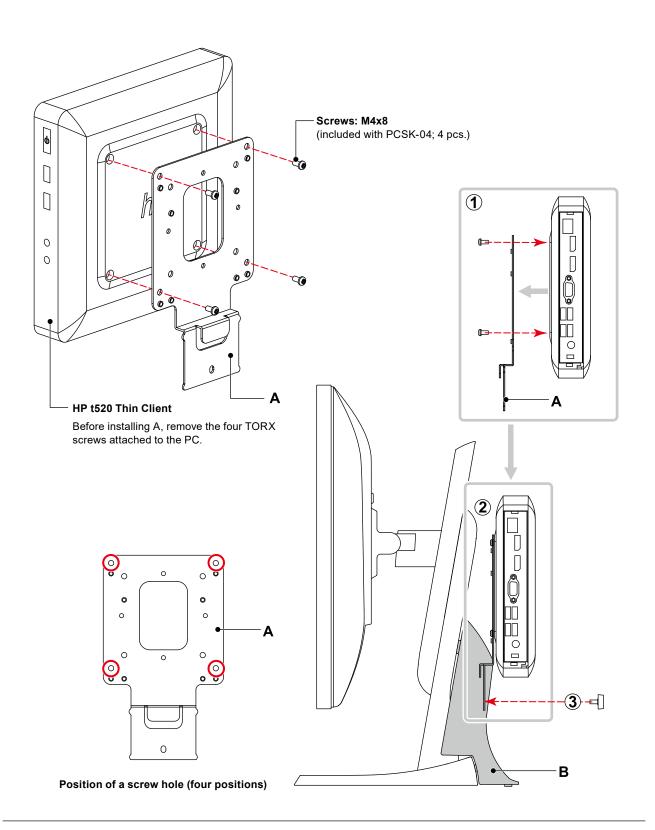


HP t310 Zero Client

Parts required

- F7X24AA (Optional mounting bracket for HP)
- Screws (included with F7X24AA; 4 pcs.)

Tools required

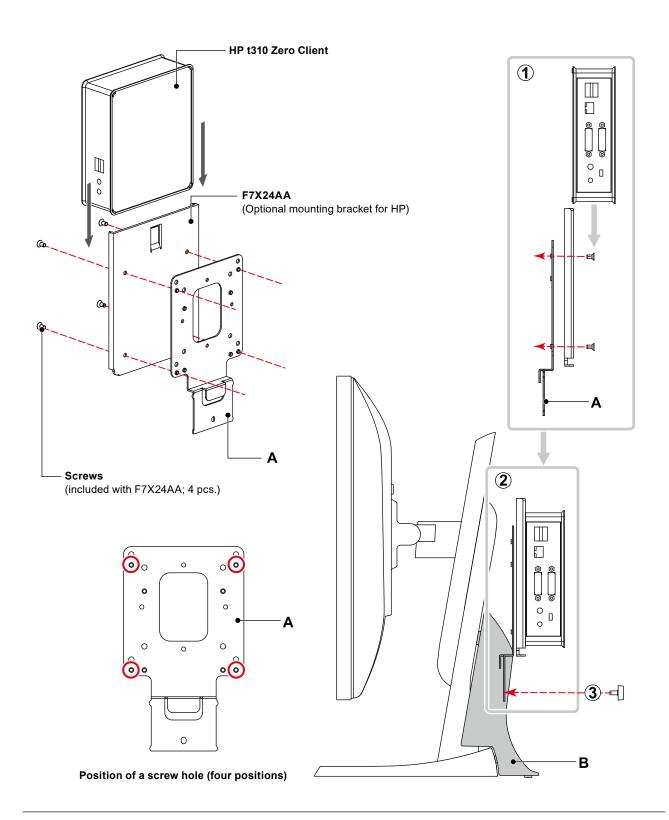


HP Z2 Mini G3 Workstation / G4 Workstation

Parts required

• Screws: M4x8 (included with PCSK-04; 4 pcs.)

Tools required

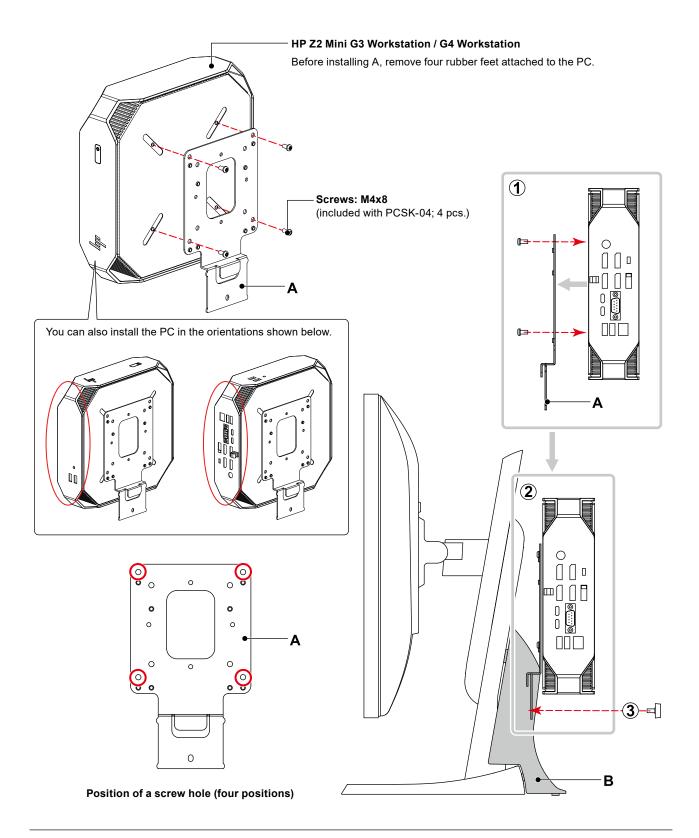


HP EliteDesk800 G3 DM

Parts required

• Screws: M4x8 (included with PCSK-04; 4 pcs.)

Tools required

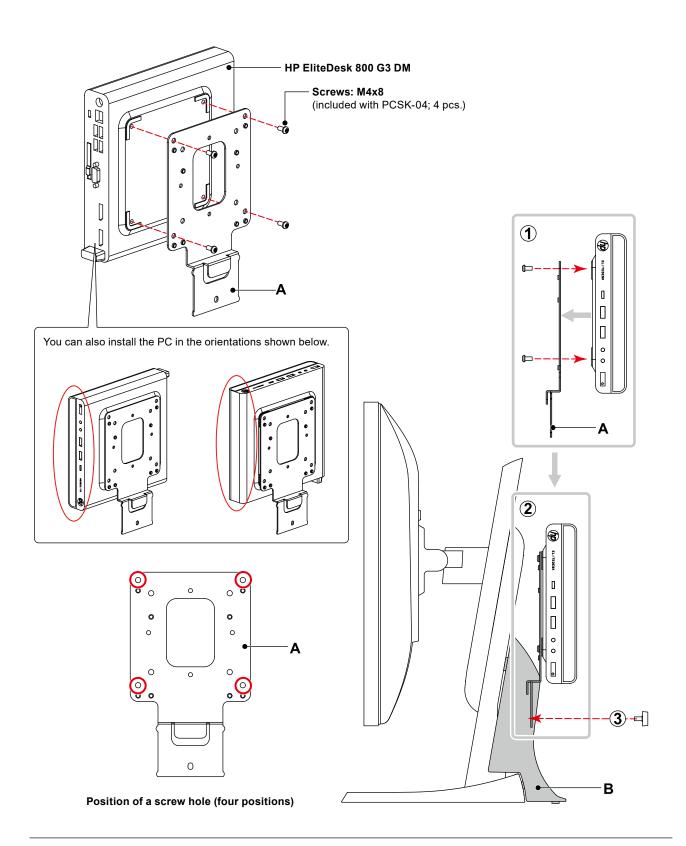


HP Elite Slice

Parts required

- X8U74AA (Optional mounting bracket for HP)
- Screws: M4x8 (included with PCSK-04; 4 pcs.)

Tools required

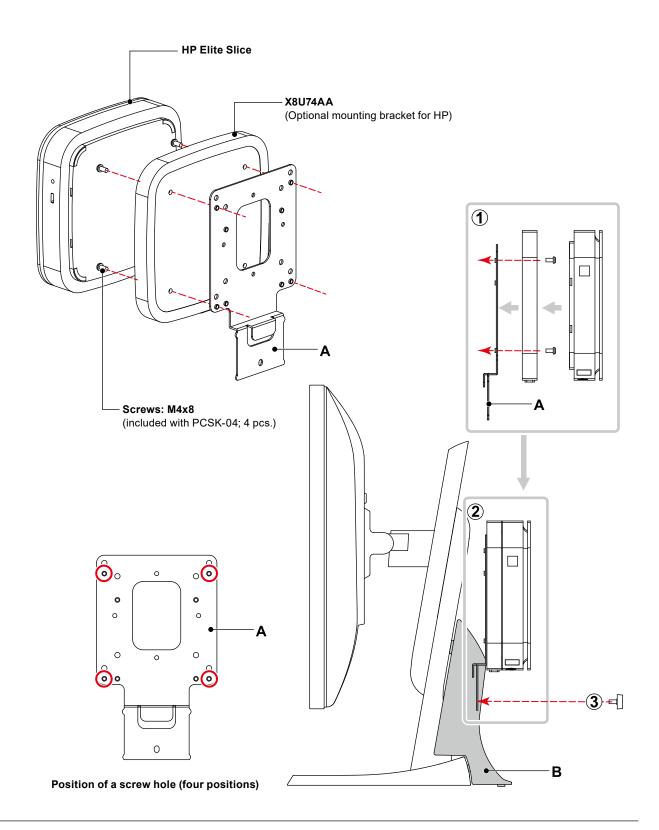


HP t310 G2 Zero Client

Parts required

• Screws: M4x8 (included with PCSK-04; 4 pcs.)

Tools required

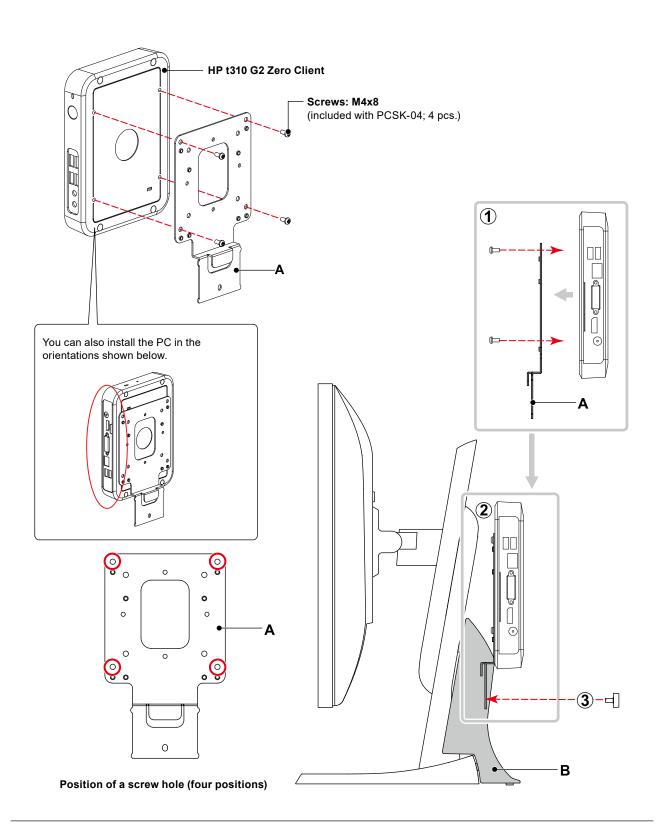



HP t530 Thin Client


Parts required


- EM870AA (Optional HP Quick Release Attachment)
 - Quick Release Attachment (2 types)
 - Screws : M4x12 (4 pcs.)
 - Spacer with a thickness of 2 mm
- Screws: M4x8 (included with PCSK-04; 4 pcs.)

Tools required

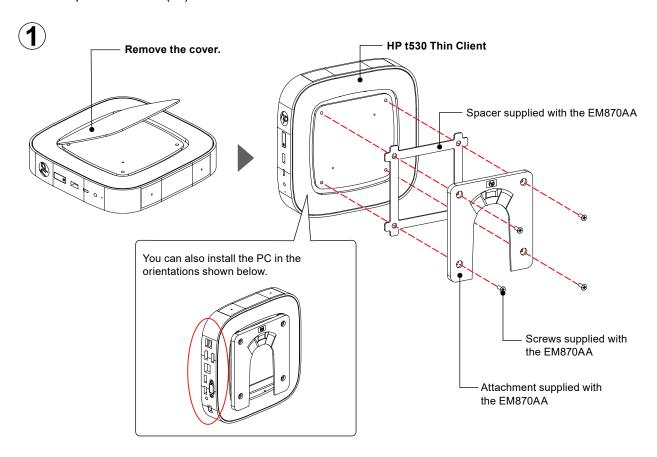

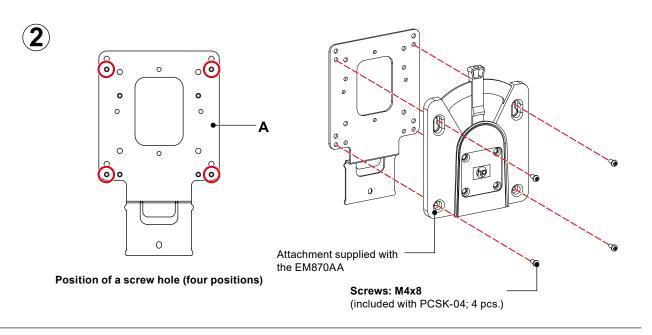

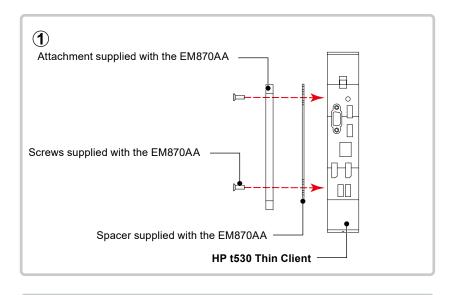

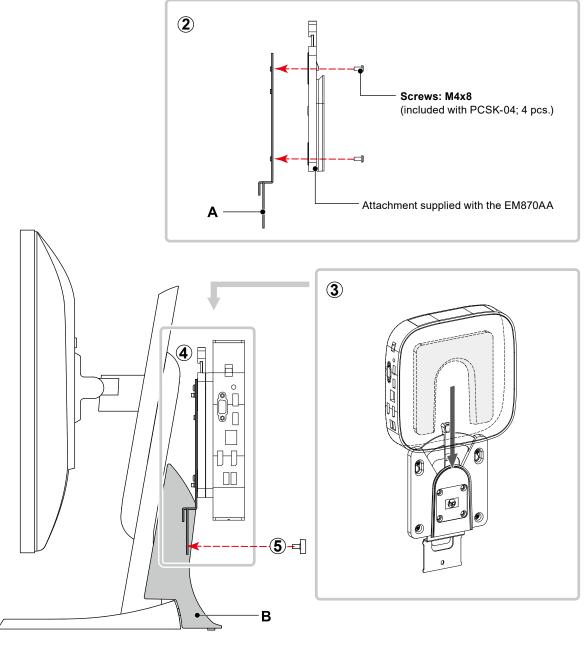


Dell Wyse 3010TC / T10 / 5030PCoIP / P25

Parts required

- Mounting bracket (included with Wyse 3010TC / T10 / 5030PCoIP / P25)
- Screws: M4x8 (included with PCSK-04; 4 pcs.)

Tools required

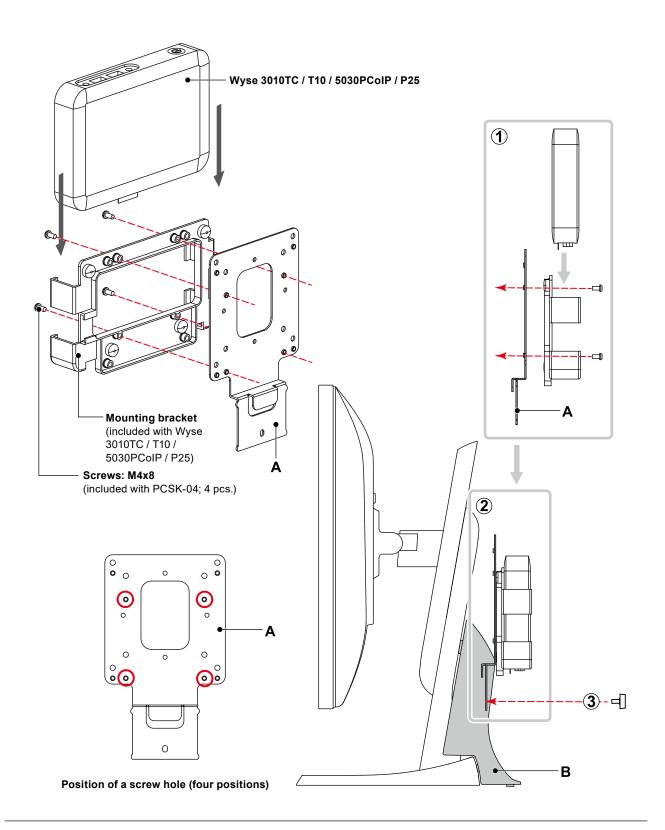


Dell Wyse 5010TC / D10D / D10DP

Parts required

• Screws: M4x8 (included with PCSK-04; 4 pcs.)

Tools required

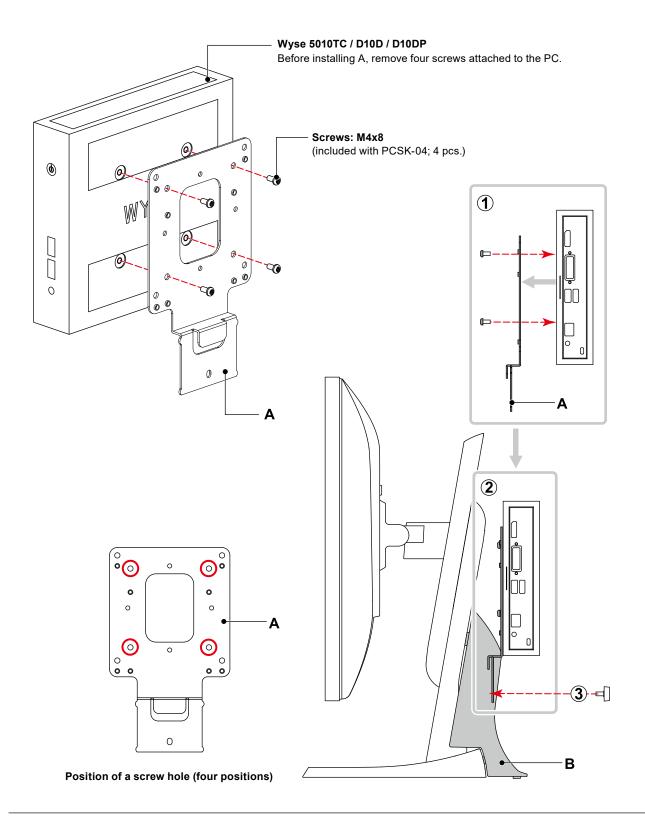


GIGABYTE GB-BKi7HT2-7500 / GB-BKi7HT-7500

Parts required

- Mounting bracket (included with GB-BKi7HT2-7500 / GB-BKi7HT-7500)
- Screws (included with GB-BKi7HT2-7500 / GB-BKi7HT-7500; 2 pcs.)
- Screws: M4x8 (included with PCSK-04; 4 pcs.)

Tools required

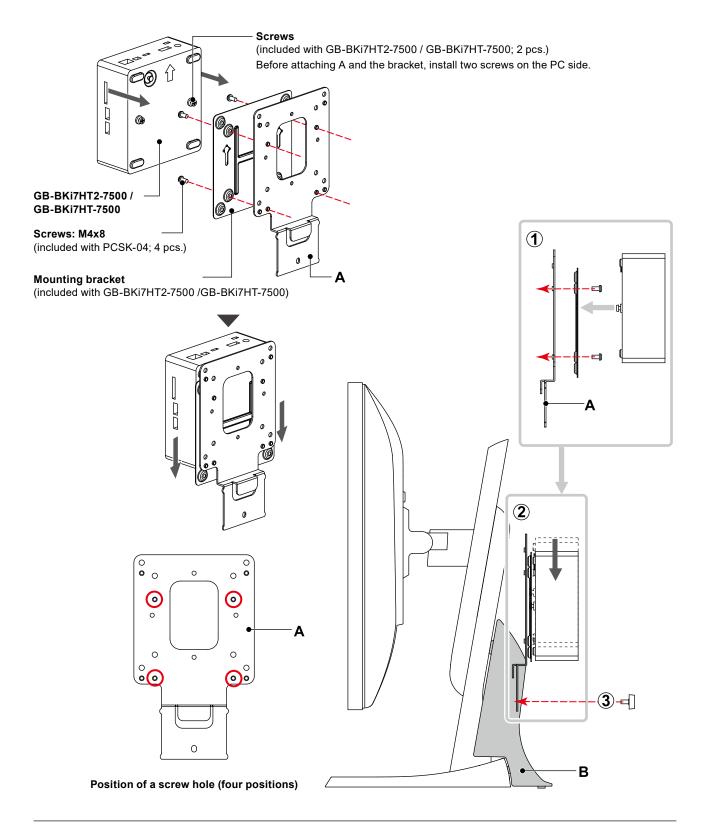


Lenovo ThinkStation P320 Tiny

Parts required

- ThinkCentre Tiny VESA Mount II 4XF0N03161 (Optional mounting bracket for ThinkStation)
- Screws (included with 4XF0N03161: 2 types; total of 6 pcs.)

Tools required

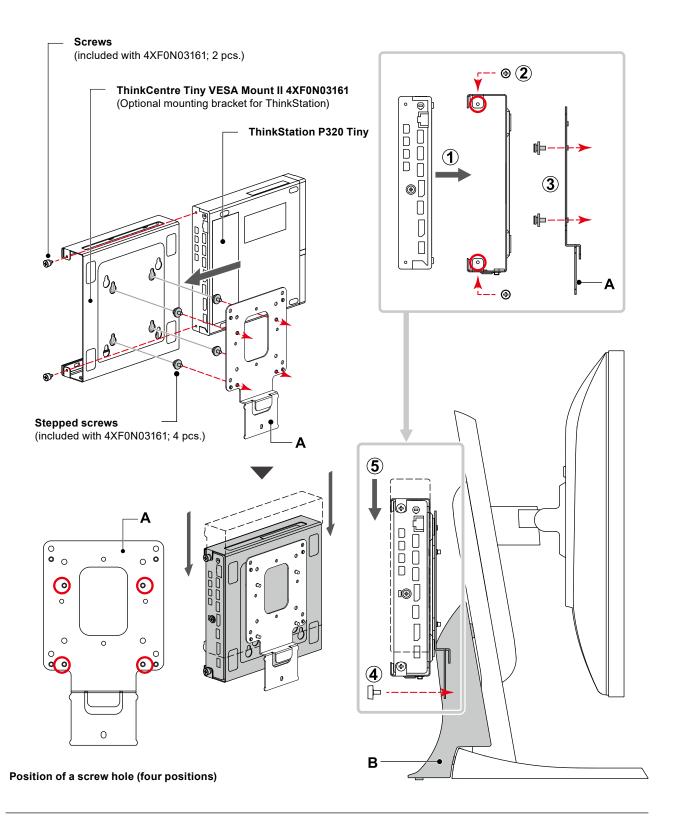



FUJITSU FUTRO S740

Parts required


- Mounting bracket (included with FUTRO S740)
- Screws (included with FUTRO S740: 2 types; total of 8 pcs.)

Tools required

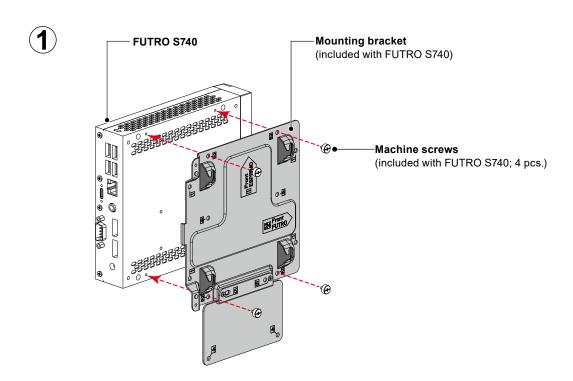


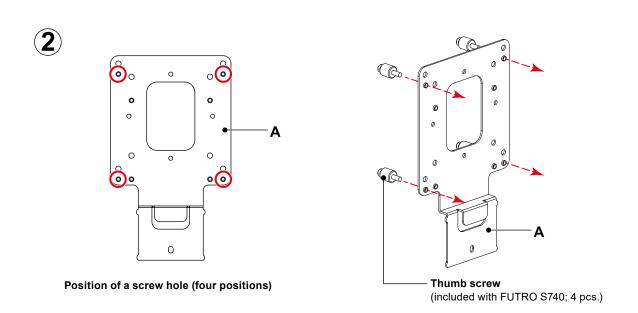



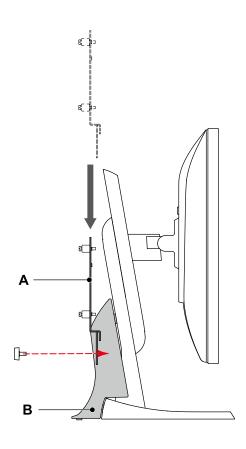



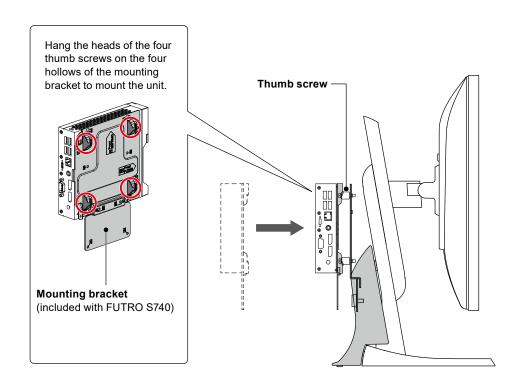

EIZO DuraVision DX0211-IP


Note

• Applies to products with Ver.5.2 of the software or newer versions.

Parts required

• Screws (included with DX0211-IP; 2 pcs.)

Tools required

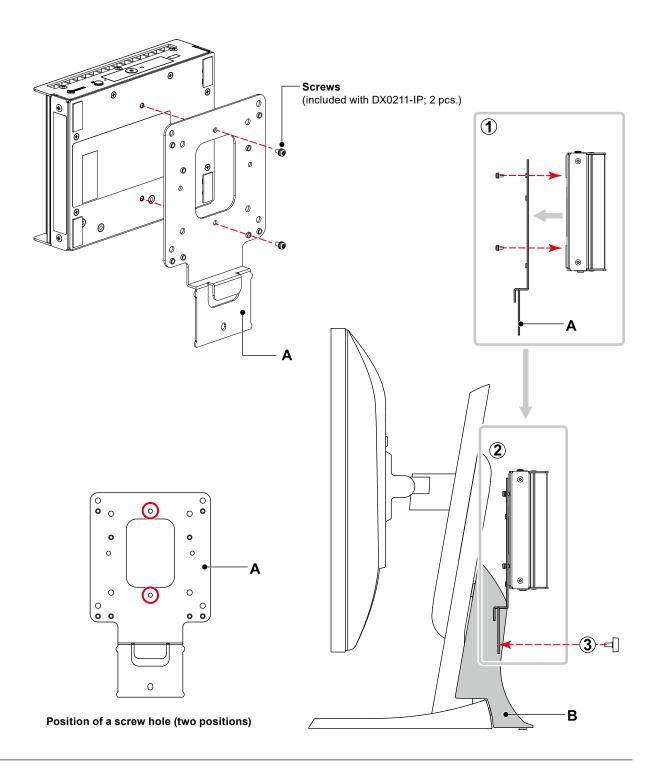

EIZO DuraVision EVS1VX / EVS1VS

Parts required

• Screws (included with EVS1VX / EVS1VS; 2 pcs.)

Tools required

