

User's Manual

G-Ignition™

Important

Please read this User's Manual carefully to familiarize yourself with safe and effective usage.

-
- The latest software and User's Manual are available for download from our web site:

<http://www.eizoglobal.com>



No part of this manual may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, or otherwise, without the prior written permission of EIZO Corporation. EIZO Corporation is under no obligation to hold any submitted material or information confidential unless prior arrangements are made pursuant to EIZO Corporation's receipt of said information. Although every effort has been made to ensure that this manual provides up-to-date information, please note that EIZO monitor specifications are subject to change without notice.

CONTENTS

CONTENTS	3	Chapter 7 Hot Key	31
Preparation Part	4	7-1. Assigning Hot Keys	32
Chapter 1 Introduction	5	Chapter 8 POP-UP Transfer	33
1-1. Features	5	Chapter 9 Troubleshooting	35
1-2. System Requirements	6	Appendix	36
Chapter 2 Setup	7	Glossary	37
2-1. Installing the Software	7	Trademarks	38
2-2. Icon Display	8		
2-3. Start and Exit.....	8		
● Exiting G-Ignition	8		
● Starting G-Ignition.....	8		
2-4. Uninstalling the Software	9		
● Windows 10.....	9		
● Windows 8.1	9		
● Windows 7.....	9		
Usage Part	10		
Chapter 3 Software Features Overview	11		
3-1. Displaying/Switching the Setting Window.....	13		
3-2. Exiting the Setting Window	13		
3-3. Displaying the Version Information.....	14		
Chapter 4 Color Adjustment	15		
4-1. Making Color Adjustments	16		
4-2. Exporting Color Adjustment Data to a PC.....	17		
4-3. Importing the Existing Color Adjustment Data.....	18		
Chapter 5 Use of G-Ignition Drive	20		
5-1. Registering with G-Ignition Drive	21		
● New Registration	21		
● Changing Registration Information	22		
5-2. Logging In/Out	23		
● Login.....	23		
● Logout	23		
5-3. Uploading Color Adjustment Data	24		
● Viewing the List of Uploaded Data	25		
● Deleting Uploaded Data.....	25		
5-4. Importing Color Adjustment Data.....	26		
5-5. Tweeting Imported/Uploaded Information	28		
Chapter 6 Auto Color	29		
6-1. Setting the Default Color Mode.....	30		
6-2. Associating a Color Mode with a Specific Application	30		

Preparation Part

Chapter 1 Introduction

G-Ignition is software for adjusting a monitor from a computer through a USB interface using a mouse and keyboard.

1-1. Features

● Color Adjustment

The monitor's color adjustment function can be controlled from the software.

- **Saving Color Adjustment Data as a File**
Adjustment values can be saved as a file and imported into other PCs.
- **Cloud Function/Link with Twitter**
You can upload color adjustment data to G-Ignition Drive to share it with other users, and import data that other users uploaded to G-Ignition Drive. Furthermore, you can exchange information with other users via a link with Twitter.
- **Supporting Multiple Monitor Configurations**
In a multiple monitor configuration, batch color adjustment is possible if the monitors are the same model.

● Auto Color Function

By registering color modes for individual applications, the color mode of the monitor can be switched automatically for each application.

Note: Example of use

- If a color mode is adjusted in order to be dedicated to a specific application, and the adjusted color mode is associated with the application using the Auto Color function, the dedicated monitor settings are selected at the same time the application is started up.
-

● Setting Hot Keys

By assigning functions of the monitor to keys on the keyboard, the monitor can be operated from the keyboard. In a multiple monitor configuration, batch registration of hot keys is possible if the monitors are the same model.

● Auto-applied Color Profile

When G-Ignition is started, a color profile (temperature 6500 K, gamma 2.2) suitable for the monitor in use is automatically applied to the OS.

● POP-UP Transfer

The speed of the POP-UP (notification icon) transfer function of "G-Ignition Mobile" for smartphones can be accelerated.

Note

- Refer to our web site for details about G-Ignition Mobile.
<http://gaming.eizo.com>
-

1-2. System Requirements

The G-Ignition software operates under the systems shown below.

OS	Microsoft Windows 10 (32 bit edition or 64 bit edition) Microsoft Windows 8.1 Update 1 (32 bit edition or 64 bit edition) Microsoft Windows 7 Service Pack 1 (32 bit edition or 64 bit edition)
Computer	Built-in USB
Monitor	EIZO FORIS series*1
Video card	OpenGL 3.0 or higher operating conditions must be satisfied

*1 For the latest information about the compatible monitors, refer to our web site.
<http://gaming.eizo.com>

Attention


- The following software cannot be used with G-Ignition at the same time. If any of the following software is installed, they will be uninstalled when G-Ignition is installed.
 - ScreenManager Pro
 - ScreenManager Pro for Gaming
 - ScreenManager Pro for LCD
 - ScreenManager Pro for LCD (DDC/CI)
 - ScreenManager Pro for Medical
 - EIZO EcoView NET Client
 - An Internet environment is required to use Help and G-Ignition Drive.
-

Chapter 2 Setup

2-1. Installing the Software

1. Connect the USB cable.

Connect the USB downstream port of the computer and the USB upstream port of the monitor with the USB cable.

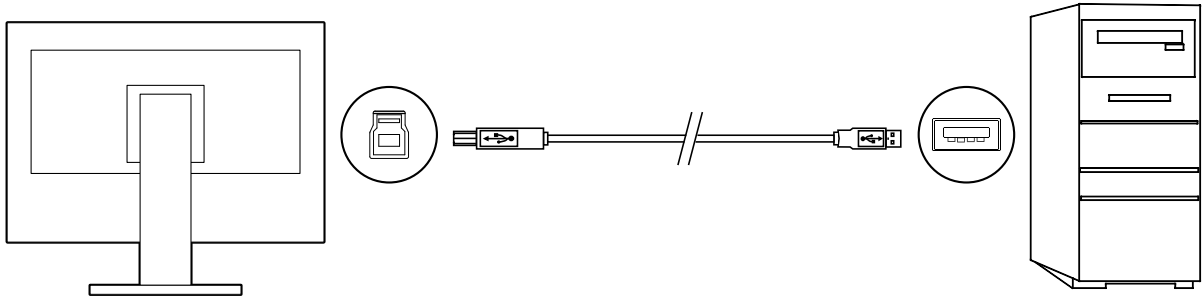

Note

- For details on setting up the monitor, see the user's manual for the monitor.

2. After unzipping the downloaded file, double-click “Launcher.exe”.


A Menu screen opens automatically. Click “G-Ignition”.

3. Install the software.

Clicking “Install” starts the installer.

Note


- The “User Account Control” dialog box may appear. Click “Yes” to open the menu.

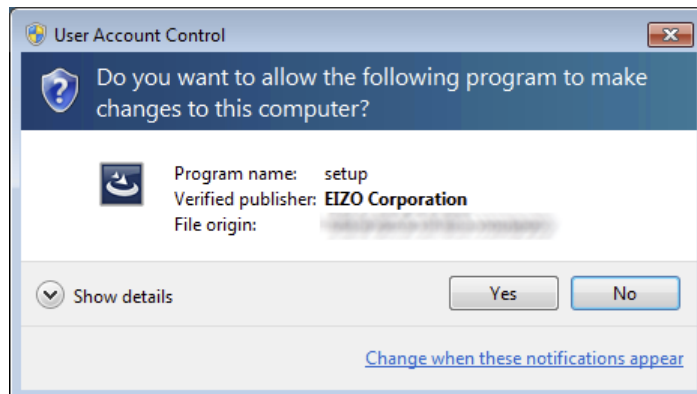

4. Follow the instructions to install the software.



When installation is completed, G-Ignition starts and the icon appears in the Windows notification area.

When G-Ignition is started, a color profile (temperature 6500 K, gamma 2.2) suitable for the monitor in use is automatically applied.



2-2. Icon Display

While G-Ignition is running, an icon is displayed in the notification area. The appearance of the icon changes according to the operating status.

	G-Ignition is active.
	G-Ignition is not active. The software cannot recognize the monitor. For details, refer to “Chapter 9 Troubleshooting” (page 35).

2-3. Start and Exit

After installed, G-Ignition resides in the notification area. This software is constantly active while the PC is being used, and therefore no special operation is required to start the software. It needs to be started only when the G-Ignition icon is not in the notification area.

● Exiting G-Ignition

To exit (release the residence of) G-Ignition, right-click the G-Ignition icon in the notification area, and select “Exit”.

Note

- G-Ignition cannot be exited when the setting window is displayed.
- If you reboot the PC after exiting G-Ignition, it starts automatically when the PC starts up.


● Starting G-Ignition

To restart G-Ignition that has been exited, perform the following operation. G-Ignition starts, and the G-Ignition icon is displayed in the notification area.

Windows 10:

Click “Start” - “All apps” - “EIZO” - “G-Ignition Ver. x.x.x”.

Windows 8.1:

Click  on the “Start” screen, then select “G-Ignition Ver. x.x.x” on the “Apps” screen.

Windows 7:

Click “Start” - “All Programs” - “EIZO” - “G-Ignition” - “G-Ignition Ver. x.x.x”.

2-4. Uninstalling the Software


● Windows 10

Procedure

1. Select “Start” - “Settings” - “System” - “Apps & features”.
2. Select “G-Ignition” from the list, then click “Uninstall”.
3. Follow the on-screen instructions to uninstall the software.

● Windows 8.1

Procedure

1. Click  at the bottom of the “Start” screen.
The “Apps” screen appears.
2. Select “Windows System” - “Control Panel” - “Programs” - “Uninstall a program”.
3. Select and double-click “G-Ignition” in the list.
4. Follow the on-screen instructions to uninstall the software.

● Windows 7

Procedure


1. Select “Start” - “Control Panel” - “Programs” - “Uninstall a program”.
2. Select “G-Ignition” from the list, then click “Uninstall”.
3. Follow the on-screen instructions to uninstall the software.

Usage Part

Chapter 3 Software Features Overview


G-Ignition enables you to make various settings and adjustments for the monitor from the following three setting windows.

“Color Configuration” screen

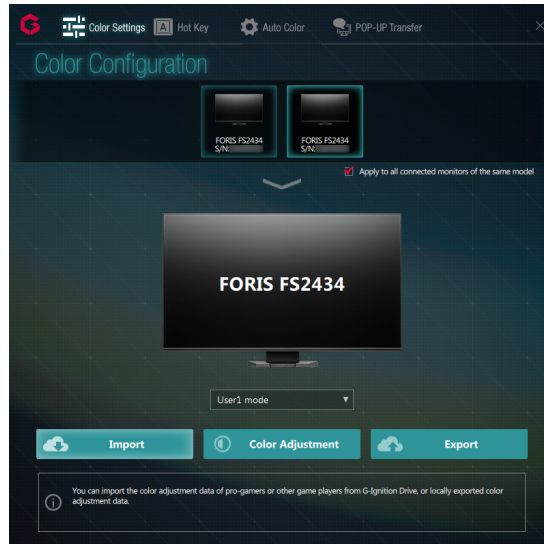

- Make color adjustments for the monitor (See “Chapter 4 Color Adjustment” (page 15)).
- Save the color adjustment data to a file so that it can be imported into other PCs and shared via G-Ignition Drive (See “Chapter 4 Color Adjustment” (page 15)).
- Exchange your information with other users in Twitter (See “Chapter 5 Use of G-Ignition Drive” (page 20)).

“Auto Color” screen

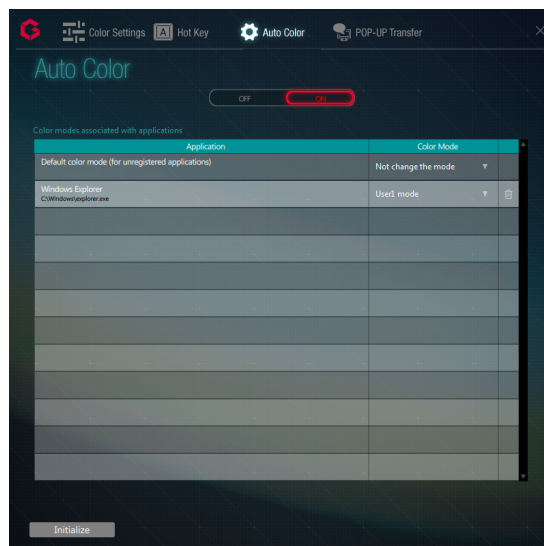


- By registering color modes for individual applications, the color mode of the monitor can be switched automatically for each application (See “Chapter 6 Auto Color” (page 29)).

“Hot Keys” screen



- By assigning functions of the monitor to keys on the keyboard, the monitor can be operated from the keyboard (See “Chapter 7 Hot Key” (page 31)).

“POP-UP Transfer” screen

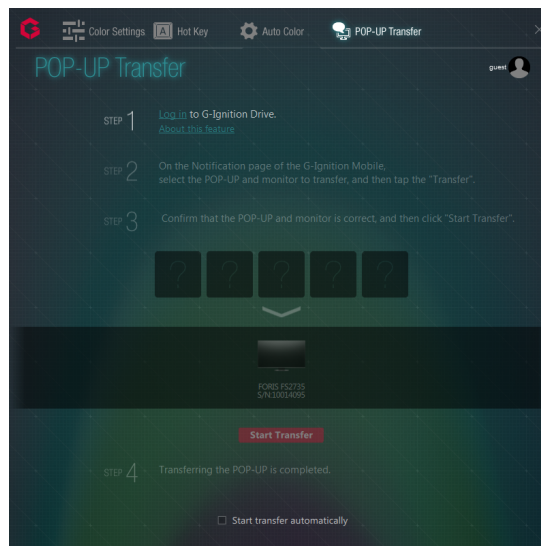

- The speed of the POP-UP (notification icon) transfer function of “G-Ignition Mobile” for smartphones can be accelerated. (See “Chapter 8 POP-UP Transfer” (page 33)).

3-1. Displaying/Switching the Setting Window

1. Right click the G-Ignition icon in the notification area, then select “Setting of G-Ignition” from the list.

The G-Ignition setting window appears.

Note


- The setting window can also be displayed by double clicking the G-Ignition icon in the notification area.
- If the G-Ignition icon is not found in the notification area, see “2-3. Start and Exit” (page 8) to start up the software. The G-Ignition icon is displayed in the notification area.

Attention

- Do not plug or unplug the USB cable when the setting window is displayed. Doing so may cause the window to close without the settings being applied.
- The setting window cannot be switched when “Color Configuration / Import Data” screen, “Color Configuration / Adjust” screen, or “Color Configuration / Export Data” screen is displayed. In this case, return to “Color Configuration” screen to switch the setting window.

2. From the “Setting window switch menu”, select the setting window to display.

The setting window switches.

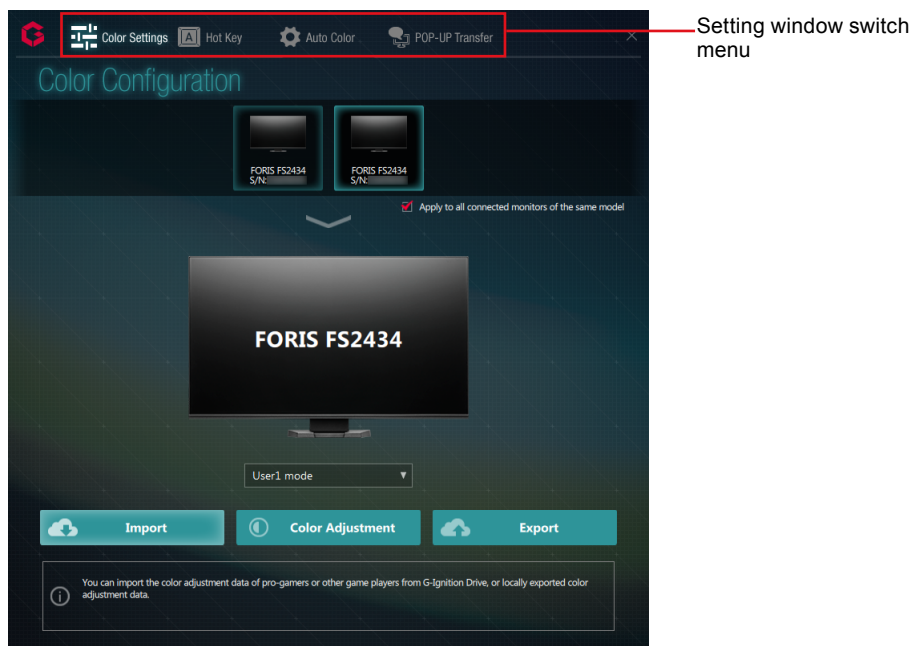

3-2. Exiting the Setting Window


Click  on the upper right of each setting window.

3-3. Displaying the Version Information

Right-click the G-Ignition icon in the notification area, then select “About G-Ignition” from the list.

Note

- Clicking the URL in the version information displays the open source license information that G-Ignition uses.

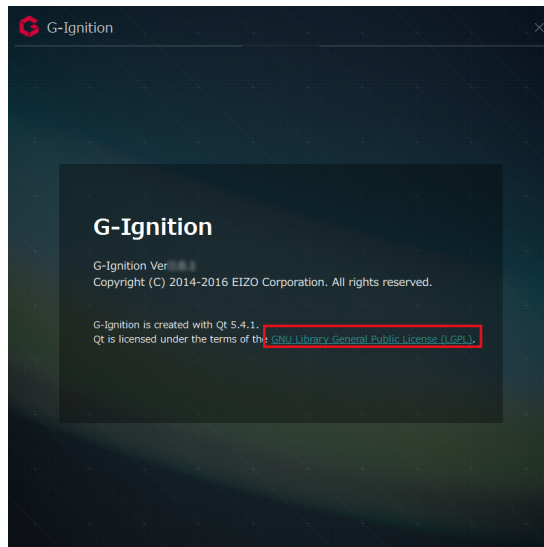

Chapter 4 Color Adjustment

Individual color adjustments can be made for each color mode. Color adjustment data can be imported and exported.

Attention

- Color adjustment data can only be imported and exported in User mode.

“Color Configuration” screen



No.	Name	Description
1	Monitor menu	When multiple monitors are connected, select a monitor whose color adjustments you want to make (See “4-1. Making Color Adjustments” (page 16)).
2	Apply to all connected monitors of the same model	The adjustment results can be applied to all currently connected monitors of the same model (See “4-1. Making Color Adjustments” (page 16)).
3	Monitor View	Displays the model of the monitor you have selected.
4	Mode Selection pull-down menu	Select a color mode to be applied to the monitor you have selected (See “4-1. Making Color Adjustments” (page 16)).
5	Color Adjustment	Displays the screen used to adjust color items (See “4-1. Making Color Adjustments” (page 16)).
6	Export	For exporting the set color adjustment information (See “4-2. Exporting Color Adjustment Data to a PC” (page 17), “5-3. Uploading Color Adjustment Data” (page 24)).
7	Import	For importing color adjustment information (See “4-3. Importing the Existing Color Adjustment Data” (page 18), “5-4. Importing Color Adjustment Data” (page 26)).
8	Information View	Displays information relevant to color adjustments. When you set each adjustment item, tips for setting the item are displayed.

Note

- The color mode that was last adjusted is normally applied to the monitor.
- After color adjustment has been completed, the color mode can be switched automatically depending on the application used (See “Chapter 6 Auto Color” (page 29)).

4-1. Making Color Adjustments

1. In a multiple monitor configuration, select a target monitor to be adjusted from the menu.
2. If you want to apply the same settings to all currently connected monitors of the same model, select the “Apply to all connected monitors of the same model” check box.
3. From the pull-down menu, select the target color mode of color adjustment.
Color modes supported by the selected model are displayed. The displayed color modes vary depending on the model.
4. Click “Color Adjustment”.

“Color Configuration / Adjust” screen is displayed.


5. Adjust each parameter.

Click the numerical value box of each parameter to enter a numerical value, or click the bar to adjust the value.

Parameters that can be directly adjusted on the monitor, including “Brightness” and “Contrast”, can also be adjusted from this screen. The items that can be adjusted on this screen are the same as those that can be adjusted using the monitor’s color adjustment function. (For information about color adjustment items of each monitor model, see the user’s manual for the monitor.)



Note

- The Information View section displays tips for the adjustment item over which the mouse cursor is placed.
- Click  on the upper part of “Color Configuration / Adjust” screen. Your browser starts and the EIZO web site opens.
- Clicking “Initialization” returns the settings for all items of the color mode that is being adjusted to the default settings.
- Clicking “Cancel” returns the display to the state it was in before the settings of the items have been changed. The display returns to “Color Configuration” screen.

6. Click “Apply”.

The adjusted values are applied, and the display returns to “Color Configuration” screen.

4-2. Exporting Color Adjustment Data to a PC

The set color adjustment data can be exported as a file.

1. In “Color Configuration” screen, select a target monitor and a color mode to apply.


See “4-1. Making Color Adjustments” (page 16).

Attention

- Select a color mode from User modes. Color adjustment data can only be exported in User mode.
-


2. Click “Export”.

“Color Configuration / Export Data” screen is displayed.

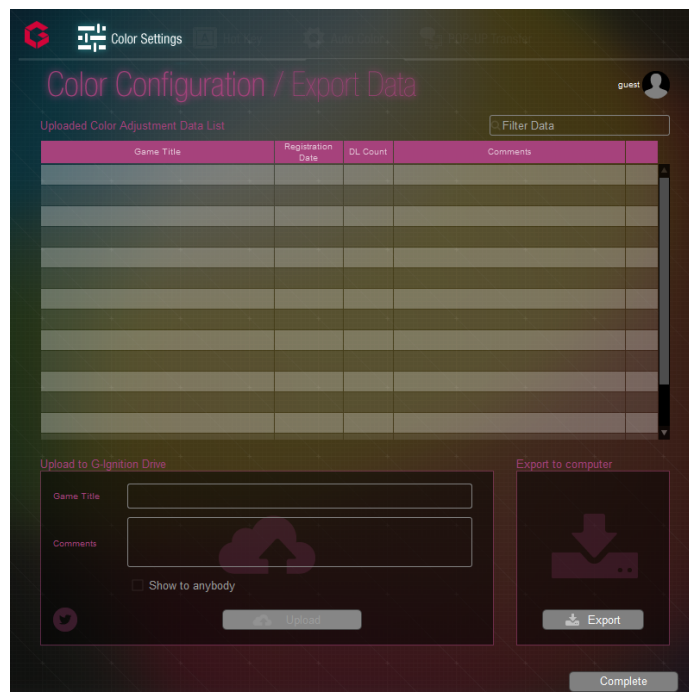

3. Click “Export” from “Export to computer”.

4. Specify the filename, then click “Save”.

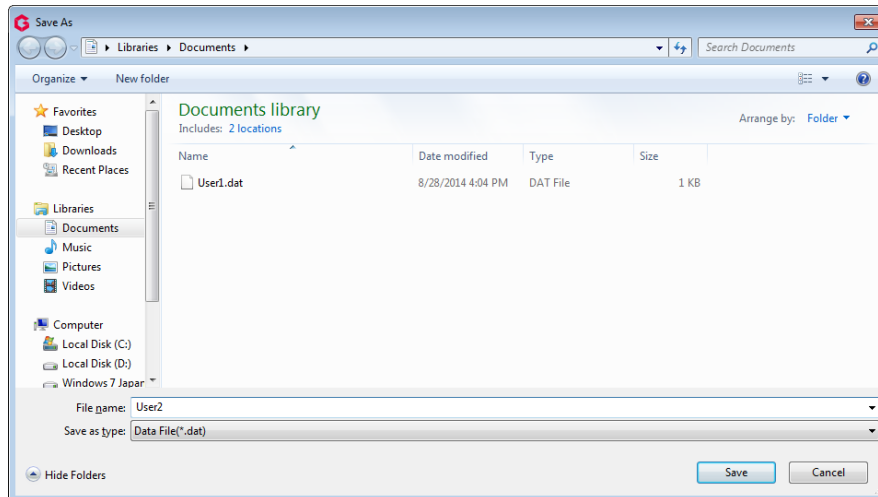

File export is completed.

5. Click “Complete”.

The display returns to “Color Configuration” screen.

Note

- The color adjustment data is saved as a binary file (.dat).
 - For information on how to export color adjustment data to G-Ignition Drive, see [“Chapter 5 Use of G-Ignition Drive” \(page 20\)](#).
-

4-3. Importing the Existing Color Adjustment Data

Color adjustment data can be imported from a file on a PC. In a multiple monitor configuration, adjustment items can be applied collectively if the monitors are the same model.

Note

- Data exported from ScreenManager Pro for Gaming can also be imported to G-Ignition.
-

1. In “Color Configuration” screen, select a target monitor and a color mode to apply.

2. If you want to apply the same settings to all currently connected monitors of the same model, select the “Apply to all connected monitors of the same model” check box.

See [“4-1. Making Color Adjustments” \(page 16\)](#).

Attention

- Select a color mode from User modes. Color adjustment data can only be imported in User mode.
-

3. Click “Import”.

“Color Configuration / Import Data” screen is displayed.




4. Click “Import” from “Import from computer”.

Note

- For information on how to import color adjustment data from G-Ignition Drive, see “Chapter 5 Use of G-Ignition Drive” (page 20).

5. Select the file to be imported and click “Open”.

The file is imported and the color adjustment data is applied to the monitor.

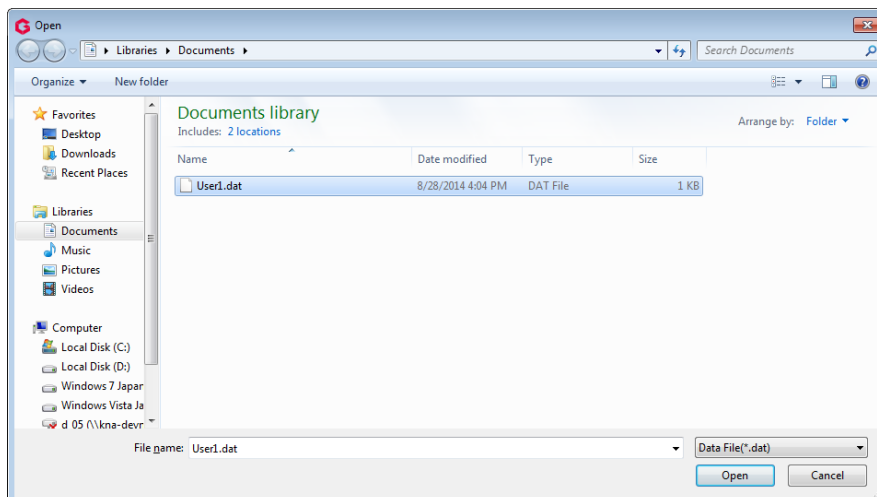

6. Click “Complete”.

The display returns to “Color Configuration” screen.


Chapter 5 Use of G-Ignition Drive

Use of G-Ignition Drive enables the following operations:

- **Uploading color adjustment data**
Color adjustment data can be uploaded after color adjustments have been made.
- **Importing color adjustment data**
Color adjustment data uploaded to G-Ignition Drive by professional gamers or other game players can be imported.
- **Exchanging information via Twitter**
Information about uploaded or imported color adjustment data can be shared with other users by tweeting it in Twitter.

You need to register and log in to G-Ignition Drive to upload your data to G-Ignition Drive.

The following chart shows the flow of procedures required to upload and import data.

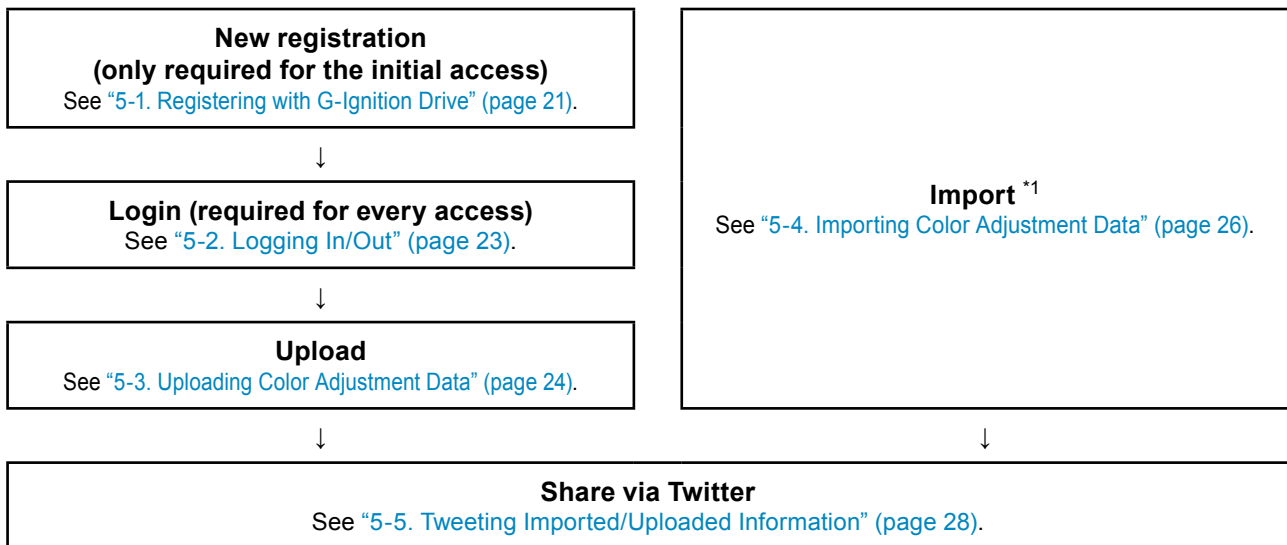

*1 If you want the “Uploaded Color Adjustment Data List” to only display the data you have uploaded, you must log in to G-Ignition Drive.

Attention

- Color adjustment data can only be imported and exported in User mode.

Note

- You will also need to register with and log in to G-Ignition Drive when you perform “Chapter 8 POP-UP Transfer” (page 33).

5-1. Registering with G-Ignition Drive


● New Registration

Procedure


1. In “Color Configuration” screen, click “Import” or “Export”.
“Color Configuration / Import” screen or “Color Configuration / Export” screen is displayed.

Note

- Registration can also be carried out in “POP-UP Transfer” screen (page 33).

2. Click  on the upper right of the screen, and select “New Registration” from the menu that appears.

Example: “Color Configuration / Import” (Import screen)

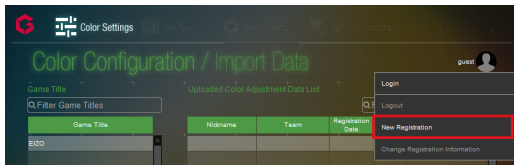

The “New Registration” screen is displayed.

3. Type in the e-mail address, nickname, and password, then click “Register”.
A “Full registration request” e-mail message is sent to the registered e-mail address.

Requirements that must be satisfied when entering each item are as follows:

Email Address	<ul style="list-style-type: none">• 6 to 256 alphanumeric and symbol characters in e-mail address format.• The address entered must not be the same as any already registered in G-Ignition Drive.
Nickname	<ul style="list-style-type: none">• Any 1 to 48 characters.• The address entered must not be the same as any already registered in G-Ignition Drive.
Password	<ul style="list-style-type: none">• Any 6 to 48 alphanumeric characters.

Attention

- Write down the e-mail address and password you entered as a safeguard. If you forget the e-mail address and password, you will not be able to log in next time.
- By completing user registration, you agree to the privacy policy defined by EIZO. Click “Privacy Policy” on the lower part of the screen, check the content and register.


4. Click “Close”.
5. Confirm that an interim registration notification e-mail is received at the entered e-mail address.
6. Access the URL for formal registration that is specified in the e-mail text.
The formal registration screen appears.

Attention


- When 24 hours has elapsed after the interim registration was completed, the URL for formal registration becomes invalid.
 - If you have not received the e-mail from G-Ignition, change your e-mail settings so that you can receive e-mails from “useradmin@g-ignition.com”.
-

● Changing Registration Information

Procedure

1. On the upper right of “Color Configuration / Import” screen or “Color Configuration / Export” screen, click  to display the menu, then select “Change Registration Information” from the menu.

Enter new information for items you want to change.

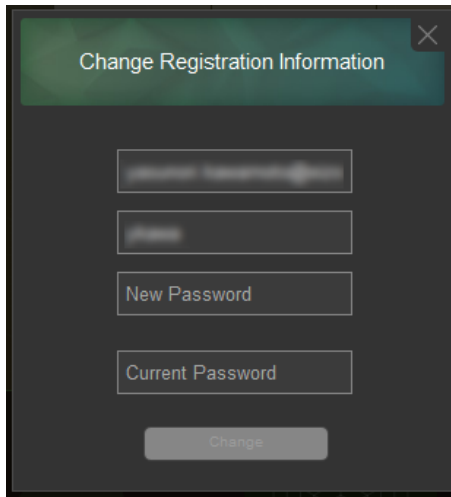

Note

- The information can also be changed in ““POP-UP Transfer” screen” (page 33).
 - To “Current Password:”, type in the password before change.
 - If you click “Change” without filling in “New Email Address”, “New Nickname”, and “New Password”, these items will not be changed.
 - If you have forgotten the current password, type in a temporary password in “Current Password:”.
-
2. Click “Change”.
A message that says that the changes made to the registration information have been accepted is displayed.
 3. Click “Close”.
 4. You will receive an e-mail message saying that the changes made to your registration information have been accepted.
 5. Access the URL for formal registration that is specified in the e-mail text.
The formal registration screen appears.


Attention


- When 24 hours has elapsed after the interim registration was completed, the URL for formal registration becomes invalid.
-

5-2. Logging In/Out

● Login

Procedure

1. On the upper right of “Color Configuration / Import” screen or “Color Configuration / Export” screen, click  to display the menu, then select “Login” from the menu.
2. Type in the e-mail address and password you have registered, then click “Login”.

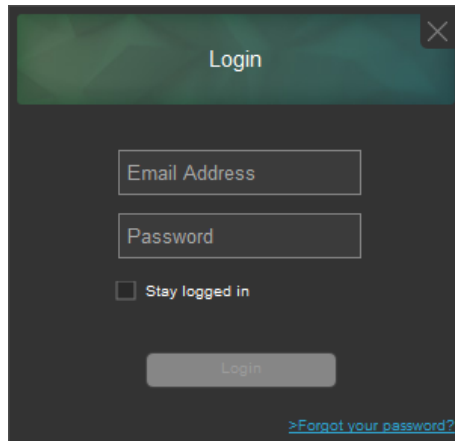


The display returns to “Color Configuration / Import” screen or “Color Configuration / Export” screen.

Note

- It is also possible to log in from ““POP-UP Transfer” screen” (page 33).
- Selecting the “Stay logged in” check box in the “Login” screen keeps the logged-in state while G-Ignition is active. This eliminates the need to carry out the login procedure.
- If you have forgotten the password, take the following steps to reset the password.
 1. Click “Forgot your password?”.
 2. In the “Issue Temporary Password” screen, type in the e-mail address that you entered during the registration process, then click “Send”.
 3. When you receive an e-mail message that contains an interim password, access the URL for formal registration that is specified in the e-mail text.
 4. Use the interim password to log in, and set a new password by changing the registered information. (See “Changing Registration Information” (page 22).)

● Logout

Procedure

1. On the upper right of “Color Configuration / Import” screen or “Color Configuration / Export” screen, click  to display the menu, then select “Logout” from the menu.

Note

- It is also possible to log out from ““POP-UP Transfer” screen” (page 33).

5-3. Uploading Color Adjustment Data

Attention


- It is necessary to log in to G-Ignition Drive to upload color adjustment data, or display or delete uploaded data. It is also necessary to register with G-Ignition Drive before logging in to it for the first time (See “5-1. Registering with G-Ignition Drive” (page 21), “5-2. Logging In/Out” (page 23)).

1. In “Color Configuration” screen, select the target monitor of color adjustment and a color mode.

See “4-1. Making Color Adjustments” (page 16).

2. Click “Export”.

“Color Configuration / Export Data” screen is displayed.

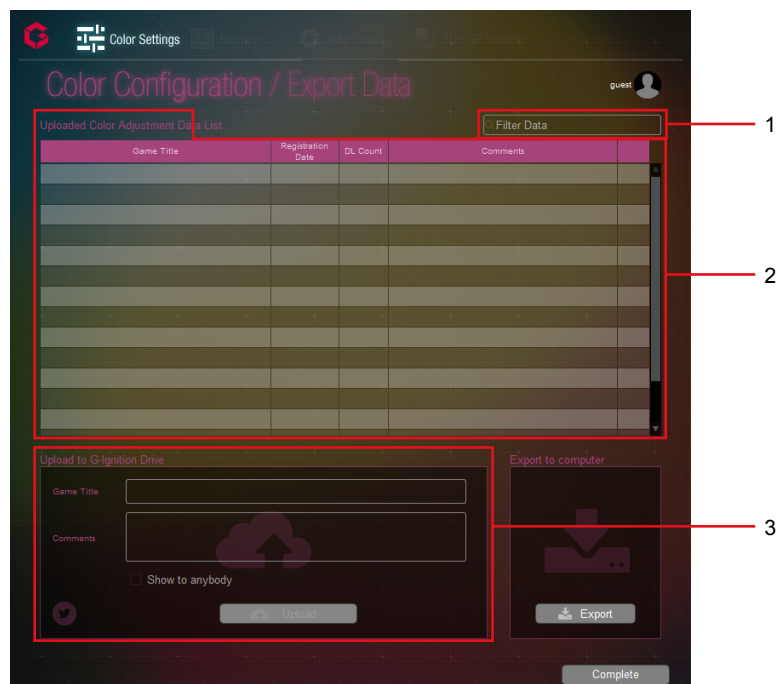

No.	Name	Description
1	“Filter Data” entry box	Use this box to narrow down the uploaded data to be displayed.
2	Uploaded Color Adjustment Data List *1	Displays the color adjustment data you have uploaded and the information about the data.
3	“Upload to G-Ignition Drive” area	Specify the information about the color adjustment data you want to upload, and the upload conditions.

*1 The “Uploaded Color Adjustment Data List” is displayed after you have logged in.

3. Log in to G-Ignition Drive.

See “5-2. Logging In/Out” (page 23).

4. From “Game Title” in the “Upload to G-Ignition Drive” area, select and click a target game.

Alternatively, enter the title of the game you want to select.

5. If you want to add a comment, fill in the “Comments” box.

6. To ensure that only you can download the data, clear the “Show to anybody” check box.

7. Click “Upload”.

Then you can tweet information about the uploaded data in Twitter.

See [“5-5. Tweeting Imported/Uploaded Information” \(page 28\)](#).

● Viewing the List of Uploaded Data


In the logged-in state, the data you have uploaded is displayed in the “Uploaded Color Adjustment Data List”.

Note

- If you want to narrow down the data to display, enter a text string used as the narrow-down condition in the “Filter Data” entry box. Only the data whose “Game Title”, “Registration Date”, or “Comments” matches the entered string is displayed in the list.
 - The data is displayed in order of most recent registration date. To change the display order, click the “Game Title”, “Registration Date”, “DL Count”, or “Comments” item that you want to use as the sort key.
 - Each time you click the item, the display order toggles between ascending and descending.
-

● Deleting Uploaded Data

Procedure

1. From the data displayed in the “Uploaded Color Adjustment Data List”, select the data you want to delete, and click  on the far right.
2. A confirmation message is displayed. Click “Yes”.

5-4. Importing Color Adjustment Data

Attention


- To only view the data you have uploaded, you must log in to G-Ignition Drive. After logging in, enable “Only display the data you have uploaded” (See “5-2. Logging In/Out” (page 23)).

1. In “Color Configuration” screen, select the target monitor of color adjustment and a color mode.

See “4-1. Making Color Adjustments” (page 16).

2. Click “Import”.

“Color Configuration / Import Data” screen is displayed.

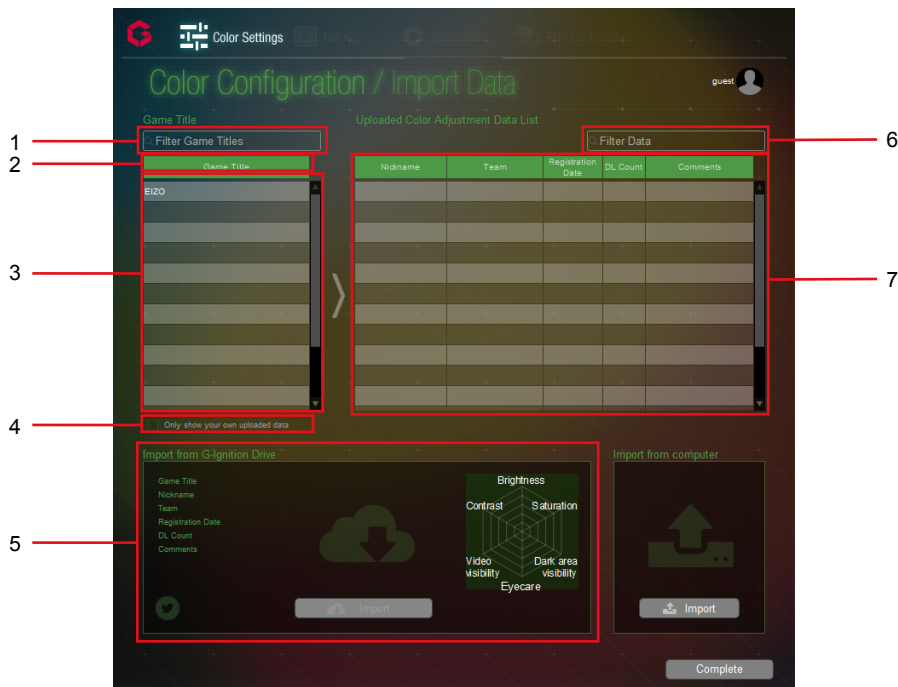

No.	Name	Description
1	“Filter Game Titles” entry box	Use this box to narrow down game titles to be displayed.
2	“Game Title” title bar	Use this title bar to switch the display order of game titles.
3	“Game Title” column	Lists the game titles of importable data.
4	Only show your own uploaded data	Select this check box when you want to view only the data you have uploaded.
5	“Import from G-Ignition Drive” area	Displays information about the selected color adjustment data. Clicking “Import” starts importing the data.
6	“Filter Data” entry box	Use this box to narrow down the data to be displayed.
7	Uploaded Color Adjustment Data List	Lists the importable data. “DL count” (the count of imports) and “Comments” are displayed as well as “Nickname”, “Team”, and “Registration Date”. Use this list for your reference when you select data to import.

Note

- For color adjustment data created by professional game teams supported by EIZO, the team names are displayed in the list.

3. From the games displayed in the “Game Title” column, select a desired game and click it.

The “Uploaded Color Adjustment Data List” displays the color adjustment data associated with the selected game.

Note

- If you want to narrow down the game titles to be displayed, enter the title of the desired game or part of that title in the “Filter Game Titles” entry box. This only displays games with titles that include the entered string.
 - The game titles are displayed in alphabetical (ascending) order. Left-clicking “Game Title” switches it to descending order.
 - Selecting the “Only show your own uploaded data” check box only displays the data you have uploaded.
-

4. From the “Uploaded Color Adjustment Data List”, select data you want to import.

Information about the selected data is displayed in the “Import from G-Ignition Drive” area.

The evaluation chart on the right shows the evaluation levels for “Brightness”, “Saturation”, “Dark area visibility”, “Eyecare”, “Video visibility”, and “Contrast” on the respective axes.

Note

- If you want to narrow down the data to display, enter a text string used as the narrow-down condition in the “Filter Data” entry box. Only the data whose “Nickname”, “Team”, “Registration Date”, or “Comments” matches the entered string is displayed in the list.
 - The data is displayed in order of most recent registration date. To change the display order, click the “Nickname”, “Team”, “Registration Date”, “DL Count”, or “Comments” item that you want to use as the sort key.
 - Each time you click the item, the display order toggles between ascending and descending.
-


5. Click “Apply”.

The adjustment values are imported to the selected color mode of the target monitor.


5-5. Tweeting Imported/Uploaded Information

1. After uploading or importing color adjustment data to/from G-Ignition Drive, click the Twitter icon on the lower left of the screen.

“Color Configuration / Import” screen

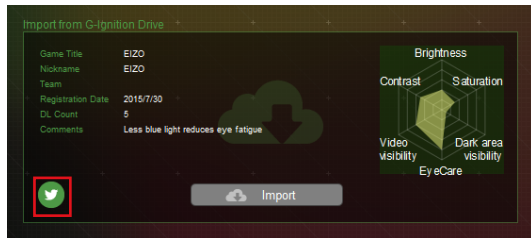

“Color Configuration / Export” screen

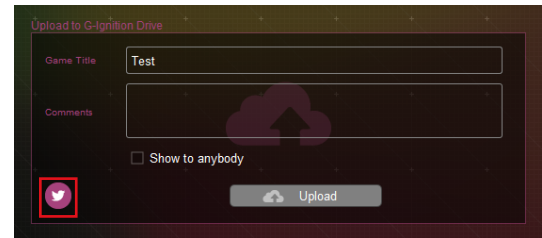

2. Your browser starts, and the Tweet screen appears.

When you open the Tweet screen, you will find the following information.

- Name of the model you are using
- Game Title
- URL (If you access using your Web browser, you can download the imported color adjustment data.)
- Hashtag “#GamingColor”
“Example: FS2735 (game title) https://G-Ignition.com/dataDownload.php?color_id=1 |#GamingColor”

3. Type in body text, and log in with your Twitter account to tweet.

Visit the Twitter web site for details on the Twitter service.

Chapter 6 Auto Color

By registering color modes for individual applications, the color mode of the monitor can be switched automatically for each application.

When a specific application is active, the associated color mode is applied.

When an application whose association setting is not configured is active, the “Default color mode” is applied.

Note


- In a multiple monitor configuration, hues may differ monitor by monitor depending on individual differences or color adjustment values even when the same color mode is applied to the monitors.

Attention


- To activate the Auto Color function, the following conditions must be satisfied:
 - G-Ignition is residing (see “2-3. Start and Exit” (page 8)).
 - When two or more monitors are connected, each monitor displays an independent screen or an identical screen. If a single screen is displayed across two or more monitors, the Auto Color function does not activate.



Independent screen on each monitor (OK)




Same screen on each monitor (OK)



A screen over the multiple monitors (NG)

- It is not possible to register a color mode for the Windows Desktop.

“Auto Color” screen

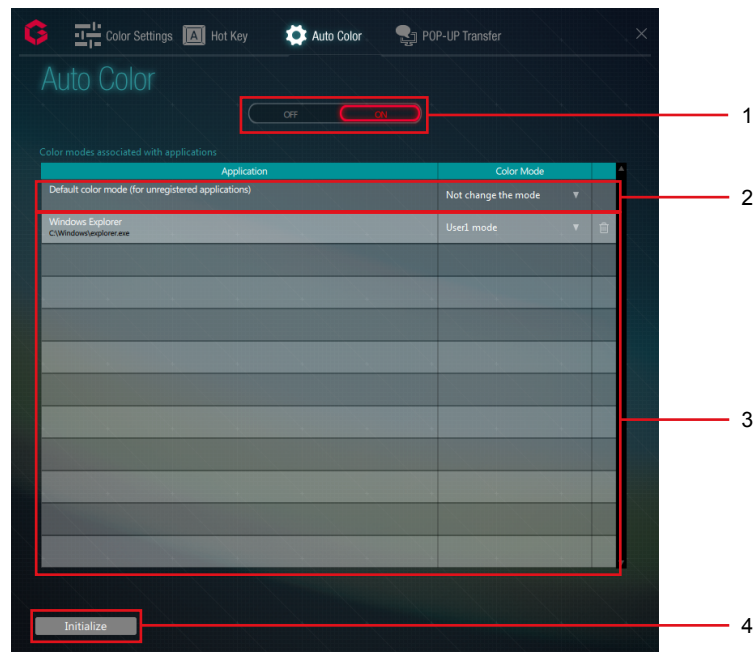

No.	Name	Description
1	Operation switch	Turns ON or OFF the Auto Color function (See “6-1. Setting the Default Color Mode” (page 30)).
2	“Default color mode” setting field	When an application for which a specific color mode is not set is active, the color mode specified in this row is applied (See “6-1. Setting the Default Color Mode” (page 30)).
3	Application color mode setting field	Specify each application and a color mode to be applied to the application (See “6-2. Associating a Color Mode with a Specific Application” (page 30)).
4	Initialize	Resets the settings.

6-1. Setting the Default Color Mode

Specify a color mode to be used for typical applications.

Application	Color Mode
Default color mode (for unregistered applications)	Not change the mode ▼

1. Click “ON” of the operation switch.
2. From the “Color Mode” list of “Default color mode (for unregistered applications)”, select a color mode you want to assign, and set it.

Note

- If “Not change the mode” is selected, the same color mode remains displayed and is not changed.
-

6-2. Associating a Color Mode with a Specific Application


Note

- The list displays the names of applications currently active or already registered. If a desired application is not displayed, start the application. This registers the application and eliminates the need to start it the next and subsequent times you use it.
 - It is not possible to register a color mode with Windows Desktop or with some applications.
 - The color modes shown in the pull-down menu differ depending on the monitor model.
 - For details on the color mode, see the user’s manual for the monitor.
-

1. From the “Color Mode” pull-down menu for the application to which you want to assign a color mode, select a color mode.

When a registered application becomes active, the monitor’s color mode automatically switches to the one associated with the application.

Note

- Clicking  on the far right of the screen releases the target application setting.
 - If you want to release the settings for all the applications, click “Initialize” on the lower left of the setting window.
-

Chapter 7 Hot Key

By assigning functions of the monitor to keys on the keyboard, the monitor can be operated from the keyboard.

Attention

- When G-Ignition is resident, hot key assignments applied to G-Ignition cannot be used in other applications. Pay attention not to assign the same hot keys as those used in another application.
- Hot key settings cannot be changed according to the application being used.

Note

- Applying the same hot key assignment to each of the different models enables you to operate all of these monitors simultaneously using the same hot key.
- The functions that can be assigned to hot key differ depending on the monitor model.

“Hot Keys” screen

Example: FS2434




No.	Name	Description
1	Monitor menu	Select the monitor to which hot keys will be assigned.
2	Apply to all monitors of the same type	The same hot key assignments can be applied to all currently connected monitors of the same model.
3	Hot key setting boxes	Enter hot keys to be assigned to functions.
4	Initialize	Releases all the hot key assignments from the selected monitor.

7-1. Assigning Hot Keys

1. In a multiple monitor configuration, select a target monitor from the menu.

2. Assign hot keys.

Move the cursor to the box of the item to which you want to assign a hot key, and press key(s) to be used for the hot key. If you want to assign a combination of two or more keys, press all of the keys simultaneously.

To cancel entered key(s), press the “Delete” or “Back Space” key. “None” appears in the box showing that the key entry has been canceled. You can also click  to cancel the entry.

Note

- The following keys cannot be set.
 - Modifier keys (Shift, Ctrl, Alt), either in isolation or in combination with other modifier keys only (e.g. “Ctrl + Shift”)
 - Combinations of keys that are registered to the system (e.g. “Ctrl + Alt + Delete”)
 - The following keys, either in isolation or in combination with a modifier key(s):
 - Tab, Enter, Esc, Delete, BackSpace, Windows
 - “F12” key in isolation
 - “Shift + Caps Lock” key
 - Only when a modifier key is used, a combination of multiple keys can be set.
 - Clicking “Initialize” on the lower left of the screen cancels all the hot key assignments for the selected monitor.
-

3. If you want to apply the same hot key assignments to all currently connected monitors of the same model, check  of “Apply to all monitors of the same type” on the far right.

Chapter 8 POP-UP Transfer

Some monitors support “POP-UP Display”. “POP-UP Display” is a G-Ignition Mobile function. Using this function, notifications (phone calls and e-mail messages) received by your smartphone are displayed as icons (POP-UP) on the monitor. The POP-UP transfer from the smartphone may take over 10 minutes depending on the environment. The speed of POP-UP transfer can be accelerated by using G-Ignition for Windows.


Attention

- The “POP-UP Transfer” screen cannot be displayed unless a connected monitor supports “POP-UP Display”.
- Registration with G-Ignition Drive is required. If you have not yet registered, perform the necessary procedure by referring to (“5-1. Registering with G-Ignition Drive” (page 21)).

Note

- For information about monitors that support G-Ignition Mobile and the POP-UP display, refer to our web site. <http://gaming.eizo.com>
- Refer to our web site (<http://gaming.eizo.com/popup/>) for details about the POP-UP transfer.

“POP-UP Transfer” screen

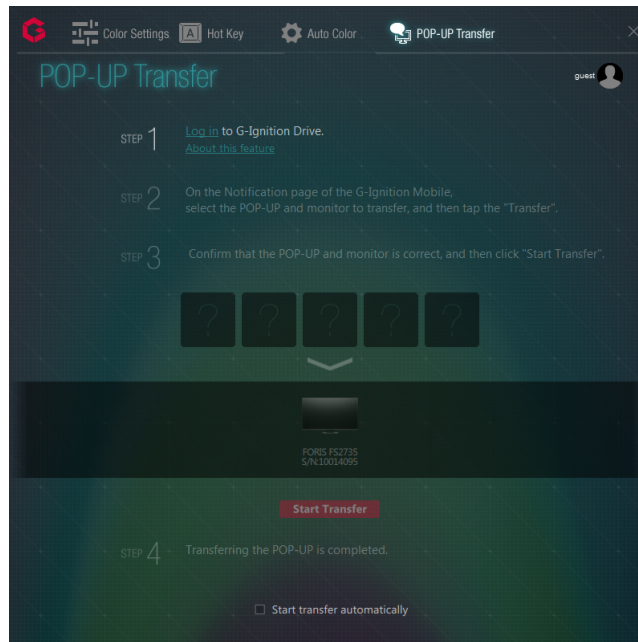

1. Click to log in to G-Ignition Drive.

See “5-2. Logging In/Out” (page 23) for the login procedure.

Logging in enables STEP2.

2. Start the POP-UP transfer from G-Ignition Mobile to a monitor.

1. Launch G-Ignition Mobile, and open the “POP-UP Transfer” screen.
2. Select POP-UP to be transferred and a destination monitor.
3. Tap “Transfer”.

A screen is displayed prompting you to select the transfer method.

4. Tap “for Windows”.

When transfer preparation from G-Ignition for Windows is ready, a message is displayed.

Tap “Yes”. STEP3 is enabled in G-Ignition for Windows, the POP-UP selected in G-Ignition Mobile is displayed, and the destination monitor is highlighted.


3. Check the information to be transferred using G-Ignition for Windows, and click “Start transfer”.

The transfer process starts.

Note

- By selecting the “Start transfer automatically” check box, you can start the transfer process automatically without clicking “Start transfer” in STEP3.
-

Chapter 9 Troubleshooting

Problem	Possible cause and remedy
<p>1. The icon is not shown in the notification area</p>	<ul style="list-style-type: none"> • Windows 10: Click “Start” - “All apps” - “EIZO” - “G-Ignition Ver. x.x.x”. • Windows 8.1: Click Ⓣ on the “Start” screen, then select “G-Ignition Ver. x.x.x” on the “Apps” screen to start. • Windows 7: Click “Start” - “All Programs” - “EIZO” - “G-Ignition” - “G-Ignition Ver. x.x.x” to start. • The icon may be located in a hidden area. Click the arrow by the side of the notification area to expand the area.
<p>2. The icon is in black and white</p> 	<ul style="list-style-type: none"> • Check if the USB cable is connected. • Turn off the PC and turn it back on. • Check whether a monitor supported by G-Ignition is connected.
<p>3. Auto Color is not functioning</p>	<ul style="list-style-type: none"> • To run the Auto Color function, the G-Ignition icon must be resident in the notification area. • When two or more monitors are connected, each monitor must display an independent screen or an identical screen. If a single screen is displayed across two or more monitors, the Auto Color function does not activate. • Check whether the operation switch is turned “ON” in “Auto Color” screen. • Close the G-Ignition setting window. Closing the setting window enables the function.
<p>4. Hot Key is disabled</p>	<ul style="list-style-type: none"> • Close the G-Ignition setting window. Closing the setting window enables the function. • To run the Hot Key function, the G-Ignition icon must be in the notification area.
<p>5. When color adjustment data is imported from G-Ignition Drive, the “Game Title” column or other columns are blank</p>	<ul style="list-style-type: none"> • A communication error may have occurred. Check the Internet connection status.
<p>6. When color adjustment data is exported to G-Ignition Drive, an error occurs when “Export” is clicked</p>	<ul style="list-style-type: none"> • If the color mode has been changed to a mode other than User mode by operating the monitor before the export process is completed, the export process fails. Return the color mode of the monitor to User mode, and then retry the operation.
<p>7. Procedure to log in to G-Ignition Drive fails</p>	<ul style="list-style-type: none"> • A communication error may have occurred. Check the Internet connection status. • The e-mail address or password may have been entered incorrectly. Check whether the entered e-mail address and password are correct.
<p>8. No e-mail message is delivered from G-Ignition</p>	<ul style="list-style-type: none"> • Delivery of e-mail messages may be blocked. Change the e-mail settings so that e-mail messages from “useradmin@g-ignition.com” can be received.

Appendix

Glossary

Gain

This is used to adjust each color parameter for red, green and blue. An LCD monitor displays the color by the light passing through the panel color filter. Red, green and blue are the three primary colors. All the colors on the screen are displayed by combining these three colors. The color tone can be changed by adjusting the light intensity (volume) passing through each color's filter.

Gamma

Generally, the monitor brightness varies nonlinearly with the input signal level, which is called "Gamma Characteristic". When the gamma value is low, the middle tone area is displayed brighter, and darker when high. Changes to the gamma value will not affect contrast. A gamma value appropriate for the display content should be selected.

Overdrive

This technology enhances response speed by increasing the potential difference at the time of motion of liquid-crystal pixels, and it is used for liquid-crystal TV sets and others in general. It provides clear-cut three-dimensional display with little afterimage, by improving response speed of the intermediate graduation range that frequently appears in moving images.

Resolution

The LCD panel consists of numerous pixels of specified size, which are illuminated to form images.

Temperature

Color temperature is a method to measure the white color tone, generally indicated in degrees Kelvin. The screen becomes reddish at a low temperature, and bluish at a high temperature, like the flame temperature.

5000 K: Slightly reddish white

6500 K: White referred to as daylight-balanced color

9300 K: Slightly bluish white

Trademarks

The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing, LLC in the United States and other countries.

VESA is a registered trademark of Video Electronics Standards Association.

Acrobat, Adobe, Adobe AIR, and Photoshop are registered trademarks of Adobe Systems Incorporated in the United States and other countries.

AMD Athlon and AMD Opteron are trademarks of Advanced Micro Devices, Inc.

Apple, ColorSync, eMac, iBook, iMac, iPad, Mac, MacBook, Macintosh, Mac OS, PowerBook, and QuickTime are registered trademarks of Apple Inc.

ColorMunki, Eye-One, and X-Rite are registered trademarks or trademarks of X-Rite Incorporated in the United States and/or other countries.

ColorVision and ColorVision Spyder2 are registered trademarks of DataColor Holding AG in the United States.

Spyder3 and Spyder4 are trademarks of DataColor Holding AG.

ENERGY STAR is a registered trademark of the United States Environmental Protection Agency in the United States and other countries.

GRACoL and IDEAlliance are registered trademarks of International Digital Enterprise Alliance.

Linux is a registered trademark of Linus Torvalds.

NEC is a registered trademark of NEC Corporation.

PC-9801 and PC-9821 are trademarks of NEC Corporation.

NextWindow is a trademark of NextWindow Ltd.

Intel, Intel Core, Pentium, and Thunderbolt are trademarks of Intel Corporation in the U.S. and/or other countries.

PowerPC is a registered trademark of International Business Machines Corporation.

PlayStation is a registered trademark of Sony Computer Entertainment Inc.

PSP and PS3 are trademarks of Sony Computer Entertainment Inc.

RealPlayer is a registered trademark of RealNetworks, Inc.

Red Hat is a registered trademark of Red Hat, Inc.

TouchWare is a trademark of 3M Touch Systems, Inc.

Twitter is a trademark of Twitter, Inc. in the United States and/or other countries.

Windows, Windows Media, Windows Vista, SQL Server, Xbox 360, and Internet Explorer are registered trademarks of Microsoft Corporation in the United States and other countries.

YouTube is a registered trademark of Google Inc.

Firefox is a registered trademark of the Mozilla Foundation.

Kensington and MicroSaver are registered trademarks of ACCO Brands Corporation.

EIZO, the EIZO Logo, ColorEdge, DuraVision, FlexScan, FORIS, RadiCS, RadiForce, RadiNET, Raptor, and ScreenManager are registered trademarks of EIZO Corporation in Japan and other countries.

ColorNavigator, EcoView NET, EIZO EasyPIX, EIZO Monitor Configurator, EIZO ScreenSlicer, G-Ignition, i•Sound, Re/Vue, Screen Administrator and UniColor Pro are trademarks of EIZO Corporation.

All other company and product names are trademarks or registered trademarks of their respective owners.



EIZO Corporation

<http://www.eizoglobal.com>

Copyright © 2014-2016 EIZO Corporation All rights reserved.

7th Edition-March, 2016

03V25120G1
(U.M-G-IGNITION)