

# User's Manual

## ColorEdge® CS2730

Color Management LCD Monitor


### Important

Please read PRECAUTIONS, this User's Manual, and the Setup Guide (separate volume) carefully to familiarize yourself with safe and effective usage.

- 
- Please refer to the Setup Guide for basic information ranging from connection of the monitor to a PC to using the monitor.
  - The latest User's Manual is available for download from our web site:  
<http://www.eizoglobal.com>
- 



## Location of Caution Statement

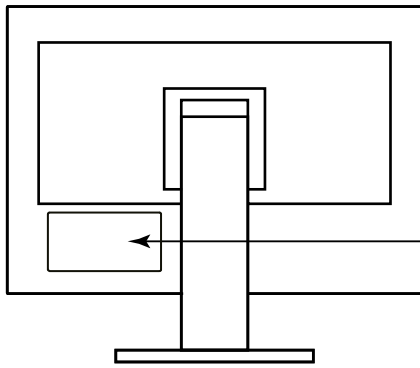

  
**WARNING**  
RISK OF ELECTRIC SHOCK. DO NOT OPEN.

**AVERTISSEMENT**  
RISQUE DE CHOC ELECTRIQUE. NE PAS OUVRIR.

**WARNUNG**  
GEFAHR DES ELEKTRISCHEN SCHLAGES. RÜCKWAND NICHT ENTFERNEN.

警告  
触电危険，请勿打开后盖。

警告  
感電の恐れあり，カバーをあげないでください。

The equipment must be connected to a grounded main outlet.  
L'appareil doit être relié à une prise avec terre.  
Jordet stikkontakt skal benyttes når apparatet tilkobles datanett.  
Apparaten skall anslutas till jordat nätuttag.  
设备必须连接到接地的电源插座。  
電源コードのアースは必ず接地してください。

This product has been adjusted specifically for use in the region to which it was originally shipped. If operated outside this region, the product may not perform as stated in the specifications.

No part of this manual may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, or otherwise, without the prior written permission of EIZO Corporation. EIZO Corporation is under no obligation to hold any submitted material or information confidential unless prior arrangements are made pursuant to EIZO Corporation's receipt of said information. Although every effort has been made to ensure that this manual provides up-to-date information, please note that EIZO monitor specifications are subject to change without notice.

# Notice for this monitor

---

Aside from general purposes like creating documents, viewing multimedia content, this product is also suited to applications such as graphics creation and digital photo processing, where accurate color reproduction is a priority.

---

This product has been adjusted specifically for use in the region to which it was originally shipped. If the product is used outside the region, it may not operate as specified in the specifications.

---

This product may not be covered by warranty for uses other than those described in this manual.

---

The specifications noted in this manual are only applicable when the following are used:

- Power cords provided with the product
  - Signal cables specified by us
- 

Only use optional products manufactured or specified by us with this product.

---

If you place this product on a lacquer-coated desk, the color may adhere to the bottom of the stand due to the composition of the rubber. Check the desk surface before use.

---

It takes about 30 minutes for the performance of electrical parts to stabilize. Please wait 30 minutes or more after the monitor power has been turned on, and then adjust the monitor.

---

Monitors should be set to a lower brightness to reduce changes in luminosity caused by long-term use and maintain a stable display.

---

When the screen image is changed after displaying the same image for extended periods of time, an afterimage may appear. Use the screen saver or power save function to avoid displaying the same image for extended periods of time.

---

If the monitor displays continuously over a long period of time, dark smudges or burn-in may appear. To maximize the life of the monitor, we recommend the monitor be turned off periodically.

---

Periodic cleaning is recommended to keep the monitor looking new and to prolong its operation lifetime (refer to [“Cleaning” \(page 4\)](#)).

---

The LCD panel is manufactured using high-precision technology. Although, missing pixels or lit pixels may appear on the LCD panel, this is not a malfunction. Percentage of effective dots: 99.9994 % or higher.

---

The backlight of the LCD panel has a fixed lifetime. When the screen becomes dark or begins to flicker, please contact your local EIZO representative.

---

Do not press on the panel or edge of the frame strongly, as this may result in display malfunctions, such as interference patterns, etc. If pressure is continually applied to the panel, it may deteriorate or damage your panel. (If the pressure marks remain on the panel, leave the monitor with a black or white screen. The symptom may disappear.)

---

Do not scratch or press on the panel with any sharp objects, as this may result in damage to the panel. Do not attempt to brush with tissues as this may scratch the panel.

---

---

When the monitor is cold and brought into a room or the room temperature goes up quickly, dew condensation may occur on the interior and exterior surfaces of the monitor. In that case, do not turn the monitor on. Instead wait until the dew condensation disappears, otherwise it may cause some damage to the monitor.

---

## Cleaning

---

### Attention

- Chemicals such as alcohol and antiseptic solution may cause gloss variation, tarnishing, and fading of the cabinet or panel, and also quality deterioration of the image.
- Never use any thinner, benzene, wax, and abrasive cleaner, which may damage the cabinet or panel.

### Note

- The optional ScreenCleaner is recommended for cleaning the cabinet and panel surface.

The stains on the cabinet and panel surface can be removed by moistening part of a soft cloth with water.

## To use the monitor comfortably

---

- An excessively dark or bright screen may affect your eyes. Adjust the brightness of the monitor according to the environmental conditions.
- Staring at the monitor for a long time tires your eyes. Take a 10-minute rest every hour.

# Contents


<b>Notice for this monitor .....</b>	<b>3</b>	<b>Chapter 5 Troubleshooting.....</b>	<b>29</b>
Cleaning .....	4	5-1. No Picture .....	29
To use the monitor comfortably .....	4	5-2. Imaging Problems.....	30
<b>Contents.....</b>	<b>5</b>	5-3. Other Problems .....	31
<b>Chapter 1 Introduction.....</b>	<b>6</b>	<b>Chapter 6 Reference .....</b>	<b>32</b>
1-1. Features .....	6	6-1. Attaching the Optional Arm.....	32
1-2. Controls and Functions .....	7	6-2. Detaching/Attaching Stand Base.....	34
● Front .....	7	6-3. Attaching/Detaching the Cable Holder .....	37
● Rear.....	8	6-4. Connecting Multiple External Devices.....	38
1-3. EIZO LCD Utility Disk.....	9	6-5. Making Use of USB (Universal Serial Bus).....	39
● Disk contents and software overview .....	9	● Required System Environment .....	39
● To use ColorNavigator 6 .....	9	● Connection Procedure (Setup of USB Function).....	40
1-4. Compatible Resolutions .....	10	6-6. Specifications .....	41
● DVI.....	10	● Outside Dimensions .....	43
● DisplayPort.....	11	● Main Default Settings.....	44
● HDMI .....	12	● Accessories.....	44
1-5. Setting the Resolution .....	13	<b>Chapter 7 Glossary .....</b>	<b>45</b>
● Windows 10.....	13	<b>Appendix.....</b>	<b>47</b>
● Windows 8.1 / Windows 7 .....	13	Trademark .....	47
● OS X Mountain Lion (10.8) or later.....	13	License / Copyright.....	47
● Mac OS X 10.7 .....	13	FCC Declaration of Conformity .....	48
<b>Chapter 2 Basic Adjustments/Settings.....</b>	<b>14</b>	LIMITED WARRANTY.....	49
2-1. Switch Operation Method .....	14	Recycling Information .....	50
2-2. Switching Input Signals .....	14		
2-3. Switching the Display Mode (color mode).....	15		
● Display Modes.....	15		
2-4. Adjusting the Brightness.....	15		
<b>Chapter 3 Advanced Adjustments/Settings.....</b>	<b>16</b>		
3-1. Basic Operation of the Setting Menu .....	16		
3-2. Setting Menu Functions .....	18		
● Color .....	18		
● Signal .....	21		
● Preferences.....	23		
● Languages .....	26		
● Information .....	26		
<b>Chapter 4 Administrator Settings.....</b>	<b>27</b>		
4-1. Basic Operation of the "Administrator Settings" Menu.....	27		
4-2. "Administrator Settings" Menu Functions .....	28		

# Chapter 1 Introduction

Thank you very much for choosing an EIZO color LCD monitor.

## 1-1. Features

---

- 27" widescreen
- Wide color gamut display (Adobe® RGB coverage: 99 %)
- Resolution: Supports 2560×1440
- IPS panel with 178° horizontal and vertical wide viewing angles
- Frame synchronization mode supported (23.75 - 30.5 Hz, 47.5 - 61.0 Hz)
- Color mode function
  - Reproduces a color temperature, gamma, and gamut compliant with the following standards.
  - Adobe®RGB / sRGB
    - See [“Chapter 3 Advanced Adjustments/Settings” \(page 16\)](#)
- The provided Color Management Software "ColorNavigator 6" enables you to calibrate monitor characteristics and generate color profiles
  - See [“1-3. EIZO LCD Utility Disk” \(page 9\)](#)
- Equipped with a USB Hub function that supports USB 3.0
  - Achieves high-speed data transfers of up to 5 Gbps, which enables transfers of large amounts of data to and from USB memory devices in a short amount time.
  - Also, the  USB downstream port supports quick charging, so you can recharge your smartphone or tablet in a short period of time.
  - See [“6-5. Making Use of USB \(Universal Serial Bus\)” \(page 39\)](#) and [“USB CHARGE Port” \(page 24\)](#)
- Displays HDCP (High Bandwidth Digital Protection) protected content.


---

### Note

- This monitor supports a portrait orientation display. When using the screen in a portrait position, you can change the orientation of the Setting menu (see [“Menu Rotation” \(page 23\)](#)).
  - When using the monitor screen in a portrait position, the graphics board supporting portrait display is required. When placing the monitor in a portrait position, settings of your graphics board need to be changed. Refer to the User's Manual of the graphics board for details.
-

## 1-2. Controls and Functions


### ● Front

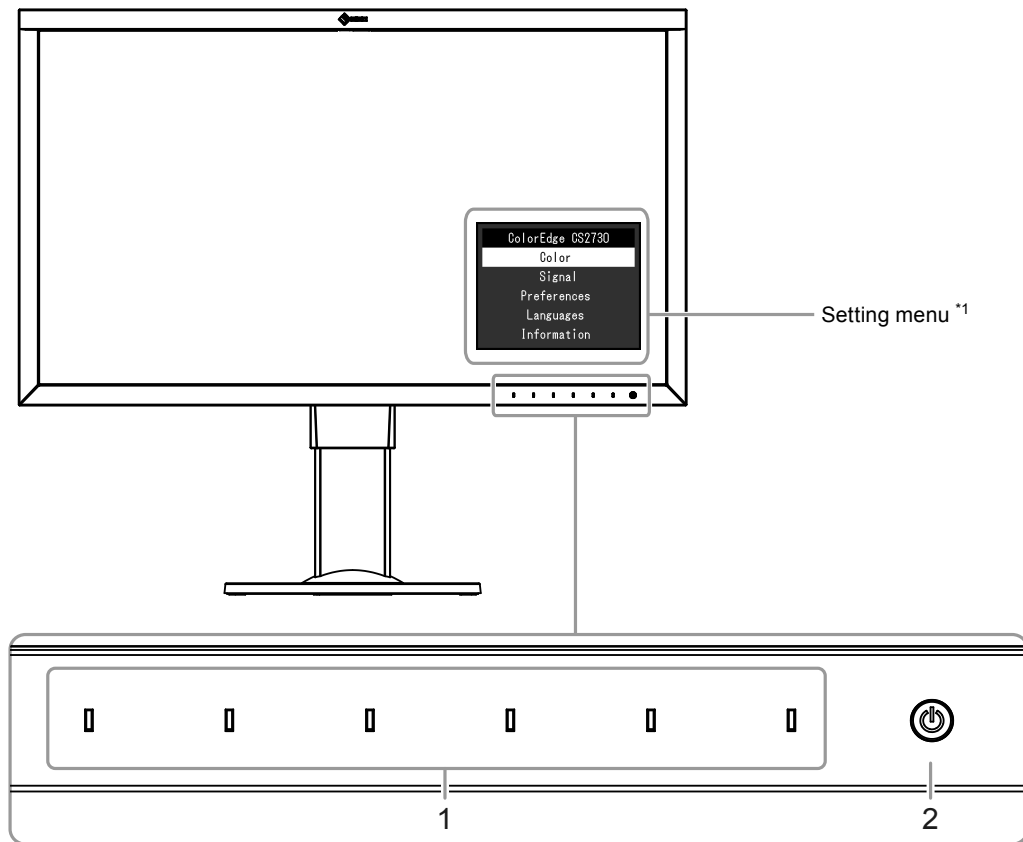

<b>1. Operation switches</b>	Displays menus. Operate the switches according to the operation guide. The switch indicator is lit white when you turn the power on.
<b>2. Power switch</b>	Turns the power on or off. The switch indicator is lit when you turn the power on. The indicator color differs depending on the monitor's operation status.  White : Operating Orange : Power saving mode OFF : Power off

\*1 See "3-1. Basic Operation of the Setting Menu" (page 16) for how to use.

## ● Rear

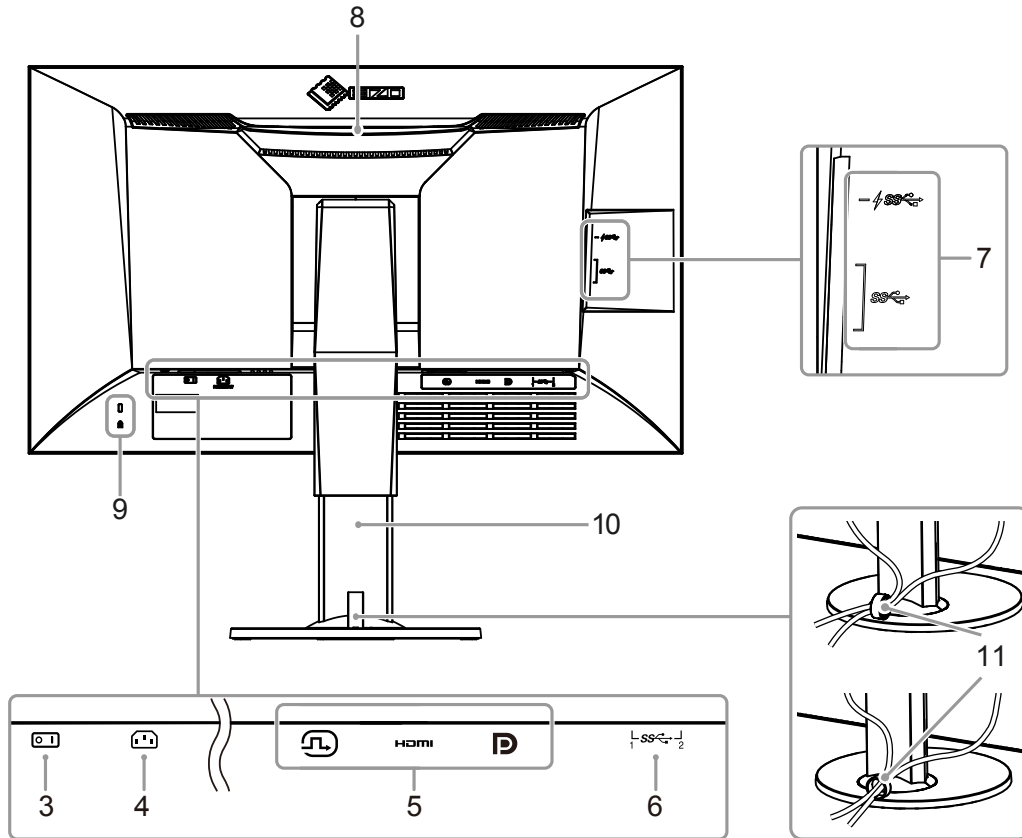

<b>3. Main power switch</b>	Turns the main power on or off.  : On ○: Off
<b>4. Power connector</b>	Connects the power cord.
<b>5. Input signal connectors</b>	Left: DVI-D connector Center: HDMI connector Right: DisplayPort connector
<b>6. USB upstream port</b>	Connects to the USB cable when using software that requires a USB connection, or when using the USB Hub function (page 39).
<b>7. USB downstream port</b>	Connects to a peripheral USB device. The  port supports quick recharging (page 24).
<b>8. Handle</b>	This handle is used for transportation. <b>Attention</b> • Firmly grasp and hold the monitor by the bottom while grabbing the handle, and carefully convey the monitor so as not to drop it.
<b>9. Security lock slot</b>	Complies with Kensington's MicroSaver security system.
<b>10. Stand<sup>*2</sup></b>	Adjusts the height and angle (tilt and swivel) of the monitor.
<b>11. Cable holder<sup>*3</sup></b>	Covers the monitor cables.

\*2 An optional arm (or an optional stand) can be attached by removing the stand section (see “6-1. Attaching the Optional Arm” (page 32)).

\*3 For details on mounting the cable holder, see “6-3. Attaching/Detaching the Cable Holder” (page 37).



## 1-3. EIZO LCD Utility Disk

An "EIZO LCD Utility Disk" (CD-ROM) is supplied with this product. The following table shows the disk contents and an overview of the software programs.

### ● Disk contents and software overview

The disk includes application software programs for calibration, and the User's Manual. Refer to "Readme.txt" or the "read me" file on the disk for software startup procedures or file reference procedures.

Contents	Overview
A "Readme.txt" or "read me" file	
ColorNavigator 6	An application software for measuring and calibrating monitor characteristics and generating ICC profiles (for Windows) and Apple ColorSync profiles (for Macintosh). (The monitor and PC must be connected using the USB cable.)
User's Manual of this monitor (PDF file)	

### ● To use ColorNavigator 6

Refer to the User's Manual on the CD-ROM disk for details on how to install and use the software. When using this software, you will need to connect a PC to the monitor with the supplied USB cable. For details on the USB cable connection, see [\(page 40\)](#).

#### **Attention**

- While using ColorNavigator 6, do not operate the power switch or operation switches on the front side on the monitor.

## 1-4. Compatible Resolutions

The monitor supports the following resolutions.

### ● DVI

Resolution	Dot clock	Horizontal scanning frequency	Vertical scanning frequency	DVI (Dual Link <sup>*1</sup> )	DVI (Single Link <sup>*1</sup> )
640 x 480	25.175 MHz	31.469 kHz	59.940 Hz	√	√
640 x 480	25.200 MHz	31.500 kHz	60.000 Hz	√ <sup>*3</sup>	√ <sup>*3</sup>
720 x 400	28.322 MHz	31.469 kHz	70.087 Hz	√	√
800 x 600	40.000 MHz	37.879 kHz	60.317 Hz	√	√
1024 x 768	65.000 MHz	48.363 kHz	60.004 Hz	√	√
1280 x 720p	74.250 MHz	37.500 kHz	50.000 Hz	√ <sup>*3</sup>	√ <sup>*3</sup>
1280 x 720p	74.250 MHz	45.000 kHz	60.000 Hz	√ <sup>*3</sup>	√ <sup>*3</sup>
1280 x 960	108.000 MHz	60.000 kHz	60.000 Hz	√	√
1280 x 1024	108.000 MHz	63.981 kHz	60.020 Hz	√	√
1600 x 1200	162.000 MHz	75.000 kHz	60.000 Hz	√	√
1680 x 1050	119.000 MHz	64.674 kHz	59.883 Hz	√ <sup>*3</sup>	√ <sup>*3</sup>
1680 x 1050	146.250 MHz	65.290 kHz	59.954 Hz	√ <sup>*3</sup>	√ <sup>*3</sup>
1920 x 1080	138.500 MHz	66.587 kHz	59.934 Hz	√	√
1920 x 1080p	74.250 MHz	27.000 kHz	24.000 Hz	√ <sup>*3</sup>	√ <sup>*3</sup>
1920 x 1080p	74.250 MHz	28.125 kHz	25.000 Hz	√ <sup>*3</sup>	√ <sup>*3</sup>
1920 x 1080p	74.250 MHz	33.750 kHz	30.000 Hz	√ <sup>*3</sup>	√ <sup>*3</sup>
1920 x 1080p	148.500 MHz	56.250 kHz	50.000 Hz	√ <sup>*3</sup>	√ <sup>*3</sup>
1920 x 1080p	148.500 MHz	67.500 kHz	60.000 Hz	√	√
1920 x 1200	154.000 MHz	74.038 kHz	59.950 Hz	√	√
2048 x 1080	74.250 MHz	27.000 kHz	24.000 Hz	√ <sup>*3</sup>	√ <sup>*3</sup>
2560 x 1440 <sup>*2</sup>	146.250 MHz	43.945 kHz	29.935 Hz	-	√
2560 x 1440 <sup>*2</sup>	241.500 MHz	88.787 kHz	59.951 Hz	√	-

\*1 "Signal Format" (page 28) must be set.

\*2 Recommended resolution

\*3 The output device must be defined. Refer to the User's Manual of the output device for further details.

## ● DisplayPort

Resolution	Dot clock	Horizontal scanning frequency	Vertical scanning frequency	DisplayPort
640 x 480	25.175 MHz	31.469 kHz	59.940 Hz	√
640 x 480	25.200 MHz	31.500 kHz	60.000 Hz	√*2
720 x 400	28.322 MHz	31.469 kHz	70.087 Hz	√
720 x 480p (4:3)	27.027 MHz	31.500 kHz	60.000 Hz	√*2
720 x 480p (16:9)	27.027 MHz	31.500 kHz	60.000 Hz	√*2
800 x 600	40.000 MHz	37.879 kHz	60.317 Hz	√
1024 x 768	65.000 MHz	48.363 kHz	60.004 Hz	√
1280 x 720p	74.250 MHz	37.500 kHz	50.000 Hz	√*2
1280 x 720p	74.250 MHz	45.000 kHz	60.000 Hz	√*2
1280 x 960	108.000 MHz	60.000 kHz	60.000 Hz	√
1280 x 1024	108.000 MHz	63.981 kHz	60.020 Hz	√
1600 x 1200	162.000 MHz	75.000 kHz	60.000 Hz	√
1680 x 1050	119.000 MHz	64.674 kHz	59.883 Hz	√*2
1680 x 1050	146.250 MHz	65.290 kHz	59.954 Hz	√*2
1920 x 1080	138.500 MHz	66.587 kHz	59.934 Hz	√
1920 x 1080p	74.250 MHz	27.000 kHz	24.000 Hz	√*2
1920 x 1080p	74.250 MHz	28.125 kHz	25.000 Hz	√*2
1920 x 1080p	74.250 MHz	33.750 kHz	30.000 Hz	√*2
1920 x 1080p	148.500 MHz	56.250 kHz	50.000 Hz	√*2
1920 x 1080p	148.500 MHz	67.500 kHz	60.000 Hz	√
1920 x 1200	154.000 MHz	74.038 kHz	59.950 Hz	√
2048 x 1080	74.250 MHz	27.000 kHz	24.000 Hz	√*2
2560 x 1440*1	146.250 MHz	43.945 kHz	29.935 Hz	√*2
2560 x 1440*1	241.500 MHz	88.787 kHz	59.951 Hz	√

\*1 Recommended resolution

\*2 The output device must be defined. Refer to the User's Manual of the output device for further details.

## ● HDMI

Resolution	Dot clock	Horizontal scanning frequency	Vertical scanning frequency	HDMI
640 x 480	25.175 MHz	31.469 kHz	59.940 Hz	√
640 x 480	25.200 MHz	31.500 kHz	60.000 Hz	√
720 x 400	28.322 MHz	31.469 kHz	70.087 Hz	√
720 (1440) × 480i (4:3)	27.027 MHz	15.750 kHz	60.000 Hz	√
720 (1440) × 480i (16:9)	27.027 MHz	15.750 kHz	60.000 Hz	√
720 x 480p (4:3)	27.027 MHz	31.500 kHz	60.000 Hz	√
720 x 480p (16:9)	27.027 MHz	31.500 kHz	60.000 Hz	√
720 (1440) × 576i (4:3)	27.000 MHz	15.625 kHz	50.000 Hz	√
720 (1440) × 576i (16:9)	27.000 MHz	15.625 kHz	50.000 Hz	√
720 x 576p (4:3)	27.000 MHz	31.250 kHz	50.000 Hz	√
720 x 576p (16:9)	27.000 MHz	31.250 kHz	50.000 Hz	√
800 x 600	40.000 MHz	37.879 kHz	60.317 Hz	√
1024 x 768	65.000 MHz	48.363 kHz	60.004 Hz	√
1280 x 720p	74.250 MHz	37.500 kHz	50.000 Hz	√
1280 x 720p	74.250 MHz	45.000 kHz	60.000 Hz	√
1280 x 960	108.000 MHz	60.000 kHz	60.000 Hz	√
1280 x 1024	108.000 MHz	63.981 kHz	60.020 Hz	√
1600 x 1200	162.000 MHz	75.000 kHz	60.000 Hz	√
1680 x 1050	119.000 MHz	64.674 kHz	59.883 Hz	√ <sup>*2</sup>
1680 x 1050	146.250 MHz	65.290 kHz	59.954 Hz	√ <sup>*2</sup>
1920 x 1080	138.500 MHz	66.587 kHz	59.934 Hz	√
1920 x 1080i	74.250 MHz	28.125 kHz	50.000 Hz	√
1920 x 1080i	74.250 MHz	33.750 kHz	60.000 Hz	√
1920 x 1080p	74.250 MHz	27.000 kHz	24.000 Hz	√
1920 x 1080p	74.250 MHz	28.125 kHz	25.000 Hz	√
1920 x 1080p	74.250 MHz	33.750 kHz	30.000 Hz	√
1920 x 1080p	148.500 MHz	56.250 kHz	50.000 Hz	√
1920 x 1080p	148.500 MHz	67.500 kHz	60.000 Hz	√
1920 x 1200	154.000 MHz	74.038 kHz	59.950 Hz	√
2560 x 1440 <sup>*1</sup>	146.250 MHz	43.945 kHz	29.935 Hz	√
2560 x 1440 <sup>*1</sup>	241.500 MHz	88.787 kHz	59.951 Hz	√

\*1 Recommended resolution

\*2 The output device must be defined. Refer to the User's Manual of the output device for further details.

## 1-5. Setting the Resolution

---

If the resolution is incorrect after connecting the monitor to a PC or if you want to change the resolution, follow the procedure below.

### ● Windows 10

1. Right-click anywhere on the desktop except for on icons.
2. From the displayed menu, click "Display Settings".
3. In the "Customize your display" dialog box, click "Advanced display settings".
4. Select the monitor, and select the resolution from the "Resolution" pull-down menu.
5. Click "Apply".
6. When a confirmation dialog box appears, click "Keep changes".

### ● Windows 8.1 / Windows 7

1. For Windows 8.1, click the "Desktop" tile on the Start Screen to display the desktop.
2. Right-click anywhere on the desktop except for on icons.
3. From the displayed menu, click "Screen resolution".
4. Select the monitor, and select the resolution from the "Resolution" pull-down menu.
5. Click "OK".
6. When a confirmation dialog box is displayed, click "Keep changes".

---

**Note**

- When changing the size of the characters or other items that are displayed, select "Display" from the control panel and change the scaling level.
- 

### ● OS X Mountain Lion (10.8) or later

1. Select "System Preferences" from the Apple menu.
2. When the "System Preferences" dialog box is displayed, click "Displays".  
(If using OS X Mountain Lion (10.8), click "Displays" in "Hardware".)
3. In the displayed dialog box, select the "Display" tab and select "Change" in the "Resolutions" field.
4. Select the resolution from the list of possible resolution settings.  
If the target resolution is not displayed in the list, press and hold the Option key on the keyboard and select "Change".
5. Your selection will be reflected immediately. When you are satisfied with the selected resolution, close the window.

### ● Mac OS X 10.7

1. Select "System Preferences" from the Apple menu.
2. When the "System Preferences" dialog box is displayed, click "Displays" in "Hardware".
3. On the displayed dialog box, select the "Display" tab and select the resolution in the "Resolutions" field.
4. Your selection will be reflected immediately. When you are satisfied with the selected resolution, close the window.


# Chapter 2 Basic Adjustments/Settings


This chapter describes the basic functions that can be adjusted and set by touching the switches on the front of the monitor.

For advanced adjustment and setting procedures using the Setting menu, see “Chapter 3 Advanced Adjustments/Settings” (page 16).


## 2-1. Switch Operation Method

### 1. Displaying the operation guide


1. Touch any switch (except ).
- The operation guide appears on the screen.

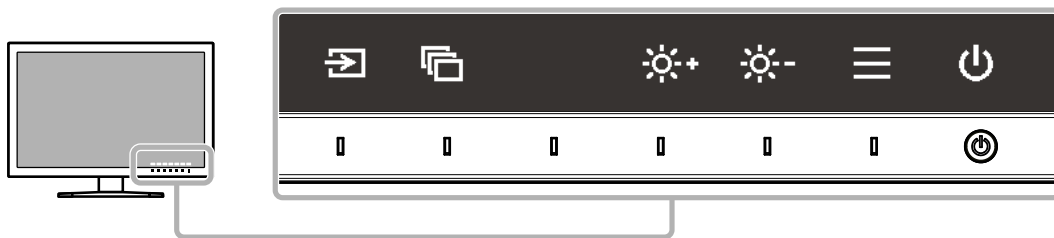

### 2. Adjusting/setting

1. Touch a switch for adjustment/setting.  
The Adjustment/Setting menu appears.
2. Use the switches to adjust/set the selected item, and then select  to confirm.

### 3. Exiting

1. Select  to exit the menu.
2. When no menu is displayed, the operation guide will automatically disappear after a few seconds if no switches are operated.


---

**Note**

- The contents of the guide will differ depending on the selected menu or status.
- 


## 2-2. Switching Input Signals

When a monitor has multiple signal inputs, the signal to display on-screen can be changed. When the input signal is switched, the connector name of the displayed signal appears at the bottom right of the screen.

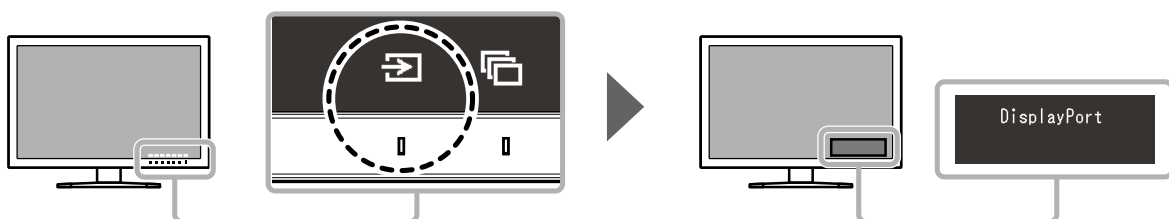

## 2-3. Switching the Display Mode (color mode)

This function allows easy selection of a display mode according to monitor application.

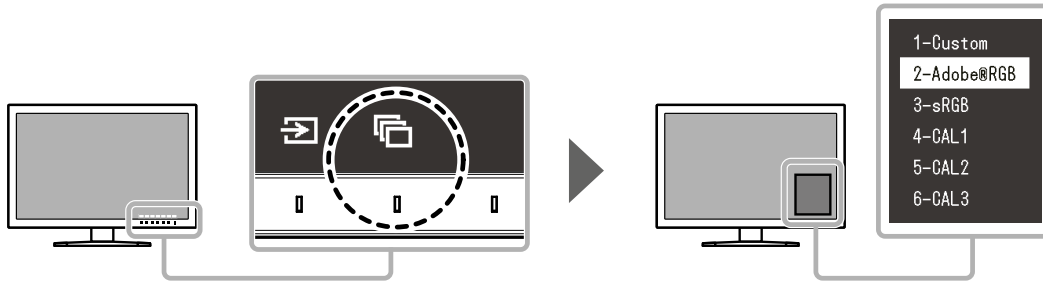

### ● Display Modes

Color Mode	Purpose
Standard Mode	Adjust color using the monitor's Setting menu.
Custom	Select for configuring color settings according to your preference.
Adobe®RGB	Suitable for color matching with Adobe®RGB compatible peripherals.
sRGB	Suitable for color matching with sRGB compatible peripherals.
Calibration Mode (CAL mode)	Adjusts the monitor's color using the "ColorNavigator 6" color management software.
CAL1	Displays the screen adjusted by ColorNavigator 6.
CAL2	
CAL3	

#### Note


- The Setting menu and the Mode names cannot be displayed at the same time.
- You can disable specific mode selections. For more information, see "Mode Skip" (page 24).
- The adjustment result of ColorNavigator 6 is reflected in each of the following modes, depending on the connector used for connecting the monitor and PC.
  - CAL1: DVI
  - CAL2: DisplayPort
  - CAL3: HDMI

## 2-4. Adjusting the Brightness

The brightness of the screen can be adjusted to suit the installation environment or personal preference.

### Adjustable Range

0 % to 100 %

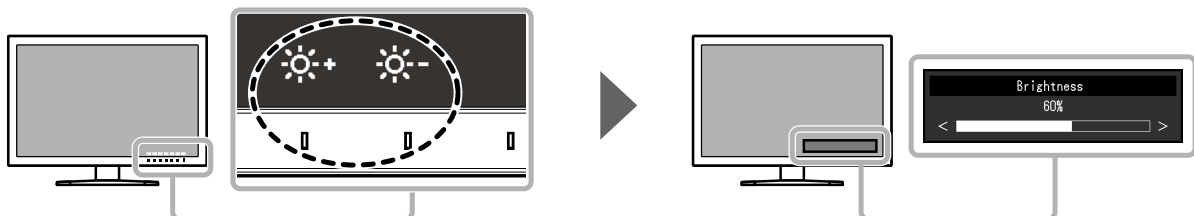


# Chapter 3 Advanced Adjustments/Settings

This chapter describes the advanced monitor adjustment and setting procedures using the Setting menu. For the basic adjustment/setting functions using the switches on the front of the monitor, see “Chapter 2 Basic Adjustments/Settings” (page 14).

## 3-1. Basic Operation of the Setting Menu


### 1. Menu display

1. Touch any switch (except  $\text{⏻}$  ).  
The operation guide appears.
2. Select  $\text{☰}$  .  
The Setting menu appears.

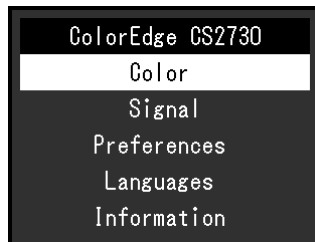


### 2. Adjusting/setting

1. Choose a menu to adjust/set with  $\text{⬆}$   $\text{⬇}$  , and then select  $\text{☑}$  .  
The Sub menu appears.

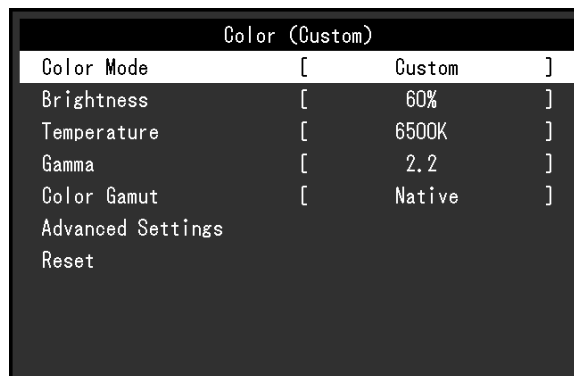

2. Choose an item to adjust/set with  $\text{⬆}$   $\text{⬇}$  , and then press  $\text{☑}$  .  
The Adjustment/Setting menu appears.

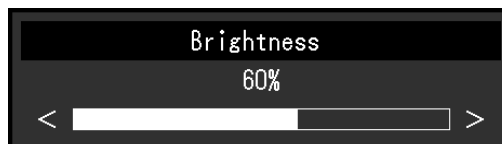



3. Adjust/set the selected item with  $\text{⬅}$   $\text{➤}$  , and then select  $\text{☑}$  .  
The Sub menu appears.

Selecting  $\text{✕}$  during adjustment/setting will cancel the adjustment/setting and restore the state prior to making changes.



### 3. Exiting

1. Select .  
The Setting menu appears.
2. Select .  
The Setting menu exits.

---

**Note**

- The contents of the guide will differ depending on the selected menu or status.
-

## 3-2. Setting Menu Functions

### ● Color

When the screen is displayed in Standard Mode (Custom / Adobe®RGB / sRGB), you can adjust the color settings of each color mode according to your preference.





#### Attention

- The same image may be seen in different colors on multiple monitors due to differences between individual monitors. Make fine color adjustment visually when matching colors on multiple monitors.

#### Note

- Use the values shown in “K” and “%” as a guide only.

Function	Adjustable Range	Description
Color Mode	Custom Adobe®RGB sRGB CAL1 CAL2 CAL3	Switch to the desired mode according to the monitor application. <b>Note</b> • For more information on how to switch modes, see “2-3. Switching the Display Mode (color mode)” (page 15).
Brightness	0 % to 100 %	The screen brightness is adjusted by changing the brightness of the backlight (light source from the LCD back panel). <b>Note</b> • If the entered value cannot be set, the value will appear in magenta. In such a case, change the value.
Temperature	Native 4000 K to 10000 K Adobe®RGB sRGB	The color temperature can be adjusted. The color temperature is used to express the hue of "White" or "Black" by a numerical value. The value is expressed in degrees "K" (Kelvin). The screen becomes reddish at a low color temperature, and bluish at a high color temperature, like the temperature of a flame.  Specify a color temperature in units of 100 K, or select a standard name. <b>Note</b> • When you select "Native", the original color of the monitor (Gain: 100 % for each RGB) is displayed. • “Gain” allows you to perform more advanced adjustment. When gain is changed, the color temperature is changed to “User”. • The gain preset values are set for each color temperature setting value.

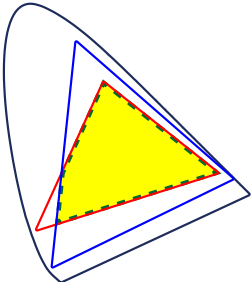
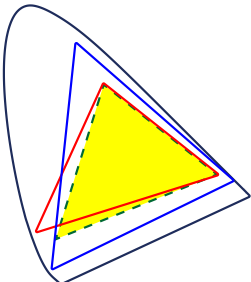

Function		Adjustable Range	Description
Gamma		1.6 to 2.7 Adobe®RGB sRGB	Adjust the gamma. The brightness of the monitor varies depending on the input signal, however, the variation rate is not simply proportional to the input signal. The control performed to keep the balance between the input signal and the brightness of the monitor is called "Gamma correction".  Set the gamma, or select a standard name.
Color Gamut		Native Adobe®RGB sRGB	Set the color reproduction area (color gamut). "Color Gamut" is the range of colors that devices such as monitors, digital cameras and printers can represent. Multiple standards are defined. <b>Note</b> <ul style="list-style-type: none"> <li>• Select "Native", to display the original color gamut of the monitor.</li> <li>• The method of displaying colors outside the monitor's displayable range within the defined color gamut can be set. For more information, see "Clipping" (page 19).</li> </ul>
Advanced Settings	Hue	-100 to 100	Adjust the hue. <b>Note</b> <ul style="list-style-type: none"> <li>• Using this function may make some color gradations unavailable for display.</li> </ul>
	Saturation	-100 to 100	Adjust the color saturation. <b>Note</b> <ul style="list-style-type: none"> <li>• Using this function may make some color gradations unavailable for display.</li> <li>• The minimum value (-100) changes the screen to monochrome.</li> </ul>
	Clipping	On Off	The method of displaying colors outside the monitor's displayable range within the color gamut specified in accordance with "Color Gamut" (page 19) can be set. <ul style="list-style-type: none"> <li>• "On" The range of colors that are displayable on the monitor will be accurately displayed in accordance with the standard. Colors outside the displayable range will be saturated.</li> </ul>  <ul style="list-style-type: none"> <li>• "Off" Displays colors with priority on the color gradation rather than the color accuracy. The vertices of the color gamut defined in the standard move to a range that can be displayed by the monitor. This allows the closest colors displayable by the monitor to be displayed.</li> </ul>  <p> <span style="color: blue;">—</span> Color gamut displayable by the monitor  <span style="color: red;">—</span> Color gamut defined by standard  <span style="color: green;">- - -</span> Color gamut displayed on screen </p> <b>Note</b> <ul style="list-style-type: none"> <li>• The diagrams shown above are conceptual diagrams, and they do not display the actual color gamut of the monitor.</li> <li>• This setting will be disabled if "Native" is selected at "Color Gamut" (page 19).</li> </ul>

Function		Adjustable Range	Description
Advanced Settings	Gain	0 % to 100 %	The brightness of each color component red, green, and blue is called Gain. The hue of "white" can be changed by adjusting the gain. <b>Note</b> <ul style="list-style-type: none"> <li>• Using this function may make some color gradations unavailable for display.</li> <li>• The gain value changes according to the color temperature.</li> <li>• When gain is changed, the color temperature is changed to "User".</li> </ul>
	6 Colors	-100 to 100	The hue, saturation and lightness can each be adjusted for the colors Magenta, Red, Yellow, Green, Cyan, and Blue.
Reset		-	Resets any color adjustments for the currently selected color mode back to the default settings.

## ● Signal

The signal settings are used to configure advanced settings for input signals, such as the screen display size and color format.

Signal (HDMI)		
Picture Expansion	[	Auto ]
Input Color Format	[	Auto ]
Input Range	[	Auto ]
Noise Reduction	[	Off ]

Function	Adjustable Range	Description
Picture Expansion	Auto* <sup>1</sup> Full Screen Aspect Ratio Dot by Dot	<p>The screen size of the monitor display can be changed.</p> <ul style="list-style-type: none"> <li>• "Auto" The monitor automatically changes the screen size according to the resolution information and aspect ratio information from the input signal.</li> <li>• "Full Screen" Displays an image in full screen. Images are distorted in some cases because the vertical rate is not equal to the horizontal rate.</li> <li>• "Aspect Ratio" Displays an image in full screen. However, since aspect ratios are maintained, part of an image may not be visible in horizontal or vertical direction.</li> <li>• "Dot by Dot" Displays the image at the set resolution or at the size specified by the input signal.</li> </ul> <p><b>Note</b></p> <ul style="list-style-type: none"> <li>• Example settings <ul style="list-style-type: none"> <li>- Full Screen </li> <li>- Aspect Ratio </li> <li>- Dot by Dot (Input Signal) </li> </ul> </li> </ul>

\*1 Only enabled when input signal information according to which the setting can be automatically determined is detected during HDMI input

Function	Adjustable Range	Description
Input Color Format	Auto <sup>*2</sup> YUV 4:2:2 <sup>*3</sup> YUV 4:4:4 <sup>*3</sup> YUV <sup>*4</sup> RGB	The color space of the input signal can be specified. Try changing this setting if colors are not displayed correctly. <b>Note</b> • This cannot be configured when DVI input is used. The color space for DVI input is always set to "RGB".

\*2 Only enabled when input signal information according to which the setting can be automatically determined is detected

\*3 Only enabled during HDMI input

\*4 Only enabled during DisplayPort input

Function	Adjustable Range	Description
Input Range	Auto <sup>*5</sup> Full Limited (109 % white) Limited	Depending on the external device, the black and white levels in the video signal output to the monitor may be restricted. If the signal is displayed on the monitor in its restricted form, the blacks will be faint, the whites dull, and contrast will be reduced. The brightness range of such signals can be extended to match the actual contrast ratio of the monitor. • "Auto" The monitor automatically recognizes the brightness range of input signals and displays images appropriately. • "Full" The input signal brightness range is not extended. • "Limited (109% white)" The brightness range of the input signal is extended from 16 - 254 (10 bits: 64 - 1019) to 0 - 255 (10 bits: 0 - 1023) for display. • "Limited" The brightness range of the input signal is extended from 16 - 235 (10 bits: 64 - 940) to 0 - 255 (10 bits: 0 - 1023) for display.


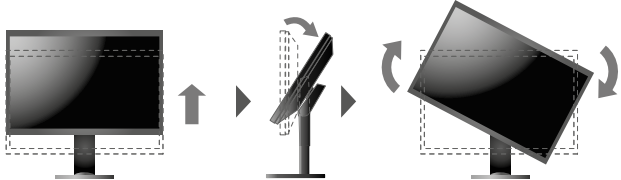
\*5 Only enabled during DisplayPort input or HDMI input

Function	Adjustable Range	Description
Noise Reduction	On Off	The small noises that occur in dark areas of an image are reduced. Use this function to reduce noise and roughness in images. <b>Note</b> • This can only be set during HDMI input. • Using the Noise Reduction function may lead to deterioration of fine images.

## ● Preferences

The monitor's settings can be configured to suit the usage environment or personal preference.

Preferences		
Auto Input Detection	[	Off ]
Menu Rotation	[	0° ]
USB CHARGE Port	[	Normal ]
Power Save	[	On ]
Indicator	[	4 ]
Beep	[	On ]
Input Skip		
Mode Skip		
USB Selection		
Monitor Reset		

Function	Adjustable Range	Description
Auto Input Detection	On Off	<p>When this function is set to "On", the monitor automatically recognizes the connector through which signals are input, so that the screen can be displayed. When an external device enters the power saving mode, the monitor automatically displays another signal.</p> <p>When set to "Off", the monitor displays the signal from the selected connector regardless of whether a signal is input or not. In this case, select the input signal to display using the operation switch (  ) on the front of the monitor.</p> <p><b>Note</b></p> <ul style="list-style-type: none"> <li>• When the main power is turned on/off, the signal is detected automatically regardless of the setting for this function.</li> </ul>
Menu Rotation	0° 90°	<p>This function allows you to change the orientation of the Setting menu to align with the installation orientation.</p> <p><b>Note</b></p> <ul style="list-style-type: none"> <li>• Be sure that the cables are correctly connected.</li> <li>• When using the monitor screen in a portrait position, the graphics board supporting portrait display is required. When placing the monitor in a portrait position, settings of your graphics board need to be changed. Refer to the User's Manual of the graphics board for details.</li> <li>• When using the monitor in a portrait position, rotate the monitor after pulling up the screen to the uppermost position of the stand and setting the screen tilted upward.</li> </ul> 

Function	Adjustable Range	Description
USB CHARGE Port	Normal Charging Only	<p>The ⚡ USB downstream port of the monitor supports USB 3.0 quick charging. By changing this setting to "Charging Only", devices connected to the ⚡ port can be charged more quickly than when using the "Normal" setting.</p> <p><b>Note</b></p> <ul style="list-style-type: none"> <li>• Make sure to complete any communication between connected USB devices and the PC before switching this setting. When the setting is switched, all communication will be temporarily interrupted.</li> <li>• Devices that are connected to the ⚡ port must support quick charging.</li> <li>• When "Charging Only" is set, data communications between the PC and connected devices via the ⚡ port are not possible, and therefore, connected devices will not work.</li> <li>• When "Charging Only" is set, charging is possible even when the monitor and PC are not connected by USB cable.</li> </ul>
Power Save	On Off	<p>This function allows you to set the monitor to the power saving mode, depending on the state of an external device connected to it.</p> <p>The monitor changes to power saving mode about 15 seconds after signal input ceases to be detected. When the monitor has shifted to power saving mode, images are not displayed on the screen.</p> <ul style="list-style-type: none"> <li>• Exiting power saving mode <ul style="list-style-type: none"> <li>- If the monitor receives input, it automatically exits power saving mode and returns to the normal display mode.</li> </ul> </li> </ul> <p><b>Note</b></p> <ul style="list-style-type: none"> <li>• At the time of shifting to power saving mode, a message that indicates the transition is displayed 5 seconds in advance.</li> <li>• When you are not using the monitor, switch off the main power to cut power consumption.</li> <li>• When the monitor is in power saving mode, devices connected to the USB downstream port will still work. Therefore, power consumption of the monitor varies depending on the connected devices, even in the power saving mode.</li> </ul>
Indicator	Off 1 to 7	The brightness of the power switch and the operation switches when the screen is displayed can be set. (Default setting: 4)
Beep	On Off	You can turn off the beep that sounds each time a switch is operated.
Input Skip	Skip -	<p>This function allows skipping of input signals that will not be used when the input signals are switched.</p> <p><b>Note</b></p> <ul style="list-style-type: none"> <li>• Not all input signals can be set to "Skip".</li> </ul>
Mode Skip	Skip -	<p>This function allows skipping of modes that will not be used when selecting modes. Please use this function if display modes are limited, or if you want to prevent randomly changing the display status.</p> <p><b>Note</b></p> <ul style="list-style-type: none"> <li>• Not all modes can be set to "Skip".</li> <li>• In the default settings, available calibration modes (CAL modes) differ depending on each input signal.</li> </ul>



Function	Adjustable Range	Description
USB Selection	USB-1 USB-2	<p>When two PCs are connected to the same monitor, input signals can be associated with the USB upstream port. This enables the USB port to be switched automatically when the input signal is switched. You do not need to change the USB cable connection even when the same monitor is calibrated for the two PCs. Furthermore, you can connect USB devices such as a mouse or keyboard to the monitor, and use these devices from the two PCs.</p> <p><b>Note</b></p> <ul style="list-style-type: none"> <li>• A cap is installed on the USB-2 port before the product is shipped. Remove the cap when using the USB-2 port.</li> <li>• In order to use the USB ports by switching from one to the other, two USB cables are required. You need to have one more cable available.</li> <li>• Before changing any settings, remove any USB memory or other storage devices from the monitor. Otherwise, data may be lost or damaged.</li> <li>• The key arrangement of the keyboard cannot be changed.</li> <li>• When the "Auto Input Detection" function is set to "On", the USB port is switched according to the input signal.</li> <li>• The USB downstream port operates for the computer from which images are being displayed.</li> </ul>
Monitor Reset	-	<p>Restore all settings to their default values except for the following settings.</p> <ul style="list-style-type: none"> <li>• Settings in the "Administrator Settings" menu</li> <li>• The "USB Selection" item in the "Preferences" menu</li> </ul> <p><b>Note</b></p> <ul style="list-style-type: none"> <li>• Regarding the default setting, see <a href="#">"Main Default Settings" (page 44)</a>.</li> </ul>

## ● Languages

The display language for menus and messages can be selected.

### Adjustable Range


English, Deutsch, Français, Español, Italiano, Svenska, Japanese, Simplified Chinese, Traditional Chinese



## ● Information

You can check the monitor information (model name, serial number, firmware version, usage time, ColorNavigator license status, resolution, input signal, etc.).

Example:

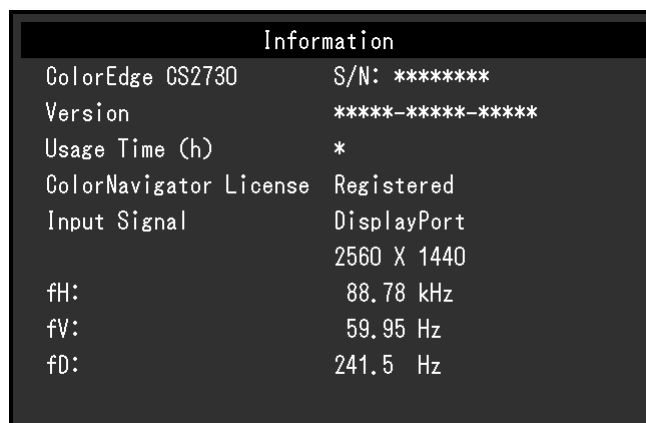




# Chapter 4 Administrator Settings

This chapter describes how to configure monitor operation using the "Administrator Settings" menu. This menu is for administrators. Configuration on this menu is not required for normal monitor use.


## 4-1. Basic Operation of the "Administrator Settings" Menu

### 1. Menu display

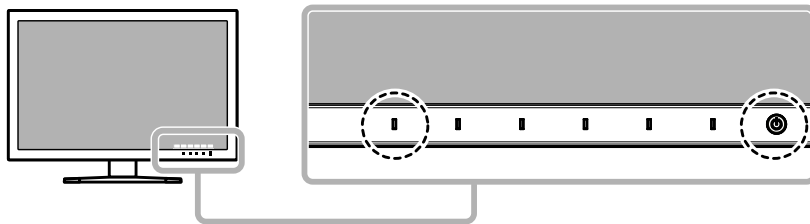


1. Touch  to turn off the monitor.
2. While touching the leftmost switch, touch  for more than 2 seconds to turn on the monitor.

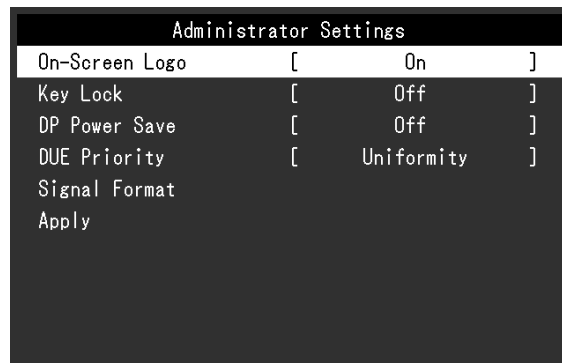


The "Administrator Settings" menu appears.




### 2. Settings

1. Choose an item to set with  , and then select .  
The Adjustment/Setting menu appears.

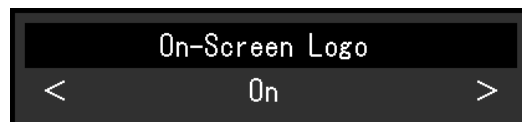


2. Set the item with  , and then select .  
The "Administrator Settings" menu appears.

### 3. Applying and exiting

1. Select "Apply", and then select .  
The settings are confirmed and the "Administrator Settings" menu quits.




## 4-2. "Administrator Settings" Menu Functions



Function	Adjustable Range	Description	
On-Screen Logo	On Off	When the monitor is turned on, the EIZO logo appears on the screen.  When this function is set to "Off", the EIZO logo does not appear.	
Key Lock	Off Menu All	In order to prevent changes to settings, the operation switches on the front of the monitor can be locked. <ul style="list-style-type: none"> <li>"Off" (Default setting) Enable all switches.</li> <li>"Menu" Lock the  switch.</li> <li>"All" Lock all switches except the power switch.</li> </ul>	
DP Power Save	On Off	When you switch the power back on or return from power save mode while the PC is connected via the DisplayPort connector, windows or icons may have shifted position. In such cases, set this function to "Off".	
DUE Priority	Brightness Uniformity	This product is equipped with a Digital Uniformity Equalizer (DUE) function that reduces display unevenness. This DUE setting can be changed. <ul style="list-style-type: none"> <li>"Brightness" Prioritizes high brightness and high contrast.</li> <li>"Uniformity" Prioritizes reduction of display unevenness.</li> </ul> <p><b>Note</b></p> <ul style="list-style-type: none"> <li>When changing the DUE setting, the monitor whose display is adjusted must be re-calibrated. Perform the target calibration again using ColorNavigator 6. For details, refer to the ColorNavigator 6 User's Manual (stored on the CD-ROM).</li> </ul>	
Signal Format	DVI	Single Link Dual Link	You can switch the signal type that the monitor can display. To display video signals when using HDMI signal input, set to "Video".
	DisplayPort	RGB RGB/YUV	
	HDMI	Video PC	

# Chapter 5 Troubleshooting


## 5-1. No Picture

Problem	Possible cause and remedy
<b>1. No picture</b> <ul style="list-style-type: none"> <li>Power indicator does not light up.</li> </ul>	<ul style="list-style-type: none"> <li>Check whether the power cord is connected properly.</li> <li>Turn on the main power switch on the rear side of the monitor.</li> <li>Touch .</li> <li>Turn off the main power on the rear side of the monitor, and then turn it on again a few minutes later.</li> </ul>
<ul style="list-style-type: none"> <li>Power indicator is lighting white.</li> </ul>	<ul style="list-style-type: none"> <li>Increase "Brightness" and/or "Gain" in the Setting menu. (See <a href="#">"Color" (page 18)</a>)</li> </ul>
<ul style="list-style-type: none"> <li>Power indicator is lighting orange.</li> </ul>	<ul style="list-style-type: none"> <li>Switch the input signal.</li> <li>Move the mouse or press any key on the keyboard.</li> <li>Check whether the PC is turned on.</li> <li>Turn off the main power on the rear side of the monitor, and then turn it on again.</li> </ul>
<ul style="list-style-type: none"> <li>Power indicator is flashing orange and white.</li> </ul>	<ul style="list-style-type: none"> <li>This problem may occur when a PC is connected via the DisplayPort connector. Connect via the signal cable specified by EIZO, turn off the monitor, and then turn it on again.</li> </ul>
<b>2. The message below appears.</b>	This message appears when the signal is not input correctly even though the monitor is functioning properly.
<ul style="list-style-type: none"> <li>This message appears when no signal is input.</li> </ul> <p>Example:</p> 	<ul style="list-style-type: none"> <li>The message shown left may appear, because some PCs do not output the signal immediately after power-on.</li> <li>Check whether the PC is turned on.</li> <li>Check whether the signal cable is connected properly.</li> <li>Switch the input signal.</li> <li>Turn off the main power on the rear side of the monitor, and then turn it on again.</li> </ul>
<ul style="list-style-type: none"> <li>The message shows that the input signal is out of the frequency specification range.</li> </ul> <p>Example:</p> 	<ul style="list-style-type: none"> <li>Check whether the PC is configured to meet the resolution and vertical scan frequency requirements of the monitor (see <a href="#">"1-4. Compatible Resolutions" (page 10)</a>).</li> <li>Reboot the PC.</li> <li>Change to the appropriate setting using the graphics board's utility. Refer to the User's Manual of the graphics board for details.</li> </ul>

## 5-2. Imaging Problems

Problem	Possible cause and remedy
1. The screen is too bright or too dark.	<ul style="list-style-type: none"><li>• Use "Brightness" in the Setting menu to adjust it. (see "Color" (page 18)). The LCD monitor backlight has a limited life span. If the screen becomes dark or begins to flicker, contact your local EIZO representative.</li></ul>
2. Afterimages appear	<ul style="list-style-type: none"><li>• Afterimages are particular to LCD monitors. Avoid displaying the same image for a long time.</li><li>• Use the screen saver or power saving function to avoid displaying the same image for extended periods of time.</li></ul>
3. Green/red/blue/white dots or defective dots remain on the screen.	<ul style="list-style-type: none"><li>• This is due to LCD panel characteristics and not a malfunction.</li></ul>
4. Interference patterns or pressure marks remain on the screen.	<ul style="list-style-type: none"><li>• Display a white or black image over the entire screen. The symptom may disappear.</li></ul>
5. Noise appears on the screen.	<ul style="list-style-type: none"><li>• When inputting HDCP system signals, normal images may not be displayed immediately.</li></ul>
6. (DisplayPort signal input) When you switch the power back on or return from power save mode, windows or icons may have shifted position.	<ul style="list-style-type: none"><li>• In the Setting menu, set "DP Power Save" to "Off" (see "DP Power Save" (page 28)).</li></ul>
7. (DisplayPort or HDMI input) The screen colors look strange.	<ul style="list-style-type: none"><li>• Try changing "Input Color Format" in the Setting menu (see "Input Color Format" (page 22)).</li><li>• For HDMI signal input, try changing "Signal Format" in the Setting menu (see "Signal Format" (page 28)).</li></ul>
8. The image does not display on the entire screen.	<ul style="list-style-type: none"><li>• Try changing "Picture Expansion" in the Setting menu (see "Picture Expansion" (page 21)).</li><li>• For HDMI signal input, check whether "Signal Format" is set to "PC" in the Setting menu (see "Signal Format" (page 28)).</li></ul>

## 5-3. Other Problems

Problem	Possible cause and remedy
<p><b>1. The Setting menu/Mode menu cannot be displayed</b></p>	<ul style="list-style-type: none"> <li>• Check whether the operation switch lock function works (see “Key Lock” (page 28)).</li> <li>• Operation switches are locked when the main window of ColorNavigator 6 is displayed. Exit the software.</li> </ul>
<p><b>2. The monitor connected with the USB cable is not detected. / USB device connected to the monitor does not work.</b></p>	<ul style="list-style-type: none"> <li>• Check whether the USB cable is connected correctly (see “6-5. Making Use of USB (Universal Serial Bus)” (page 39)).</li> <li>• If a peripheral device is connected to the  port, try checking the "USB CHARGE Port" setting (see “USB CHARGE Port” (page 24)). If it is set to "Charging Only", the peripheral device will not work.</li> <li>• Try changing to a different USB port on the PC.</li> <li>• Try changing to a different USB port on the monitor.</li> <li>• Reboot the PC.</li> <li>• If the peripheral devices work correctly when the PC and peripheral devices are connected directly, contact your local EIZO representative.</li> <li>• Check whether the PC and OS are USB compliant. (For USB compliance of the respective devices, consult their manufacturers.)</li> <li>• Depending on the USB 3.0 host controller that you are using, connected USB devices may not be recognized correctly. Update to the latest USB 3.0 driver provided by each manufacturer, or connect the monitor to the USB 2.0 port.</li> <li>• Check the PC's BIOS setting for USB when using Windows. (Refer to the User's Manual of the PC for details.)</li> </ul>
<p><b>3. Audio is not output.</b></p>	<ul style="list-style-type: none"> <li>• This monitor does not support DisplayPort/HDMI audio signals.</li> </ul>

# Chapter 6 Reference

## 6-1. Attaching the Optional Arm

---

An optional arm (or an optional stand) can be attached by removing the stand section. Please refer to our web site for the corresponding optional arm (or optional stand). <http://www.eizoglobal.com>

---

**Attention**


- When attaching an arm or stand, follow the instructions of their User's Manual.
  - When using another manufacturer's arm or stand, confirm the following in advance and select one conforming to the VESA standard. Use the VESA mounting screws supplied with this product when attaching the arm or stand.
    - Clearance between screw holes: 100 mm × 100 mm
    - Outside dimensions of the VESA mount section of the arm or stand: 122 mm × 122 mm or less
    - Plate thickness: 2.6 mm
    - Must be strong enough to support weight of the monitor unit (excluding the stand) and attachments such as cables.
  - When using an arm or stand, attach it to meet the following tilt angles of the monitor.
    - Up 45°, down 45°
  - Connect the cables after attaching an arm or stand.
  - Do not move the removed stand up and down. Doing so may result in injury or equipment damage.
  - The monitor, arm, and stand are heavy. Dropping them may result in injury or equipment damage.
  - When installing the monitor in portrait mode, turn the monitor screen 90° in clockwise direction.
-



## Attaching the Optional Arm (or Optional Stand)

- 1. To prevent damaging the panel surface, lay the monitor with its panel surface facing down on a soft cloth spread on a stable surface.**
- 2. Remove the stand.**

As shown below, keep the lock button pressed down (1) and slide the stand towards the stand base until it touches (2). Then, lift the stand up (3).

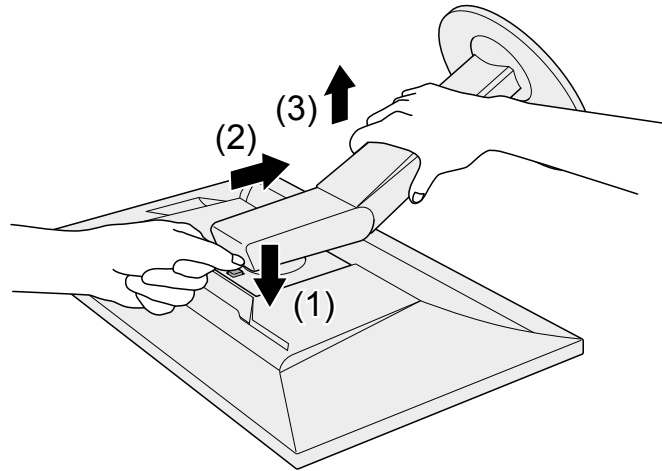


- 3. Attach the arm or stand to the monitor.**

Use the VESA mounting screws supplied with this product when attaching the arm or stand.

## Attaching the original stand

- 1. Remove the fixing screws on the optional arm (or optional stand), and detach the optional arm (or optional stand).**
- 2. To prevent damaging the panel surface, lay the monitor with its panel surface facing down on a soft cloth spread on a stable surface.**
- 3. Attach the original stand.**

As shown below, insert the four tabs on the stand into the square holes on the back panel (1) and slide the stand towards the upper portion of the monitor until it makes a clicking sound (2).

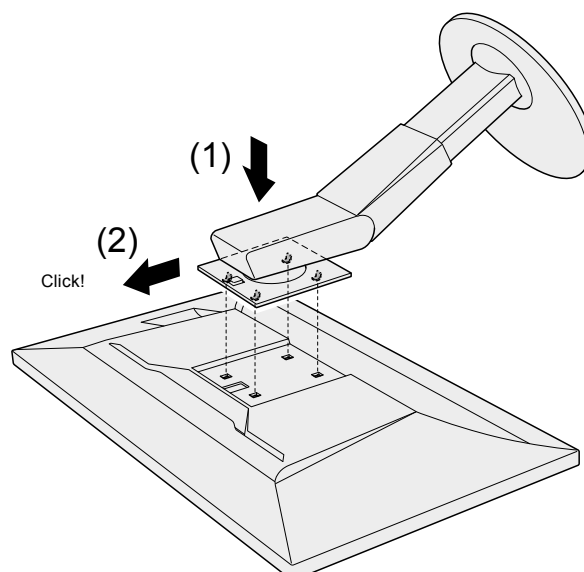


## 6-2. Detaching/Attaching Stand Base


### Detachment procedure

The stand base that was attached during setup can be detached using the following procedures.

- 1. Lay the LCD monitor on a soft cloth spread over on a stable surface with the panel surface facing down.**
- 2. Raise the lever on the bottom of the stand base.**

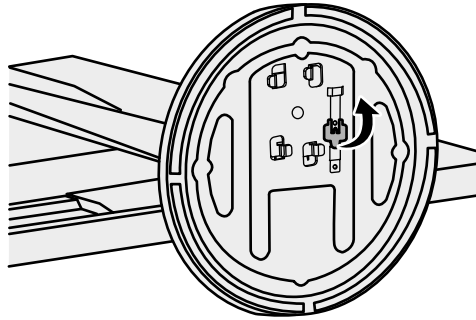


- 3. Turn the stand base in the counterclockwise direction to detach it.**

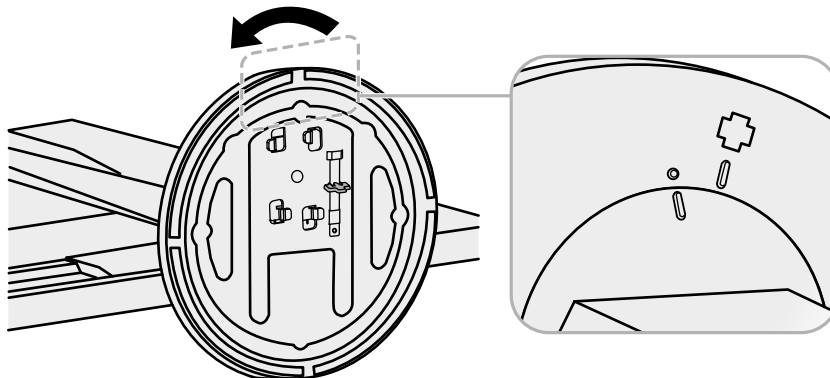


## Attachment procedure

The once removed the stand base can be attached to the monitor again with the following procedures.



- 1. Lay the LCD monitor on a soft cloth spread over on a stable surface with the panel surface facing down.**

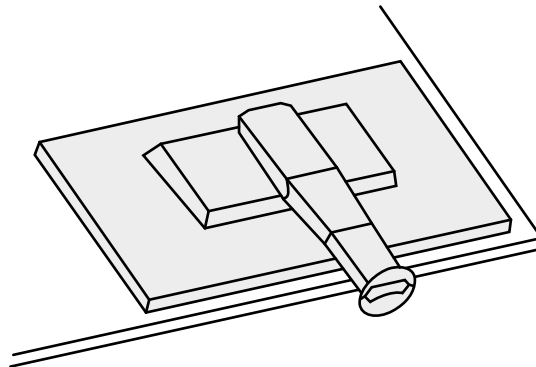

- 2. Attach the stand base onto the stand brace.**

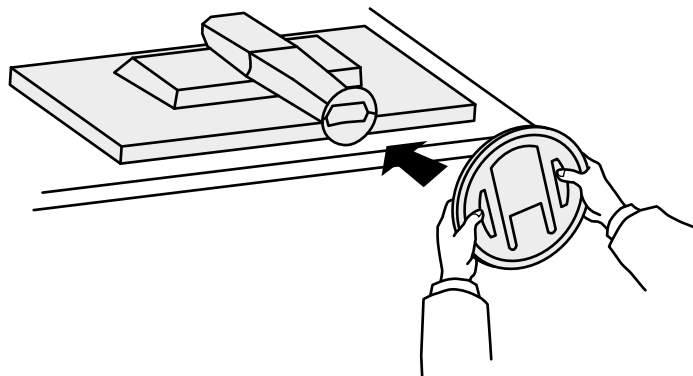

**3. Turn the stand base clockwise until it makes a clicking sound.**

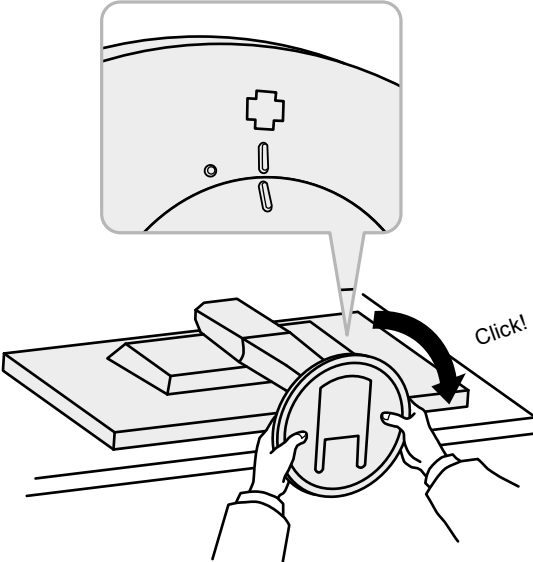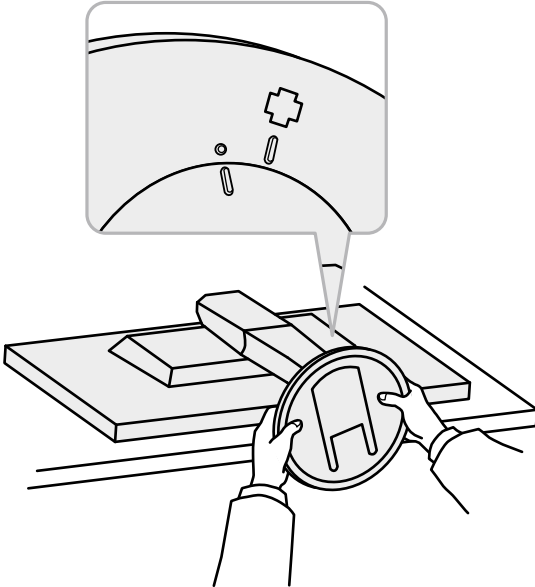


## 6-3. Attaching/Detaching the Cable Holder


A cable holder is supplied with this product. Use the cable holder to organize the cables connected to the monitor.

### Attachment procedure

1. Pass the cables through the cable holder.
2. Close the cable holder.

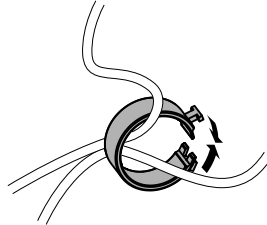


3. While holding the cable holder closed, insert it into the stand.

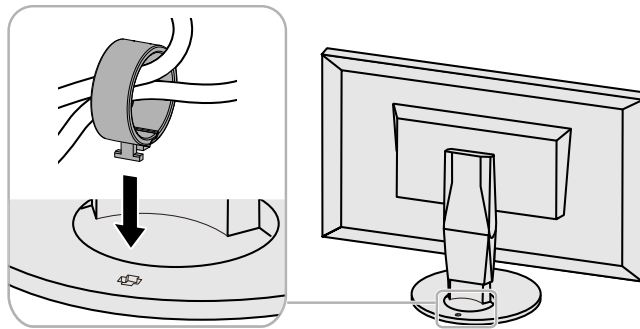


#### Note

- The cable holder can be inserted either perpendicular or parallel to the stand. Change the orientation of the cable holder in line with the direction of the cables.

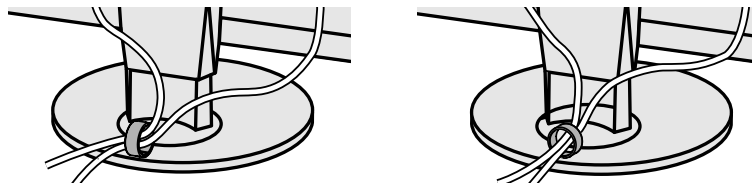

### Detachment procedure


1. Close the cable holder.
2. While holding the cable holder closed, pull it from the stand.

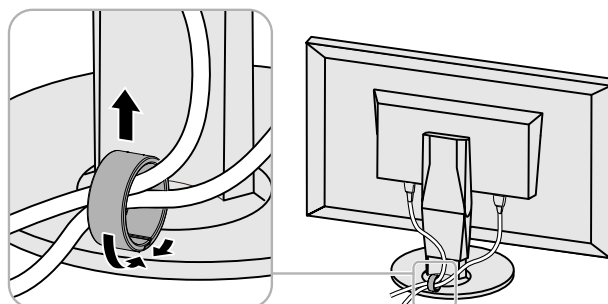


## 6-4. Connecting Multiple External Devices

The product allows you to connect multiple external devices and switch between them for display.

### Connection examples

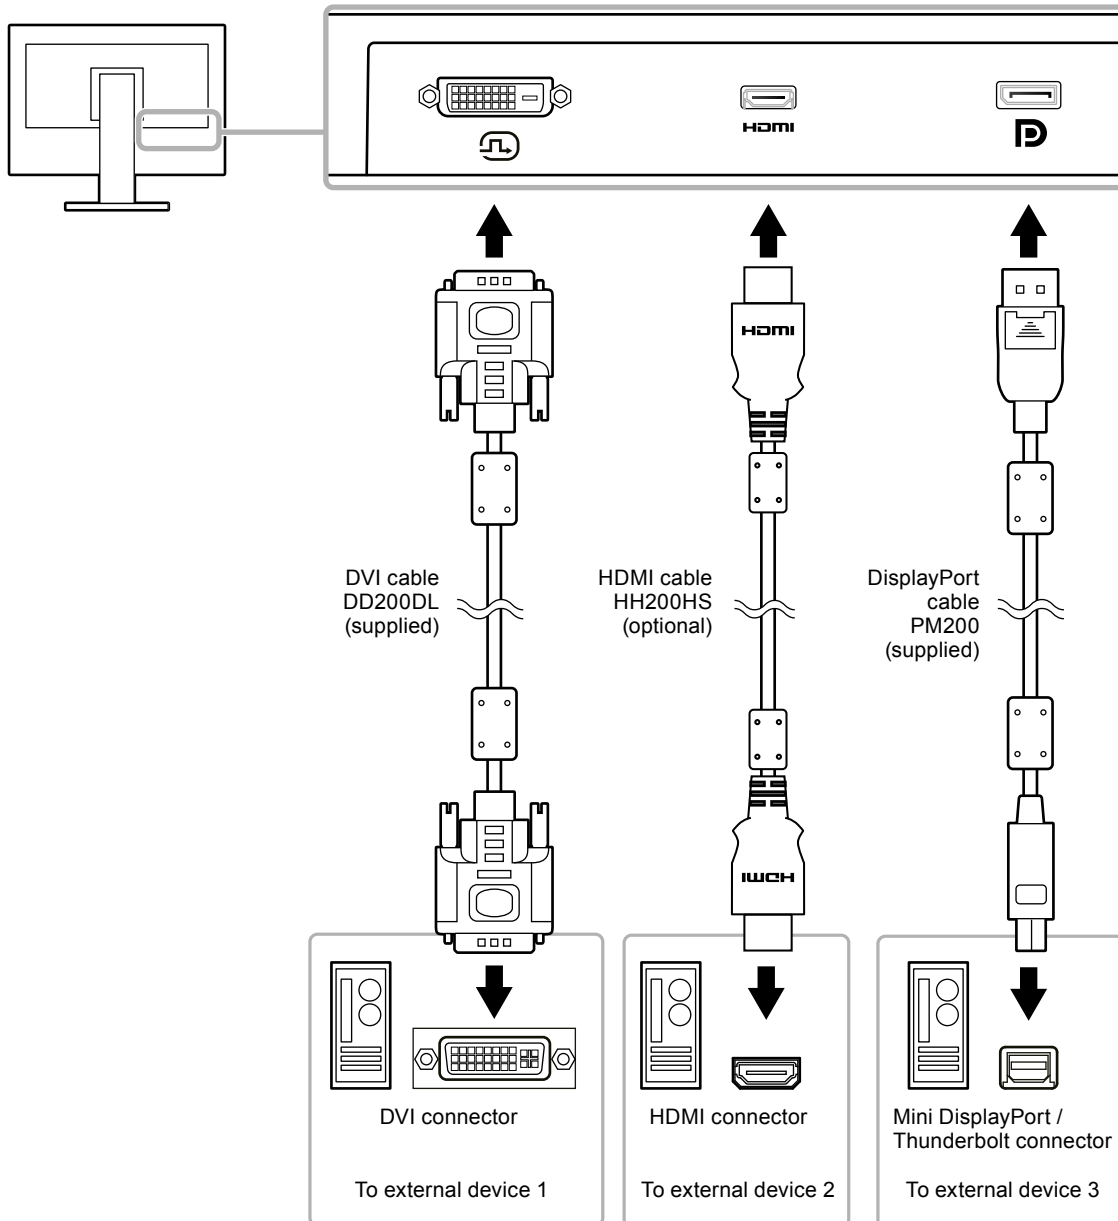

#### Note


- The input signal changes each time the operation switch (  ) on the front of the monitor is touched. The selected input connector name appears at the bottom right corner of the screen.
- This product automatically recognizes the connector through which signals are input and displays images on the screen accordingly. For more information, see [“Auto Input Detection” \(page 23\)](#).

## 6-5. Making Use of USB (Universal Serial Bus)

---

This monitor is equipped with a USB hub. It works as a USB hub when connected to a USB-compatible PC, allowing the connection of peripheral USB devices.


### Note

- This product supports USB 3.0. When connecting peripheral devices that support USB 3.0, high-speed data communication is possible (however, only when the USB cable used to connect the PC and peripheral device is USB 3.0 compliant).
  - The  USB downstream port also supports quick charging. This allows you to recharge your smartphone or tablet in a short period of time. (See “USB CHARGE Port” (page 24))
- 

### ● Required System Environment

- A PC equipped with a USB port
  - Windows 10 / Windows 8.1 / Windows 7, or Mac OS X 10.7.5 or later
  - USB cable (UU200SS (USB 3.0))
- 

### Attention

- This monitor may not work depending on the used PC, OS or peripheral devices. For USB compatibility of peripheral devices, contact their manufactures.
  - When the monitor is in power saving mode, devices connected to the USB downstream port will still work. Therefore, power consumption of the monitor varies depending on the connected devices, even in the power saving mode.
  - When the main power of the monitor is off, a device connected to the USB downstream port will not operate.
  - When the "USB CHARGE Port" setting in "Preferences" is set to "Charging Only", a peripheral device will not work if connected to the  port.
  - Ensure that communication between all peripheral devices connected to the monitor and the PC is ended before switching the "USB CHARGE Port" setting. When the setting is switched, all communication will be temporarily interrupted.
-

## ● Connection Procedure (Setup of USB Function)

1. Connect the monitor first to a PC using the signal cable, and start the PC.
2. Connect the USB cable between the USB downstream port of the PC and USB upstream port 1 of the monitor.


The USB hub function is set up automatically upon connection of the USB cable.

3. Connect the peripheral USB device to the USB downstream port of the monitor.

---



### Note

- In the default settings, USB upstream port 1 is enabled. When connecting two PCs, see [“USB Selection” \(page 25\)](#).
- 

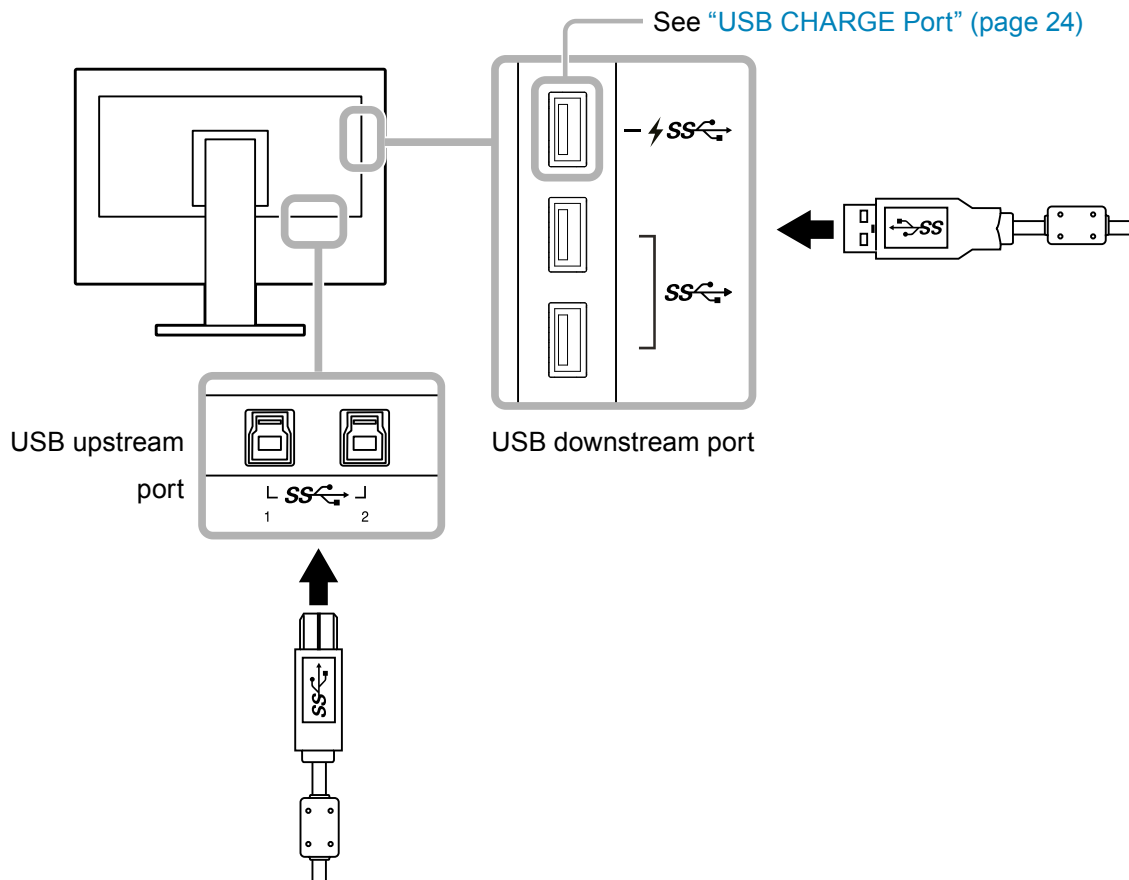




## 6-6. Specifications

LCD Panel	Type	IPS (Anti-Glare)
	Backlight	Wide color gamut LED
	Size	68.5 cm (27.0 inch)
	Resolution	2560 dots × 1440 lines
	Display Size (H × V)	596.7 mm x 335.6 mm
	Pixel Pitch	0.2331 mm x 0.2331 mm
	Display Colors	Approx. 1073.74 million colors (for 10 bit input)
	Viewing Angle (H × V, typical)	178° / 178°
	Recommended Brightness (typical)	120 cd/m <sup>2</sup> or less (Temperature: 5000 K to 6500 K)
	Contrast Ratio (typical)	1000 : 1 (When "DUE Priority" setting is "Brightness")
	Response Time (typical)	Black - White - Black: 12 ms Gray-to-gray: 10 ms
	Color Gamut Display (typical)	Adobe®RGB coverage: 99 %, NTSC ratio 103 %
Video Signals	Input Terminals	DVI-D x 1: Supports 8-bit display (Single Link / Dual Link, HDCP-compatible) HDMI x 1: Supports 8-bit, 10-bit, and 12-bit display* <sup>1</sup> , * <sup>2</sup> (HDCP-compatible) DisplayPort x 1: Supports 8-bit and 10-bit display (HDCP-compatible) *1 The maximum number of display bits for HDMI-input images is 10. *2 Supports 8-bit display when the resolution of the HDMI input signal is 2560 x 1440.
	Horizontal scanning frequency	26 kHz to 89 kHz (DVI, DisplayPort), 15 kHz to 89 kHz (HDMI)
	Vertical scan frequency	23 Hz to 61 Hz (For 720 x 400: 69 Hz to 71 Hz)
	Frame Synchronization mode	23.75 Hz to 30.5 Hz, 47.5 Hz to 61.0 Hz
	Dot clock (Max.)	242 MHz
USB	Port	Upstream port x 2, downstream port x 3 (the  port supports quick charging)
	Standard	USB Specification Rev. 3.0 USB Battery Charging Specification Rev.1.2
	Communication Speed	5 Gbps (super), 480 Mbps (high), 12 Mbps (full), 1.5 Mbps (low)
	Supply Current	Downstream : Max. 900 mA per port Downstream (  port) : Normal: Max. 1.5 A per port, Charging Only: Max. 2.1 A per port
Power	Input	100–240 VAC ±10 %, 50/60 Hz 1.15 A–0.50 A
	Maximum Power Consumption	110 W or less
	Power Save Mode	0.6 W or less (When "DP Power Save" is set to "ON", "USB CHARGE Port" is set to "Normal", and no USB device is connected)
	Standby Mode	0.6 W or less (When "DP Power Save" is set to "ON", "USB CHARGE Port" is set to "Normal", and no USB device is connected)

Physical Specifications	Outside Dimensions	Min. height: 638 mm × 404.1 mm × 245 mm (W x H x D) (Tilt: 0°) Max. height: 638 mm × 564.5 mm × 264 mm (W x H x D) (Tilt: 35°)
	Outside Dimensions (Without Stand)	638 mm × 378.2 mm × 64 mm (W x H x D)
	Net. weight	Approx. 8.9 kg
	Net Weight (Without Stand)	Approx. 6.1 kg
	Height adjustment	155 mm (at tilt of 0°) / 145 mm (at tilt of 35°)
	Tilt	Up 35°, down 5°
	Swivel	344°
	Vertical rotation	90° clockwise
Operating Environment Requirements	Temperature	0 °C to 35 °C
	Humidity	20 % to 80 % R.H. (no condensation)
	Air Pressure	540 hPa to 1060 hPa
Transportation/ Storage Environment Requirements	Temperature	-20 °C to 60 °C
	Humidity	10 % to 90 % R.H. (no condensation)
	Air Pressure	200 hPa to 1060 hPa

# ● Outside Dimensions

Unit: mm

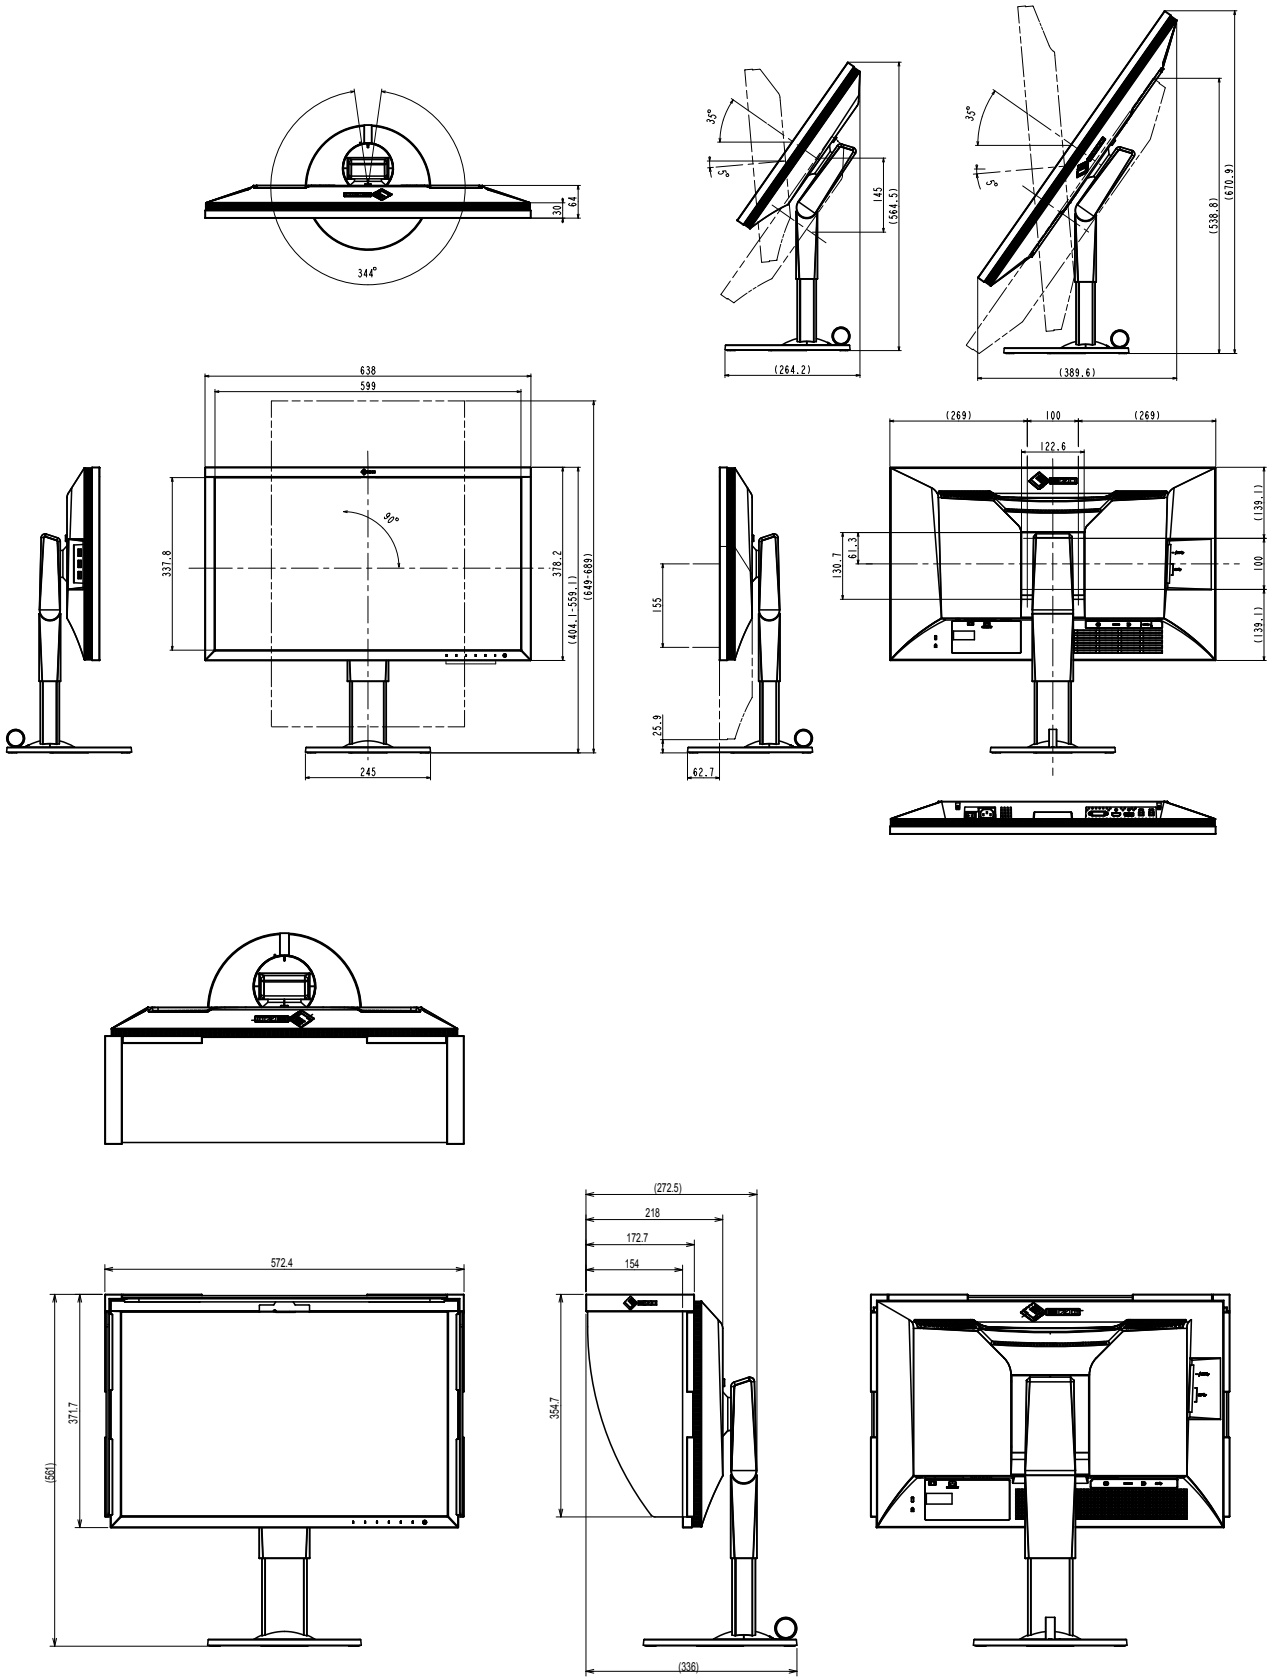

## ● Main Default Settings

Color Mode		Custom
Picture Expansion	DVI input	Aspect Ratio
	DisplayPort input	Aspect Ratio
	HDMI input	Aspect Ratio (When "Auto" is enabled: Auto)
Input Color Format	DisplayPort input	Auto
	HDMI input	Auto (When "Auto" is disabled: RGB)
Input Range	DVI input	Full
	DisplayPort input	Auto
	HDMI input	Auto
Noise Reduction		Off
Auto Input Detection		Off
Menu Rotation		0°
USB CHARGE Port		Normal
Power Save		On
Indicator		4
Beep		On
Languages		English
On-Screen Logo		On
Key Lock		Off
USB Selection		USB-1
Signal Format	DVI	Dual Link
	DisplayPort	RGB
	HDMI	PC

## ● Accessories

Signal cable	HH200HS (HDMI - HDMI) PP200 (DisplayPort - DisplayPort)
--------------	--

For the latest information about the accessories, refer to our web site. <http://www.eizoglobal.com>

# Chapter 7 Glossary

## Adobe®RGB

This is a definition of the practical RGB color space proposed by Adobe Systems in 1998. The color reproduction range (color gamut) is broader than sRGB, and is highly adaptable to such fields as printing etc.

## Color Space

YUV and RGB, etc. are available. YUV expresses the color by using the luminance (Y), the color difference of Blue (U), and the color difference of Red (V).

RGB does this by using the gradation of the 3 colors, Red (R), Green (G), and Blue (B).

## DisplayPort

This is the interface standard for image signals standardized in accordance with VESA. It was developed with the aim of replacing the conventional DVI and analog interfaces, and it can transmit high resolution signals and sound signals, which DVI does not support. The standard size and mini size connectors have been standardized.

## DVI (Digital Visual Interface)

DVI is a digital interface standard. DVI allows direct transmission of the PC's digital data without loss.

This adopts the TMDS transmission system and DVI connectors. There are two types of DVI connectors. One is a DVI-D connector for digital signal input only. The other is a DVI-I connector for both digital and analog signal inputs.

## Gain

This is used to adjust each color parameter for red, green and blue. An LCD monitor displays the color by the light passing through the panel color filter. Red, green and blue are the three primary colors. All the colors on the screen are displayed by combining these three colors. The color tone can be changed by adjusting the light intensity (volume) passing through each color's filter.

## Gamma

Generally, the monitor brightness varies nonlinearly with the input signal level, which is called "Gamma Characteristic". When the gamma value is low, the middle tone area is displayed brighter, and darker when high. Changes to the gamma value will not affect contrast. A gamma value appropriate for the display content should be selected.

## HDCP (High-bandwidth Digital Content Protection)

Digital signal coding system developed to copy-protect the digital contents, such as video, music, etc.

This helps to transmit the digital contents safely by coding the digital contents sent via the DVI or HDMI connector on the output side and decoding them on the input side.

Any digital contents cannot be reproduced if both of the equipments on the output and input sides are not applicable to HDCP system.

## **HDMI (High-Definition Multimedia Interface)**

HDMI is a digital interface standard, developed for consumer electrical appliance or AV device. This standard is issued on the basis of the DVI standard which is one of an interface specification for the connection between a PC and a monitor. The projected image, sound and control signal without compressed enable to be transmitted with one cable.

## **L\***

L\* is a lightness value based on the CIELUV and CIELAB color spaces. CIELUV and CIELAB are color spaces that describe the relationship between color and human vision, in which L\* corresponds to perceived brightness.

## **Resolution**

The LCD panel consists of numerous pixels of specified size, which are illuminated to form images. This monitor consists of horizontal 2560 pixels and 1440 vertical pixels. At a resolution of 2560 × 1440, all pixels are illuminated as a full screen (1:1).

## **sRGB (Standard RGB)**

International standard for color reproduction and color space among peripheral devices (such as monitors, printers, digital cameras, scanners). As a form of simple color matching for the Internet, colors can be displayed using tones close to those of the transmission and reception devices.

## **Temperature**

Color temperature is a method to measure the white color tone, generally indicated in degrees Kelvin. The screen becomes reddish at a low temperature, and bluish at a high temperature, like the flame temperature.

5000 K: Slightly reddish white

6500 K: White referred to as daylight-balanced color

9300 K: Slightly bluish white

# Appendix

## Trademark

The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing, LLC in the United States and other countries.

The DisplayPort Compliance Logo and VESA are registered trademarks of the Video Electronics Standards Association.

The SuperSpeed USB Trident logo is a registered trademark of USB Implementers Forum, Inc.



Kensington and Microsaver are registered trademarks of ACCO Brands Corporation.

Thunderbolt is a trademark of Intel Corporation in the United States and/or other countries.

Microsoft, Windows and Windows Vista are registered trademarks of Microsoft Corporation in the United States and other countries.

Adobe is a registered trademark of Adobe Systems Incorporated in the United States and other countries.

Apple, Mac OS, Macintosh and ColorSync are registered trademarks of Apple Inc.

EIZO, the EIZO Logo, ColorEdge, DuraVision, FlexScan, FORIS, RadiCS, RadiForce, RadiNET, Raptor and ScreenManager are registered trademarks of EIZO Corporation in Japan and other countries.

ColorEdge Tablet Controller, ColorNavigator, CuratOR, EcoView NET, EIZO EasyPIX, EIZO Monitor Configurator, EIZO ScreenSlicer, G-Ignition, i•Sound, Quick Color Match, Re/Vue, Screen Administrator and UniColor Pro are trademarks of EIZO Corporation.

All other company and product names are trademarks or registered trademarks of their respective owners.

## License / Copyright

A round gothic bold bit map font designed by Ricoh is used for the characters displayed on this product.

# FCC Declaration of Conformity

For U.S.A. , Canada, etc. (rated 100-120 Vac) Only

## FCC Declaration of Conformity

We, the Responsible Party

EIZO Inc.

5710 Warland Drive, Cypress, CA 90630

Phone: (562) 431-5011

declare that the product

Trade name: EIZO

Model: ColorEdge CS2730

is in conformity with Part 15 of the FCC Rules. Operation of this product is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

- \* Reorient or relocate the receiving antenna.
- \* Increase the separation between the equipment and receiver.
- \* Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- \* Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### Note

Use the attached specified cable below or EIZO signal cable with this monitor so as to keep interference within the limits of a Class B digital device.

- AC Cord
- Shielded Signal Cable (enclosed)

## Canadian Notice

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.



# LIMITED WARRANTY

## LIMITED WARRANTY

EIZO Corporation (hereinafter referred to as “**EIZO**”) and distributors authorized by EIZO (hereinafter referred to as the “**Distributors**”) warrant, subject to and in accordance with the terms of this limited warranty (hereinafter referred to as the “**Warranty**”), to the original purchaser (hereinafter referred to as the “**Original Purchaser**”) who purchased the product specified in this document (hereinafter referred to as the “**Product**”) from EIZO or Distributors, that EIZO and Distributors shall, at their sole discretion, either repair or replace the Product at no charge if the Original Purchaser becomes aware within the Warranty Period (defined below) that the Product malfunctions or is damaged in the course of normal use of the Product in accordance with the description in the instruction manual attached to the Product (hereinafter referred to as the “**User’s Manual**”).

The period of this Warranty is limited to (i) five (5) years from the date of purchase of the Product; or, limited to the expiration of (ii) 30,000 hours of its use of the Product (hereinafter referred to as the “**Warranty Period**”). EIZO and Distributors shall bear no liability or obligation with regard to the Product in relation to the Original Purchaser or any third parties other than as provided under this Warranty.

EIZO and Distributors will cease to hold or store any parts (excluding design parts) of the Product upon the expiration of five (5) years after the production of such parts is discontinued. In repairing the monitor, EIZO and Distributors will use renewal parts which comply with our QC standards. If the unit cannot be repaired due to its condition or the stockout of a relevant part, EIZO and Distributors may offer the replacement by a product with equivalent performance instead of repairing it.

The Warranty is valid only in the countries or territories where the Distributors are located. The Warranty does not restrict any legal rights of the Original Purchaser.

Notwithstanding any other provision of this Warranty, EIZO and Distributors shall have no obligation under this Warranty whatsoever in any of the cases as set forth below:

- (a) Any defect of the Product caused by freight damage, modification, alteration, abuse, misuse, accident, incorrect installation, disaster, faulty maintenance and/or improper repair by third party other than EIZO and Distributors;
- (b) Any incompatibility of the Product due to possible technical innovations and/or regulations;
- (c) Any deterioration of the sensor;
- (d) Any deterioration of display performance caused by the deterioration of expendable parts such as the LCD panel and/or backlight, etc. (e.g. changes in brightness, changes in brightness uniformity, changes in color, changes in color uniformity, defects in pixels including burnt pixels, etc.);
- (e) Any defect of the Product caused by external equipment;
- (f) Any defect of the Product on which the original serial number has been altered or removed;
- (g) Any normal deterioration of the product, particularly that of consumables, accessories, and/or attachments (e.g. buttons, rotating parts, cables, User’s Manual, etc.); and
- (h) Any deformation, discoloration, and/or warp of the exterior of the product including that of the surface of the LCD panel.

To obtain service under the Warranty, the Original Purchaser must deliver the Product, freight prepaid, in its original package or other adequate package affording an equal degree of protection, assuming the risk of damage and/or loss in transit, to the local Distributor. The Original Purchaser must present proof of purchase of the Product and the date of such purchase when requesting services under the Warranty.

The Warranty Period for any replaced and/or repaired product under this Warranty shall expire at the end of the original Warranty Period.

EIZO OR DISTRIBUTORS ARE NOT RESPONSIBLE FOR ANY DAMAGE TO, OR LOSS OF, DATA OR OTHER INFORMATION STORED IN ANY MEDIA OR ANY PART OF ANY PRODUCT RETURNED TO EIZO OR DISTRIBUTORS FOR REPAIR.

EIZO AND DISTRIBUTORS MAKE NO FURTHER WARRANTIES, EXPRESSED OR IMPLIED, WITH RESPECT TO THE PRODUCT AND ITS QUALITY, PERFORMANCE, MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR USE. IN NO EVENT SHALL EIZO OR DISTRIBUTORS BE LIABLE FOR ANY INCIDENTAL, INDIRECT, SPECIAL, CONSEQUENTIAL OR OTHER DAMAGE WHATSOEVER (INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS OF PROFIT, BUSINESS INTERRUPTION, LOSS OF BUSINESS INFORMATION, OR ANY OTHER PECUNIARY LOSS) ARISING OUT OF THE USE OR INABILITY TO USE THE PRODUCT OR IN ANY CONNECTION WITH THE PRODUCT, WHETHER BASED ON CONTRACT, TORT, NEGLIGENCE, STRICT LIABILITY OR OTHERWISE, EVEN IF EIZO OR DISTRIBUTORS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. THIS EXCLUSION ALSO INCLUDES ANY LIABILITY WHICH MAY ARISE OUT OF THIRD PARTY CLAIMS AGAINST THE ORIGINAL PURCHASER. THE ESSENCE OF THIS PROVISION IS TO LIMIT THE POTENTIAL LIABILITY OF EIZO AND DISTRIBUTORS ARISING OUT OF THIS LIMITED WARRANTY AND/OR SALES.

# Recycling Information

---

## Recycling Information

This product, when disposed of, is supposed to be collected and recycled according to your country's legislation to reduce environmental burden. When you dispose of this product, please contact a distributor or an affiliate in your country.

The contact addressees are listed on the EIZO website below.

<http://www.eizoglobal.com>

For recycling information for customers in Switzerland, please refer to the following website.

<http://www.swico.ch>

## Informationen zum Thema Recycling

Dieses Produkt muss gemäß den Vorschriften Ihres Landes zur Entlastung der Umwelt recyclet werden. Wenden Sie sich bei der Entsorgung dieses Produkts an einen Verteiler oder eine Tochtergesellschaft in Ihrem Land.

Die Adressen zur Kontaktaufnahme sind auf der unten angegebenen Website von EIZO aufgeführt.

<http://www.eizoglobal.com>

Kunden in der Schweiz entnehmen Informationen zum Recycling der folgenden Website:

<http://www.swico.ch>

## Informations sur le recyclage

Ce produit doit être jeté aux points de collecte prévus à cet effet et recyclé conformément à la législation de votre pays, afin de réduire l'impact sur l'environnement. Lorsque vous jetez ce produit, veuillez contacter un distributeur ou une société affiliée de votre pays.

Les adresses des distributeurs sont répertoriées sur le site Web EIZO ci-dessous.

<http://www.eizoglobal.com>

Pour les clients en Suisse, veuillez consulter le site Web suivant afin d'obtenir des informations sur le recyclage.

<http://www.swico.ch>

## Información sobre reciclaje

Este producto debe desecharse y reciclarse según la legislación del país para reducir el impacto medioambiental. Cuando desee deshacerse de este producto, póngase en contacto con un distribuidor o una filial de su país.

Encontrará las direcciones de contacto en el sitio web de EIZO que se indica a continuación.

<http://www.eizoglobal.com>

## Informazioni sul riciclaggio

Per lo smaltimento e il riciclaggio del presente prodotto, attenersi alle normative vigenti nel proprio paese per ridurre l'impatto ambientale. Per lo smaltimento, rivolgersi ad un distributore o un affiliato presenti nel proprio paese.

Gli indirizzi sono elencati nel sito Web EIZO riportato di seguito.

<http://www.eizoglobal.com>

Per informazioni sul riciclaggio per i clienti in Svizzera, consultare il sito Web riportato di seguito.

<http://www.swico.ch>

## Återvinningsinformation

När denna produkt kasseras ska den hanteras och återvinnas enligt landets föreskrifter för att reducera miljöpåverkan. När du kasserar produkten ska du kontakta en distributör eller representant i ditt land.

Kontaktadresserna listas på EIZO-webbplatsen nedan.

<http://www.eizoglobal.com>

## Πληροφορίες ανακύκλωσης

Το προϊόν αυτό, όταν απορρίπτεται, πρέπει να συλλέγεται και να ανακυκλώνεται σύμφωνα με τη νομοθεσία της χώρας σας έτσι ώστε να μην επιβαρύνει το περιβάλλον. Για να απορρίψετε το προϊόν, επικοινωνήστε με έναν αντιπρόσωπο ή μια θυγατρική εταιρεία στη χώρα σας.

Οι διευθύνσεις επικοινωνίας αναγράφονται στην τοποθεσία web της EIZO παρακάτω.

<http://www.eizoglobal.com>

## Сведения по утилизации

По истечении срока службы данного продукта его следует принести на сборный пункт и утилизировать в соответствии с действующими предписаниями в вашей стране, чтобы уменьшить вредное воздействие на окружающую среду. Прежде чем выбросить данный продукт, обратитесь к дистрибьютору или в местное представительство компании в вашей стране.

Контактные адреса можно найти на веб-узле EIZO.

<http://www.eizoglobal.com>

## Informatie over recycling

Wanneer u dit product wilt weggooien, moet het uit milieu-overwegingen worden verzameld en gerecycled volgens de betreffende wetgeving van uw land. Wanneer u dit product wilt weggooien, moet u contact opnemen met een distributeur of een partner in uw land.

De contactadressen worden vermeld op de volgende EIZO-website.

<http://www.eizoglobal.com>

## Informação sobre reciclagem

Este produto, quando o deitar fora, deve ser recolhido e reciclado de acordo com a legislação do seu país para reduzir a poluição. Quando deitar fora este produto, contacte um distribuidor ou uma filial no seu país.

Os endereços de contacto estão listados no website do EIZO, abaixo.

<http://www.eizoglobal.com>

## Oplysninger om genbrug

Denne produkt forventes ved bortskaffelse at blive indsamlet og genbrugt i overensstemmelse med lovgivningen i dit land for at reducere belastningen af miljøet. Når du bortskaffer denne produkt, skal du kontakte en distributør eller et tilknyttet selskab i dit land.

Adresserne på kontaktpersonerne er angivet på EIZO's websted nedenfor.

<http://www.eizoglobal.com>

## Kierrätystä koskevia tietoja

Tuote tulee hävittää kierrätämällä maan lainsäädännön mukaisesti ympäristön kuormittumisen vähentämiseksi. Kun hävität tuotteen, ota yhteyttä jälleenmyyjään tai tytäryhtiöön maassasi.

Yhteystiedot löytyvät EIZOn Internet-sivustolta.

<http://www.eizoglobal.com>

## Wykorzystanie surowców wtórnych

Ten produkt po zużyciu powinien być zbierany i przetwarzany zgodnie z krajowymi przepisami dotyczącymi ochrony środowiska. Wyrzucając ten produkt, należy skontaktować się z lokalnym dystrybutorem lub partnerem. Adresy kontaktowe można znaleźć we wskazanej poniżej witrynie internetowej firmy EIZO.

<http://www.eizoglobal.com>

## Informace o recyklaci

Při likvidaci produktu musí být produkt vyzvednut a recyklován podle zákonů příslušné země, aby nedocházelo k zatěžování životního prostředí. Zbavujete-li se produktu, kontaktujte distributora nebo pobočku ve své zemi. Kontaktní adresy jsou uvedeny na následující webové stránce společnosti EIZO.  
<http://www.eizoglobal.com>

## Ringlussevõtu alane teave

Keskkonnakoormuse vähendamiseks tuleks kasutatud tooted kokku koguda ja võtta ringlusse vastavalt teie riigi seadustele. Kui kõrvaldate käesoleva toote, võtke palun ühendust turustaja või filiaaliga oma riigis. Kontaktisikud on toodud EIZO veebilehel järgmisel aadressil:  
<http://www.eizoglobal.com>

## Újrahasznosítási információ

Jelen terméket, amikor eldobjuk, az illető ország törvényei alapján kell összegyűjteni és újrahasznosítani, hogy csökkentsük a környezet terhelését. Amikor ezt a terméket eldobja, kérjük lépjen kapcsolatba egy országon belüli forgalmazóval vagy társvállalkozással.  
A kapcsolat címei az EIZO alábbi weboldalán találhatók felsorolva:  
<http://www.eizoglobal.com>

## Podatki o recikliranju

Ob koncu uporabe odslužen izdelek izročite na zbirno mesto za recikliranje v skladu z okoljevarstveno zakonodajo vaše države. Prosimo, da se pri odstranjevanju izdelka obrnete na lokalnega distributerja ali podružnico.  
Kontaktne naslovi so objavljeni na spodaj navedenih spletnih straneh EIZO:  
<http://www.eizoglobal.com>

## Informácie o recyklácii

Pri likvidácii musí byť tento výrobok recyklovaný v súlade s legislatívou vašej krajiny, aby sa znížilo zaťaženie životného prostredia. Keď sa chcete zbaviť tohto výrobku, kontaktujte prosím distribútora alebo pobočku vo vašej krajine.  
Zoznam kontaktných adries je uvedený na nasledovnej webovej stránke firmy EIZO:  
<http://www.eizoglobal.com>

## Pārstrādes informācija

Utilizējot šo produktu, tā savākšana un pārstrāde veicama atbilstoši jūsu valsts likumdošanas prasībām attiecībā uz slodzes uz vidi samazināšanu. Lai veiktu šī produkta utilizāciju, sazinieties ar izplatītāju vai pārstāvniecību jūsu valstī.  
Kontaktadrese ir norādītas zemāk minētajā EIZO tīmekļa vietnē.  
<http://www.eizoglobal.com>

## Informacja apie gražinamąjį perdirbimą

Šalinant (išmetant) šiuos gaminius juos reikia surinkti ir perdirbti gražinamuoju būdu pagal jūsų šalies teisės aktus, siekiant sumažinti aplinkos teršimą. Kai reikia išmesti šį gaminį, kreipkitės į jūsų šalyje veikiančią gaminių pardavimo atstovybę arba jos filiaalą.  
Kontaktiniai adresatai nurodyti EIZO interneto svetainėje.  
<http://www.eizoglobal.com>

## Информация относно рециклиране

При изхвърлянето на този продукт се предлага събирането и рециклирането му съобразно законите на вашата страна за да се намали замърсяването на околната среда. Когато искате да се освободите от този продукт, моля свържете се с търговския му представител или със съответните органи отговарящи за това във вашата страна.

Данните за връзка с нас са описани на следния Интернет сайт на EIZO:  
<http://www.eizoglobal.com>

## Informație referitoare la reciclare

Acest produs, când debarasat, trebuie colectat și reciclat conform legislației țării respective ca să reducem sarcina mediului. Când se debarasează de acest produs, vă rugăm să contactați un distribuitor sau un afiliat al țării respective.

Adresele de contact le găsiți pe pagina de web al EIZO:  
<http://www.eizoglobal.com>

## معلومات عن إعادة التدوير

عند التخلص من هذا المنتج، من الضروري تجميعه وإعادة تدويره وفقاً للقوانين المتبعة في بلدك لتقليل العبء المسلط على البيئة. عندما تتخلص من هذا المنتج، يرجى الاتصال بموزع أو طرف متنسب إليه في بلدك. عناوين الاتصال مدرجة في موقع ايزو EIZO ادناه على شبكة الانترنت.

<http://www.eizoglobal.com>

## Geri Dönüşüm Bilgisi

Bu ürünün, atılacağı zaman, ülkenizin çevre kirliliğinin azaltılması konusundaki mevzuatına göre toplanması ve yeniden değerlendirilmesi gerekmektedir. Ürünü atacağınız zaman lütfen ülkenizdeki bir distribütör veya ilgili kuruluşla temasa geçiniz.

İrtibat adresleri aşağıdaki EIZO web sitesinde verilmiştir.  
<http://www.eizoglobal.com>

