



# Instruction Manual

## DuraVision® FDF2711W-IP

Color LCD Monitor

Software Version 5.4

### Important

Please read this "Instruction Manual", "Installation Manual", and "Setup Manual" carefully to familiarize yourself with safe and effective usage.

- 
- For the latest product information including the "Instruction Manual", refer to our web site :

[www.eizoglobal.com](http://www.eizoglobal.com)

---

## Related Manuals

|   |   |
|---|---|
| <b>Setup Manual</b>                                   | Describes precautions and procedures for connecting network cameras and for displaying camera images on the monitor. (Installation and initialization guidance) |
| <b>Installation Manual</b> <sup>*1</sup>              | Describes network camera registration, function settings, and system settings. (Detail settings guidance)   |
| <b>Instruction Manual (this manual)</b> <sup>*1</sup> | Describes operation of live image screen menus. (Operation guidance)  |

<sup>\*1</sup> The Instruction Manual and Installation Manual for the latest software version used can be obtained from our web site. Select "Manuals" from "Support", enter "FDF2711W-IP" in the "Enter model name" box, and click "Search".

[www.eizoglobal.com](http://www.eizoglobal.com)

Installation of Adobe® Acrobat® Reader® is required.

This product has been adjusted specifically for use in the region to which it was originally shipped. If operated outside this region, the product may not perform as stated in the specifications.

No part of this manual may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, or otherwise, without the prior written permission of EIZO Corporation. EIZO Corporation is under no obligation to hold any submitted material or information confidential unless prior arrangements are made pursuant to EIZO Corporation's receipt of said information. Although every effort has been made to ensure that this manual provides up-to-date information, please note that EIZO monitor specifications are subject to change without notice.

# Cleaning

---

The stains on the cabinet and LCD panel surface can be removed by moistening part of a soft cloth with water.

---

**Attention**

- Chemicals such as alcohol and antiseptic solution may cause gloss variation, tarnishing, and fading of the cabinet or LCD panel, and also quality deterioration of the image.
- Never use thinner, benzine, wax, or abrasive cleaner as they may damage the cabinet or LCD panel surface.

---

**Note**

- It is recommended that ScreenCleaner (available as an option) be used to clean the cabinet and LCD panel surface.
- 

## To use the monitor comfortably

---

- An excessively dark or bright screen may affect your eyes. Adjust the brightness of the monitor according to the environmental conditions.
- Staring at the monitor for a long time tires your eyes. Take a 10-minute rest every hour.

# CONTENTS


|   |          |
|---|----------|
| Cleaning .....  | 3        |
| To use the monitor comfortably .....                      | 3        |
| <b>CONTENTS .....</b>                                     | <b>4</b> |
| <b>Chapter 1 Product Overview .....</b>                   | <b>5</b> |
| 1-1. System Configuration .....                           | 5        |
| <b>Chapter 2 Turning On / Off the Power .....</b>         | <b>6</b> |
| 2-1. Turning On the Power.....                            | 6        |
| 2-2. Turning Off the Power.....                           | 6        |
| <b>Chapter 3 Operating the System .....</b>               | <b>7</b> |
| 3-1. Live Image Screen .....                              | 7        |
| ● Basic menu operations.....                              | 8        |
| 3-2. Logging In.....                                      | 10       |
| 3-3. Setting Screen Display.....                          | 12       |
| ● To change over the screen layout .....                  | 12       |
| ● To change over the page displayed on<br>the screen..... | 13       |
| ● To switch camera image display positions.....           | 14       |
| 3-4. Operating Network Cameras .....                      | 15       |
| ● Before operation.....                                   | 15       |
| ● To operate network cameras .....                        | 16       |

# Chapter 1 Product Overview

This product is a color LCD monitor capable of displaying images from a maximum of 32 network cameras<sup>\*1</sup>.

<sup>\*1</sup> A type of camera which converts images into network signals and transmits the signals.

## 1-1. System Configuration

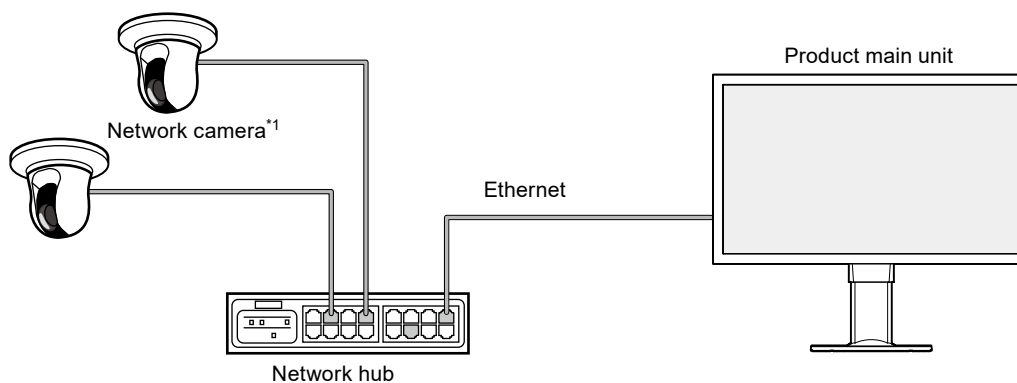

<sup>\*1</sup> Up to 48 network cameras can be registered.

## Chapter 2 Turning On / Off the Power

### 2-1. Turning On the Power

#### 1. Turn on the main power switch on the back of the monitor.

The main power switch is turned on by factory settings.

#### 2. Press on the front of the monitor.

The power indicator lights up blue and the live image screen is displayed.

(For details on the live image screen, refer to [“3-1. Live Image Screen” \(page 7\)](#).)

---

**Attention**

- It takes approximately one minute for the live image screen to be displayed after the main power is turned on. (A rotating bar indicating startup is displayed.) Do not turn off the monitor during startup.
  - When there are no registered network cameras, the “Not Registered” message is displayed in the network camera image display area.
- 

### 2-2. Turning Off the Power


#### 1. Turn off the main power switch on the back of the monitor.

# Chapter 3 Operating the System

This product can be operated using a USB mouse, USB keyboard, or joystick.  
This chapter describes operation using a USB mouse.

## Attention


- Please connect a USB mouse, USB keyboard, or joystick to the USB downstream port in advance.

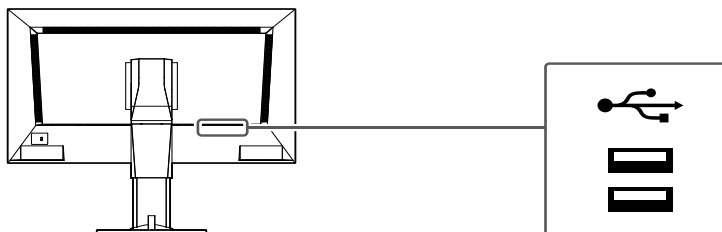



## 3-1. Live Image Screen

Turn on the power to the monitor to display images from the network camera(s). Menus are displayed around the image.

Press **FULL** to hide the menus and display a full-screen image. To display the menus again, click any place on the screen.

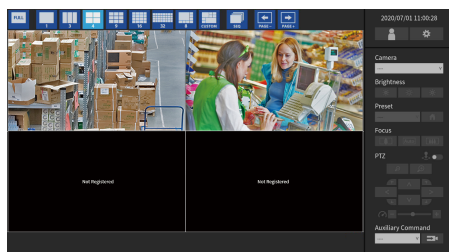

Live Image Screen  
(Image and menu)

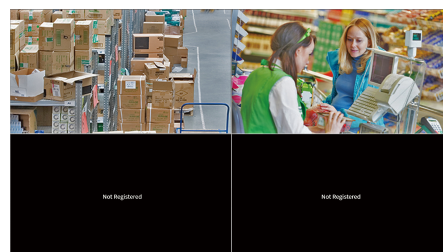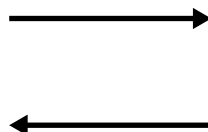

Live Image Screen  
(Image only)


## Note

- This switching can be executed from the Web browser. For information on operation from a Web browser, refer to the "Installation Manual".

## ● Basic menu operations

The menu is used to set display settings of the image display area and to set the settings of the system and network cameras.

### Screen Layout

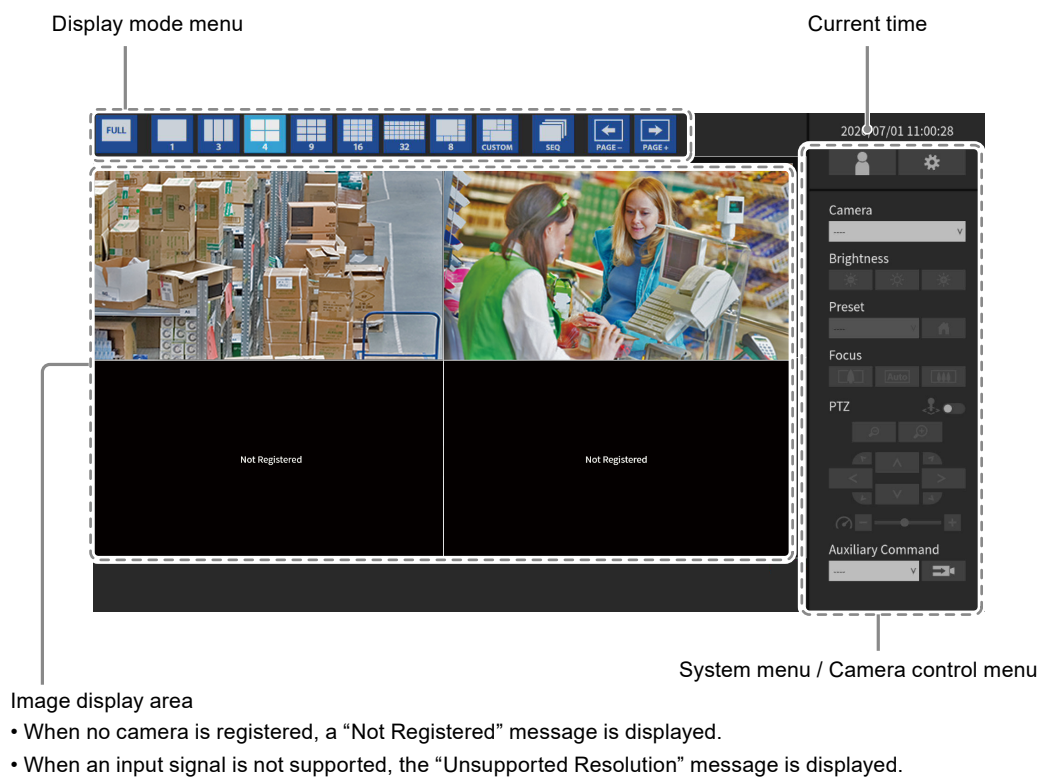

---





#### **Attention**

- When sequence display is enabled, the camera control menu is inoperable.
-



## Display mode menu

Camera images displayed on the live screen can be operated. With the Enterprise edition, the icons displayed can be changed from the setting screen. For details, see the “Installation Manual”.

| Display mode menu<br>(Default settings)   | Shortcut key      | Details  |
|---|-------------------|--|
|  | F                 | Displays or hides the menu.  |
|  | L                 | Changes the display layout of the images.  |
|  | S                 | Turns the sequence function (function that switches the pages to be displayed on the image display area at regular intervals) on or off. |
|  | PageDown / PageUp | Switches the pages to be displayed on the image display area.  |

# 3-2. Logging In

## Attention


- The operable range differs according to the user account level for accessing this product.  
Levels include “LIVE”, “CAMERA CONTROL”, and “ADMIN”. The operable range for each level is as shown below.  
(√: Operable, -: Inoperable)

| Level \ Operation | Display mode menu | System menu     |                 | Switching camera image display positions |
|-------------------|-------------------|-----------------|-----------------|--|
|                   |                   | Login operation | System settings |  |
| LIVE              | √                 | √               | -               | -  |
| CAMERA CONTROL    | √                 | √               | -               | √  |
| ADMIN             | √                 | √               | √               | √  |

- When the power is turned on and after logoff, the user level is “LIVE”.
- For information on setting user levels, refer to the “Installation Manual”.

1. Select  (Login).

The login screen is displayed.

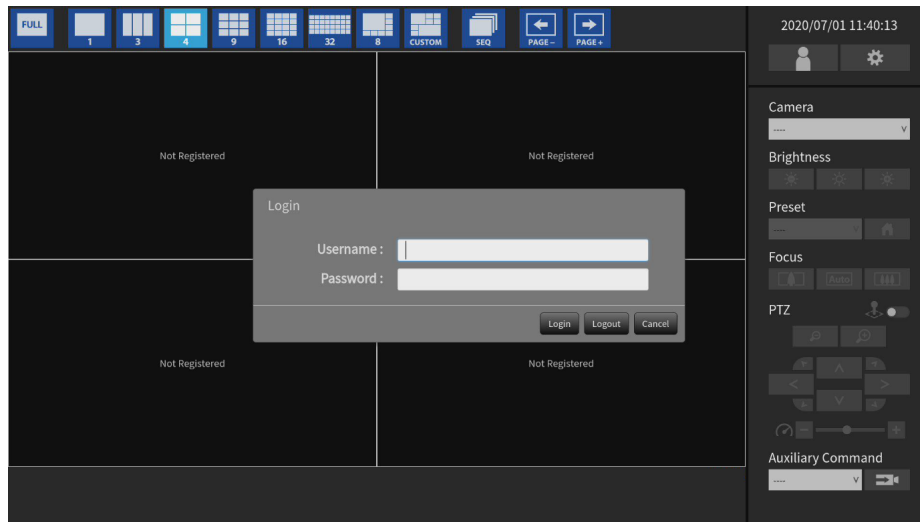

2. Enter “Username” and “Password”.

Please contact the system administrator about the username and password.


## Note

- When the “Account Type” is set to “LDAP”, you can temporarily change the account type when logging in by checking “Allow choosing of account type on the login dialog.” under “LDAP” in advance.

## Entering characters

- When entering using a USB mouse  
Clicking an item that requires characters to be input, such as a text box, will display a software keyboard. When the focus is moved out of the software keyboard, the software keyboard is hidden.
- When entering using a USB keyboard  
Typed characters are entered in the text box.

### 3. Select “Login”.

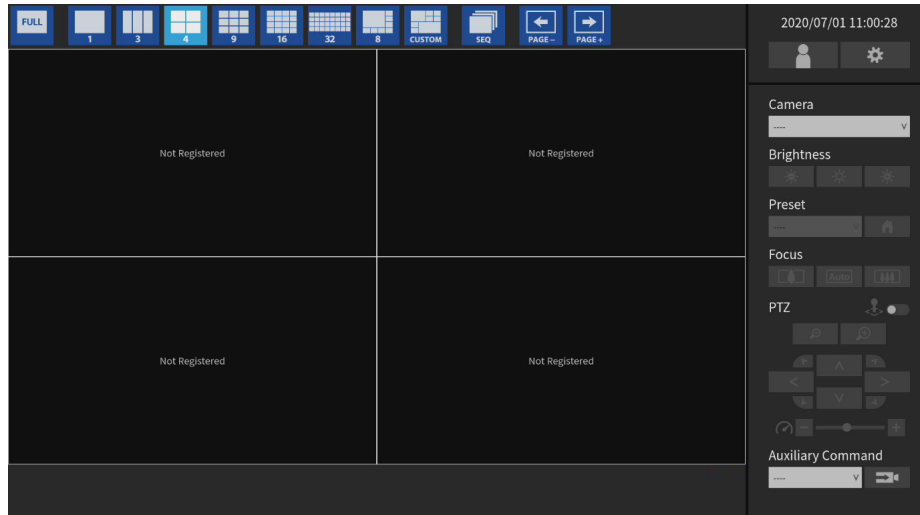

## 3-3. Setting Screen Display

### Note

- With the Enterprise edition, the icons displayed can be changed from the setting screen. For details, see the “Installation Manual”.


### ● To change over the screen layout

Set the number of images to be displayed simultaneously on the live image screen.

#### Procedure

1. Select an icon for the layout to display.

The screen layout changes by selecting the layout icon in the display mode menu.

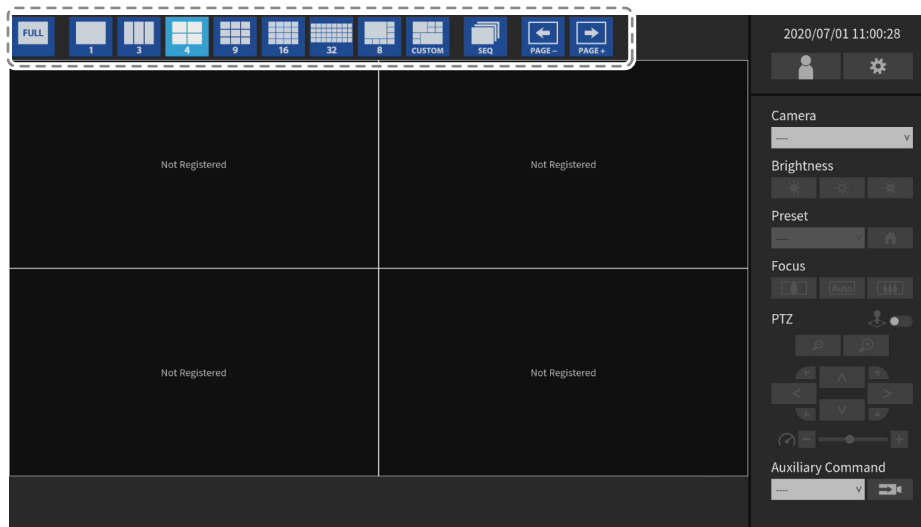

### Attention

When displaying the image layout in three screens:

- Suitable for displaying portrait input images. To display portrait images, network cameras require separate settings. For details on the settings, refer to the network camera User's Manual.

### Note

- When using a USB keyboard, the layout changes each time the shortcut key (L) is pressed.
- Double-click any camera window when the menu is displayed to switch to 1-screen fullscreen layout. However, this function is disabled while in Joystick Mode.

## ● To change over the page displayed on the screen

Camera images are displayed by changing over pages.

Pages can be changed over either manually or automatically at a set interval (sequence display).

### Note


- When “Custom Screen” is specified for the screen layout, the number of pages varies depending on the specified number of screens.

## Changing pages manually

### Procedure

1. Select  or  in the display mode menu.

Example: 4-screen layout with 16 registered cameras

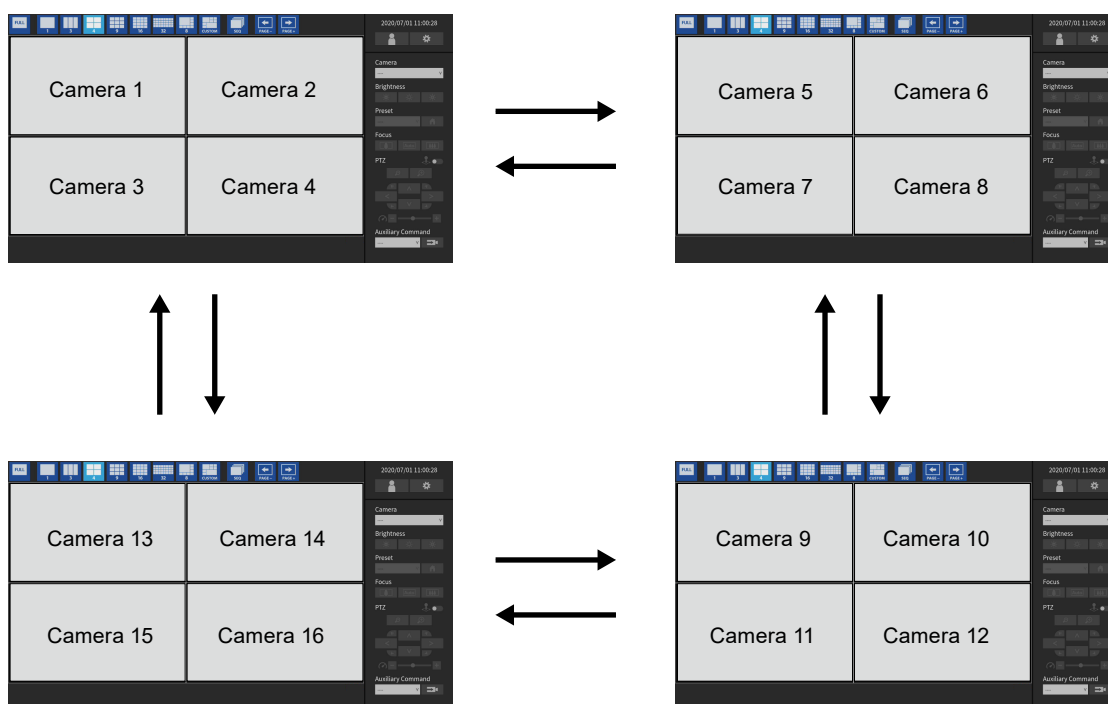


### Note

- When using a USB keyboard, the pages can be changed by pressing a shortcut key (PageDown or PageUp).


## Changing pages automatically (Sequence display)

### Procedure

1. Select  in the display mode menu.

Pages displayed on the screen are changed over automatically at a specified interval.

### Note

- The interval for page changeover can be changed (default setting: 10 sec.). For information on how to change the display interval, refer to the “Installation Manual”.
- To stop sequence display, press  again.
- When using a USB keyboard, change between starting or stopping the sequence display by pressing a shortcut key (S).

### Attention

- Only pages registered for the network camera are displayed in the sequence display. Pages not registered with the camera will not be displayed.
- Select the network camera to stop the sequence display.

## ● To switch camera image display positions


If the image layout is displayed in multiple screens other than one screen, camera image display positions can be switched.

### Attention


- It is necessary to log in as a user with a user level of "ADMIN".
- It is possible to switch all the display positions of the registered network cameras.

### Procedure

1. Select a camera image to move using the USB mouse and drag the image and drop it on the desired camera image position.

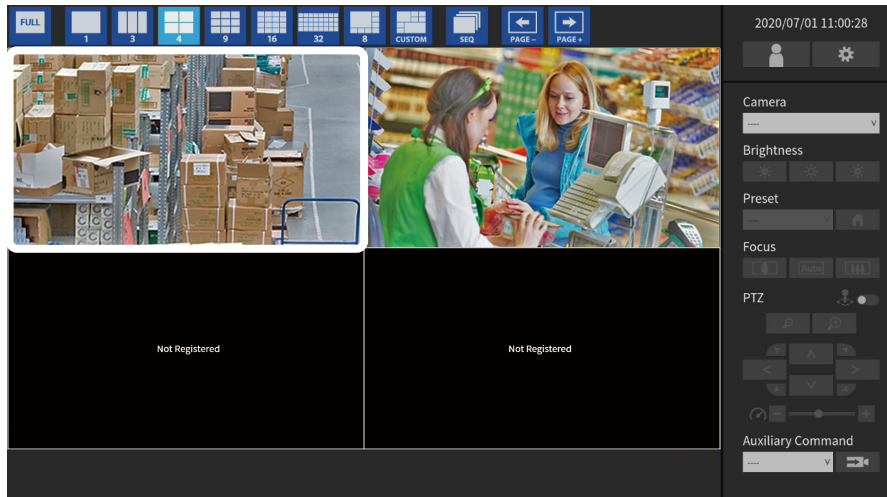

The display positions of the source and destination camera image are switched.

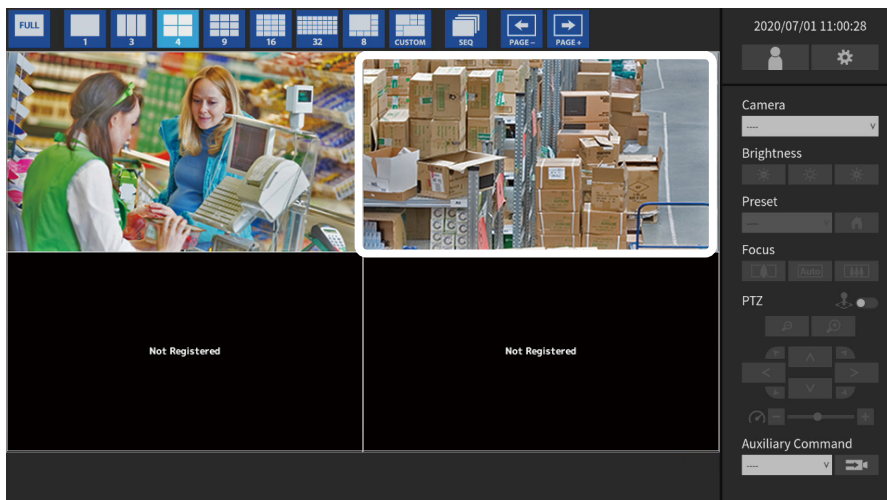

## 3-4. Operating Network Cameras

### ● Before operation


Network camera control is allowed only when the level of the user accessing this product is “CAMERA CONTROL” or “ADMIN”.

Be sure to log in to the system with a user account of this level.

#### Procedure

1. Select  (Login) under “System”.

The login screen is displayed.

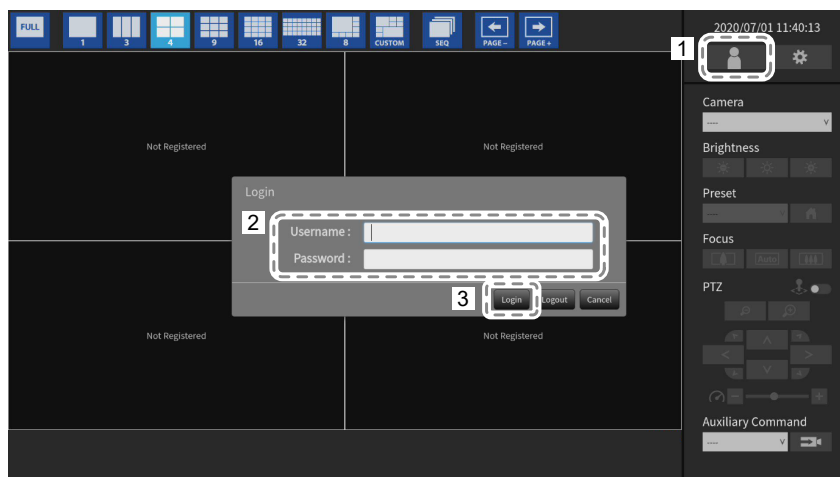

2. Enter “Username” and “Password”.

3. Select “Login”.

The display returns to the live image screen.

#### Note


- For entering characters, refer to [“Entering characters” \(page 11\)](#).
- The following user information is set by default.
  - Username: “admin”
  - Password: “admin”
  - User Level: “ADMIN”
- When the “Account Type” is set to “LDAP”, you can temporarily change the account type when logging in by checking “Allow choosing of account type on the login dialog.” under “LDAP” in advance.
- For information on how to configure users, refer to the “Installation Manual”.
- It is recommended that you log out after completing operations, so as to prevent a third party from operating the camera or altering the settings.
- When the Auto Login settings are configured, it is possible to log in to the system without the username and password. For details, refer to the “Installation Manual”.

#### Attention

- Once the Auto Login settings are configured, unauthorized operation becomes easy for a malicious third party. Restrict the configuration to the application in an environment where sufficient security is ensured.
- When the system is turned off while the user is logged in, the user is logged out from the system automatically. In such a case, you will also be logged out from the web browser.

## ● To operate network cameras

### Procedure

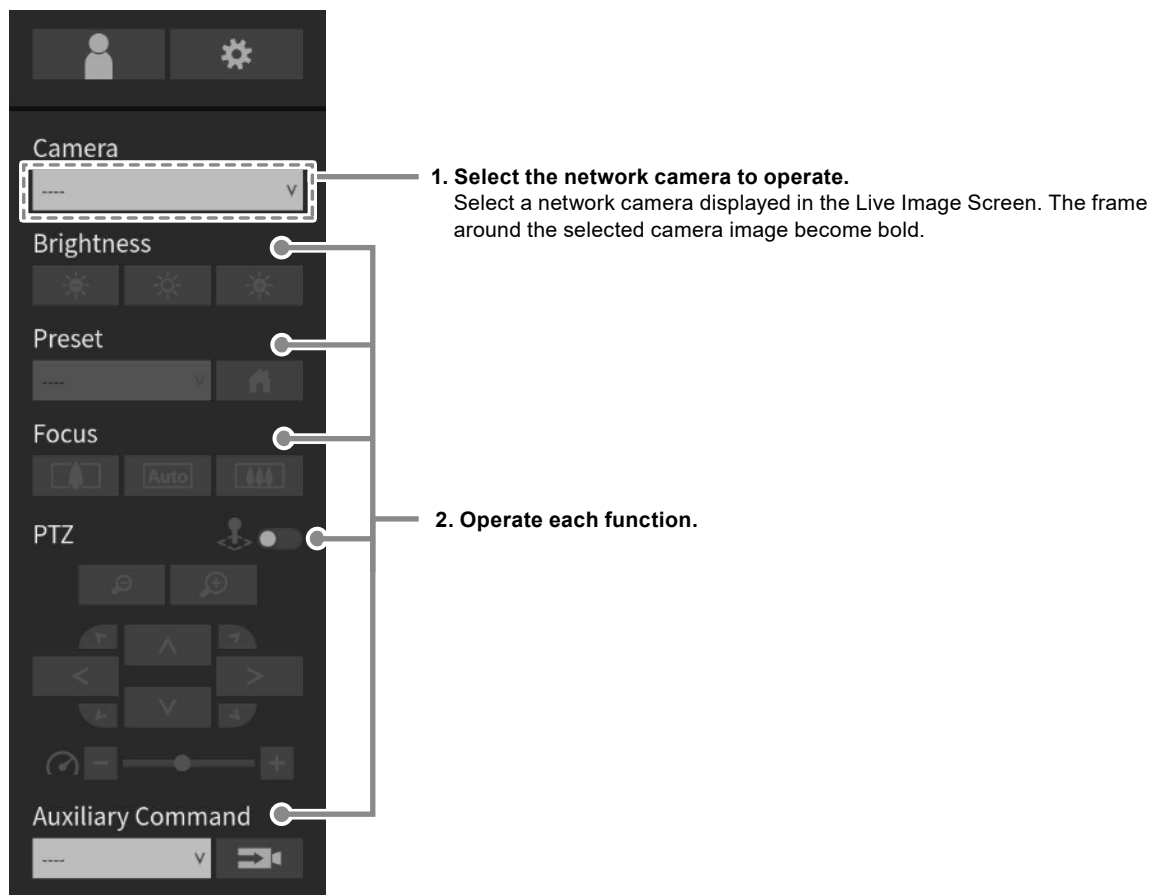

### Attention








- Depending on the type of the network camera you are using, some functions may not be available.
- The network camera cannot be controlled if Protocol is set to "DirectUri" or "SRT".

### Note

- The network camera to be operated can also be selected by clicking on an image displayed on the Live Image Screen with the USB mouse.
- The position at which images in the live image screen are displayed can be changed. For details, refer to the "Installation Manual".



## Brightness / Preset / Focus







| Function   | Description  |
|------------|--|
| Brightness | <p>Adjust the network camera brightness.</p> <p> : The image becomes darker.</p> <p> : Returns the brightness to the default setting.*1</p> <p> : The image becomes brighter.</p> |
| Preset     | <p>Moves the camera orientation to the position registered in advance.</p> <p>1. Select the preset number.</p> <p><b>Note</b></p> <ul style="list-style-type: none"> <li>Select  to move the network camera orientation to the home position.</li> </ul>  |
| Focus      | <p>Adjust the network camera focus.</p> <p> : The focus point moves closer.*2</p> <p> : Focuses automatically.*3</p> <p> : The focus point moves further away.*2</p>              |

\*1 Setting cannot be performed when "Protocol" is an "ONVIF" or "AXIS" network camera.

\*2 Switches to manual adjustment mode when "Protocol" is an "ONVIF" or "AXIS" network camera.

\*3 Switches to automatic adjustment mode when "Protocol" is an "ONVIF" or "AXIS" network camera.


## PTZ

| Function      | Description   |
|---------------|---|
| Joystick Mode | <p>Enabled when you wish to continuously perform PTZ control of a network camera.</p> <p> Joystick Mode is disabled.</p> <p> Joystick Mode is enabled.</p> <p><b>Note</b></p> <ul style="list-style-type: none"> <li>When using a USB keyboard, pressing the shortcut key (J) enables Joystick Mode.</li> </ul> |
| Zoom          | <p>Adjust the network camera display magnification.</p> <p> : Zooms out.</p> <p> : Zooms in.</p> <p><b>Note</b></p> <ul style="list-style-type: none"> <li>When using a USB keyboard, pressing the shortcut keys + or - adjusts the zoom.</li> </ul>  |
| Position      | <p>Adjusts the horizontal position (pan) and vertical position (tilt) of the network camera.</p> <p></p> <p><b>Note</b></p> <ul style="list-style-type: none"> <li>When using a USB keyboard, pressing the shortcut keys Ctrl+↑, Ctrl+↓, Ctrl+←, or Ctrl+→ adjusts the position.</li> </ul>  |
| PTZ Adjust    | <p>Adjusts the PTZ control operating quantity. The operating quantity becomes larger the further to the right the slider is moved.</p> <p></p> <p><b>Note</b></p> <ul style="list-style-type: none"> <li>When using a USB keyboard, pressing the shortcut keys Ctrl+- or Ctrl++ adjusts the PTZ adjust.</li> </ul>   |

### Note

- It is also possible to perform PTZ control on the camera image by moving the USB mouse cursor onto the selected camera image. This function is enabled when the camera image screen size is 352 x 198 (16-screen layout) or above.

## Auxiliary Command

| Function          | Description  |
|-------------------|--|
| Auxiliary Command | <p>Operates the auxiliary functions of a network camera, or executes actions of registered event rules.</p> <ol style="list-style-type: none"><li>1. Select the "Auxiliary Command" list box.</li><li>2. Select .</li></ol> <ul style="list-style-type: none"><li>• The auxiliary functions of the network camera can only be operated with specific devices that have protocols set to "ONVIF" or "Panasonic".</li><li>• Event rule events can only be executed when a camera is not selected.</li></ul> |

