User's Manual

FlexScan[®] S1961

Color LCD Monitor

Important

Please read this User's Manual and Setup Manual (separate volume) carefully to familiarize yourself with safe and effective usage.

PRECAUTIONS

CONTENTS

Chapter 1 Features and Overview

- 1-1 Features
- 1-2 Buttons and Indicators
- 1-3 Functions and Basic Operation

Chapter 2 Settings and Adjustments

- 2-1 Utility Disk
- 2-2 Screen Adjustment
- 2-3 Color Adjustment
- 2-4 Off Timer Settings
- 2-5 Power Indicator/EIZO Logo Display Setting
- 2-6 Locking Buttons
- 2-7 Setting Adjustment menu Display
- 2-8 Viewing Information/Setting Language
- 2-9 Setting BrightRegulator
- 2-10 Resumption of Default Setting

Chapter 3 Connecting Cables

3-1 Connecting Two PCs to the Monitor

Chapter 4 Troubleshooting

Chapter 5 Reference

- 5-1 Attaching an Arm (Option)
- 5-2 Power Saving Mode
- 5-3 Cleaning
- 5-4 Specifications
- 5-5 Glossary
- 5-6 Preset Timing

How to Setup

Please read the Setup Manual (separate volume)



SAFETY SYMBOLS

This manual uses the safety symbols below. They denote critical information. Please read them carefully.



WARNING

Failure to abide by the information in a WARNING may result in serious injury and can be life threatening.



CAUTION

Failure to abide by the information in a CAUTION may result in moderate injury and/or property or product damage.



Indicates a prohibited action.



Indicates a mandatory action that must be followed.

Copyright© 2006-2010 EIZO NANAO CORPORATION All rights reserved.

No part of this manual may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, or otherwise, without the prior written permission of EIZO NANAO CORPORATION.

EIZO NANAO CORPORATION is under no obligation to hold any submitted material or information confidential unless prior arrangements are made pursuant to EIZO NANAO CORPORATION's receipt of said information.

Although every effort has been made to ensure that this manual provides up-to-date information, please note that EIZO monitor specifications are subject to change without notice.

Apple, Macintosh are registered trademarks of Apple Inc.

VGA is a registered trademark of International Business Machines Corporation.

VESA and DPMS are registered trademarks or trademarks of Video Electronics Standards Association in the United States and other countries.

Windows is a registered trademarks of Microsoft Corporation in the United States and other countries.

EIZO, EIZO Logo, FlexScan and ScreenManager are registered trademarks of EIZO NANAO CORPORATION in Japan and other countries.

All other trademarks are the properties of their respective owners.

Product specification may vary with sales areas.


Confirm the specification in the manual written in language of the region of purchase.

⚠PRECAUTIONS

IMPORTANT

- This product has been adjusted specifically for use in the region to which it was originally shipped. If the product is used outside the region, it may not operate as specified in the specifications.
- To ensure personal safety and proper maintenance, please read carefully this section and the caution statements on the monitor.

[Location of Caution Statement]

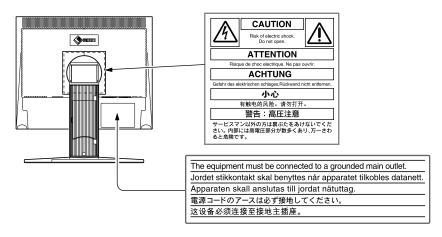



If the unit begins to emit smoke, smells like something is burning, or makes strange noises, disconnect all power connections immediately and contact your dealer for advice.

Attempting to use a malfunctioning unit may result in fire, electric shock, or equipment damage.

Do not open the cabinet or modify the unit.

Opening the cabinet or modifying the unit may result in fire, electric shock, or burn.



Refer all servicing to qualified service personnel.

Do not attempt to service this product yourself as opening or removing covers may result in fire, electric shock, or equipment damage.

Keep small objects or liquids away from the unit.

Small objects accidentally falling through the ventilation slots into the cabinet or spillage into the cabinet may result in fire, electric shock, or equipment damage.

If an object or liquid falls/spills into the cabinet, unplug the unit immediately. Have the unit checked by a qualified service engineer before using it again.





M WARNING

Place the unit at the strong and stable place.

A unit placed on an inadequate surface may fall and result in injury or equipment damage. If the unit falls, disconnect the power immediately and ask your dealer for advice. Do not continue using a damaged unit. Using a damaged unit may result in fire or electric shock.




(A)(A)

Set the unit in an appropriate location.

Not doing so may result in fire, electric shock, or equipment damage.

- Do not place outdoors.
- Do not place in the transportation system (ship, aircraft, trains, automobiles, etc.)
- Do not place in a dusty or humid environment.
- Do not place in a location where the steam comes directly on the screen.
- Do not place near heat generating devices or a humidifier.

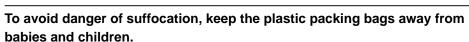

Use the enclosed power cord and connect to the standard power outlet of your country.

Be sure to remain within the rated voltage of the power cord.

Not doing so may result in fire or electric shock.

To disconnect the power cord, grasp the plug firmly and pull.

Tugging on the cord may damage and result in fire or electric shock.



The equipment must be connected to a grounded main outlet.

Failure to do so may result in fire or electric shock.



Use the correct voltage.


- The unit is designed for use with a specific voltage only. Connection to another voltage than specified in this User's Manual may cause fire, electric shock, or equipment damage.
- Do not overload your power circuit, as this may result in fire or electric shock.





Handle the power cord with care.

- Do not place the cord underneath the unit or other heavy objects.
- Do not pull on or tie the cord.

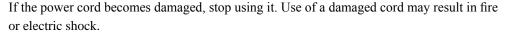



Never touch the plug and power cord if it begins to thunder.

Touching them may result in electric shock.

When attaching an arm stand, please refer to the user's manual of the arm stand and install the unit securely.

Not doing so may cause the unit to become unattached, which may result in injury or equipment damage. When the unit is dropped, please ask your dealer for advice. Do not continue using a damaged unit. Using a damaged unit may result in fire or electric shock. When reattaching the tilt stand, please use the same screws and tighten them securely.

Do not touch a damaged LCD panel directly with bare hands.

The liquid crystal that may leak from the panel is poisonous if it enters the eyes or mouth. If any part of the skin or body comes in direct contact with the panel, please wash thoroughly. If some physical symptoms result, please consult your doctor.



Follow local regulation or laws for safe disposal.

The backlight of the LCD panel contains mercury.



Handle with care when carrying the unit.

Disconnect the power cord and cables when moving the unit. Moving the unit with the cord attached is dangerous. It may result in injury.

When handling the unit, grip the bottom of the unit firmly with both hands ensuring the panel faces outward before lifting.

Dropping the unit may result in injury or equipment damage.



Do not block the ventilation slots on the cabinet.

- Do not place any objects on the ventilation slots.
- Do not install the unit in a closed space.
- Do not use the unit laid down or upside down.

Blocking the ventilation slots prevents proper airflow and may result in fire, electric shock, or equipment damage.



Do not touch the plug with wet hands.

Doing so may result in electrical shock.



Use an easily accessible power outlet.

This will ensure that you can disconnect the power quickly in case of a problem.

Periodically clean the area around the plug.

Dust, water, or oil on the plug may result in fire.

Unplug the unit before cleaning it.

Cleaning the unit while it is plugged into a power outlet may result in electric shock.

If you plan to leave the unit unused for an extended period, disconnect the power cord from the wall socket after turning off the power switch for the safety and the power conservation.

LCD Panel

In order to suppress the luminosity change by long-term use and to maintain the stable luminosity, use of a monitor in lower brightness is recommended.

The LCD panel is manufactured using high-precision technology. However, note that the appearance of any missing pixels or lit pixels does not indicate damage to the LCD monitor.

Percentage of effective pixels: 99.9994% or higher.

The backlight of the LCD panel has a fixed life span. When the screen becomes dark or begins to flicker, please contact your dealer.

Do not press on the panel or edge of the frame strongly, as this may result in damage to the screen. There will be prints left on the screen if the pressed image is dark or black. If pressure is repeatedly applied to the screen, it may deteriorate or damage your LCD panel. Leave the screen white to decrease the prints.

Do not scratch or press on the panel with any sharp objects, such as a pencil or pen as this may result in damage to the panel. Do not attempt to brush with tissues as this may scratch the LCD panel.

When the monitor is cold and brought into a room or the room temperature goes up quickly, dew condensation may occur inside and outside the monitor. In that case, do not turn the monitor on and wait until dew condensation disappears, otherwise it may cause damage to the monitor.

To use the monitor comfortably

An excessively dark or bright screen may affect your eyes. Adjust the brightness of the monitor according to the environmental conditions.

Staring at the monitor for a long time tires your eyes. Take a 10-minute rest every hour.

CONTENTS

PRECA	AUTIONS1	
LCD	Panel 5	
To u	se the monitor comfortably5	
Chapte	er 1 Features and Overview7	
1-1	Features7	
1-2	Buttons and Indicators7	
1-3	Functions and Basic Operation 8	
Chapte	er 2 Settings and Adjustments10	
2-1	Utility Disk10	
•	Disk contents and software overview 10	
•	To use ScreenManager Pro for LCD 10	CI
2-2	Screen Adjustment11	
Di	gital Input11	
Ar	nalog Input11	CI
2-3	Color Adjustment14	CI
Si	mple adjustment [FineContrast mode] 14	0
•	FineContrast Mode14	
Ad	dvanced Adjustments [Adjustment menu] 15	
	To select an appropriate mode for images 15	
•	To set/adjust color15	
2-4	Off Timer Settings16	
•	To set monitor power-off time [Off Timer] 16	
2-5	Power Indicator/EIZO Logo Display Setting 16	
•	To turn off the Power indicator while a screen is	
	displayed [Power Indicator Setting]16	
•	To display EIZO logo	
	[EIZO Logo Hiding Function]16	

2-0	Locking buttons	.,
•	To lock operation [Adjustment Lock]	17
2-7	Setting Adjustment menu Display	17
•	To update menu settings [Menu Position]	17
2-8	Viewing Information/Setting Language	18
•	To check viewing information, usage time, etc.	18
•	To set a language to be displayed [Language].	18
2-9	Setting BrightRegulator	18
•	[BrightRegulator] to set "Enable" or "Disable" for	r
	BrightRegulator	18
2-10	Resumption of Default Setting	18
•	To reset color adjustment [Reset]	18
•	To reset all settings [Reset]	18
Chapte	r 3 Connecting Cables	19
Chapte 3-1	Connecting Two PCs to the Monitor	
3-1	-	19
3-1 Chapte	Connecting Two PCs to the Monitor	19 20
3-1 Chapte	Connecting Two PCs to the Monitor	19 20 22
3-1 Chapte	Connecting Two PCs to the Monitor	19 20 22
3-1 Chapte Chapte 5-1	Connecting Two PCs to the Monitor	19 20 22 22 23
3-1 Chapte Chapte 5-1 5-2	Connecting Two PCs to the Monitor	19 20 22 22 23 23
3-1 Chapte Chapte 5-1 5-2 5-3	Connecting Two PCs to the Monitor	19 20 22 23 23 24

Chapter 1 Features and Overview

Thank you very much for choosing an EIZO color LCD monitor.

1-1 Features

• Dual-input compliant (DVI-D and D-sub mini 15-pin connectors)

• DVI digital input (TMDS) compliant

• Horizontal scan frequency: Analog: 24.8 - 80 kHz, Digital: 31 - 64 kHz

• Vertical scan frequency: Analog: 50 - 75 Hz

Digital: 59 - 61 Hz (VGA text: 69 - 71 Hz)

Resolution: $1280 \text{ dots} \times 1024 \text{ lines}$

• Stereo speakers*1


· BrightRegulator function incorporated

• FineContrast mode to allow the best mode for screen display

• The utility software "ScreenManager Pro for LCD" (for Windows) to control the monitor from a PC with mouse/keyboard is included (refer to the EIZO LCD Utility Disk).

• Ultra slim bezel

1-2 Buttons and Indicators

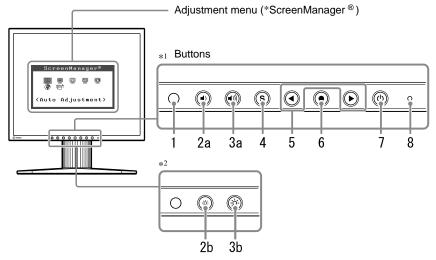

- 1. Sensor (BrightRegulator)
- 2a. Volume control button [turn down]*1
- 2b. Brightness control button [turn down]*2
- 3a. Volume control button [turn up]*1
- 3b. Brightness control button [turn up]*2
- 4. Input signal selection button
- 5. Control buttons (Left, Right)
- 6. Enter button
- 7. Power button
- 8. Power indicator

Indicator status	Operation status
Blue	The screen is displayed
Orange	Power saving
Off	Power off

* ScreenManager ® is an EIZO's nickname of the Adjustment menu.

NOTE

• The stand of the unit can be replaced with an arm or another stand. (Refer to "5-1 Attaching an Arm" on page 22.)

NOTE


• When "Off Timer" set, the power indicator blinks 15 minutes before the set time. (Refer to "To set monitor power-off time" on page 16.)

^{*1} Speaker applied model

^{*2} Speaker non-applied model

Functions and Basic Operation

To adjust the screen and color

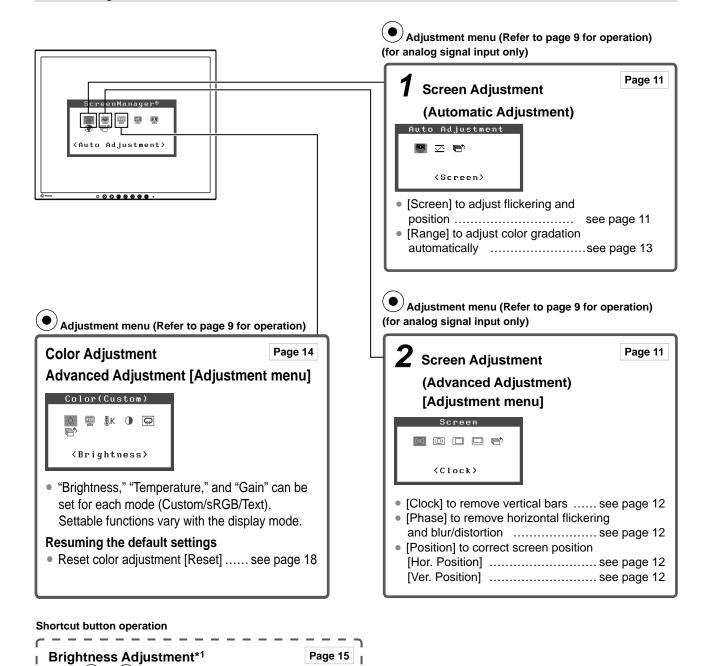

Page 15

Press (or b to adjust brightness.

Press or to adjust brightness.


Brightness Adjustment*2

Volume Adjustment*1 Press (♠) or (♠) to adjust volume.

[:]Speaker applied model

^{*2 :}Speaker non-applied model

To make useful settings/adjustments

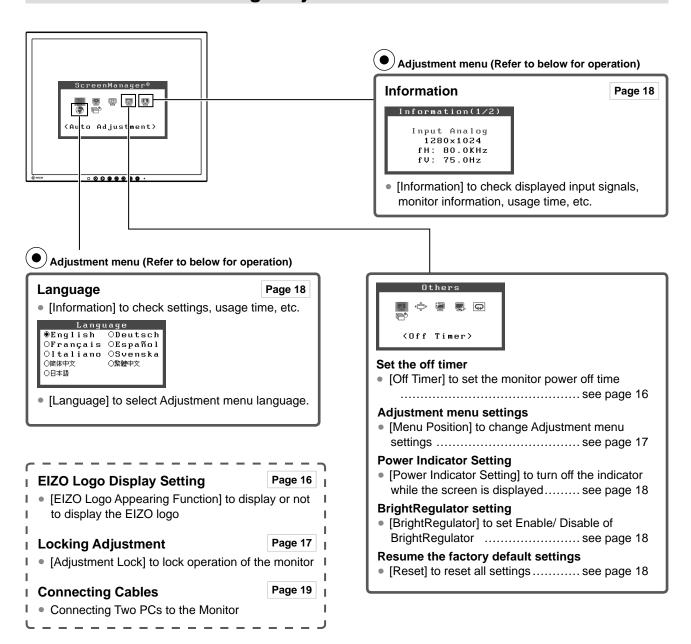

Basic operation of Adjustment menu

[Displaying Adjustment menu and selecting function]

- (1) Press •. The main menu appears.
- (2) Select a function with \bullet or \bullet , and press \bullet . The sub menu appears.
- (3) Select a function with ◀ or ▶, and press ●. The adjustment/setting menu appears.
- (4) Adjust the selected item with (\blacktriangleleft) or (\blacktriangleright) , and press (\bullet) . The setting is saved.

[Exiting Adjustment menu]

- (1) Choose <a> <a>Return from the sub menu and press <a>.
- (2) Choose (Exit) from the main menu and press (i).

NOTE

The Adjustment menu can also be exited by pressing (●) twice quickly.

Chapter 2 Settings and Adjustments

2-1 Utility Disk

An "EIZO LCD Utility Disk" (CD-ROM) is supplied with the monitor. The following table shows the disk contents and the overview of the application software programs.

Disk contents and software overview

The disk includes a monitor information file, application software programs for adjustment, and User's Manual. Refer to "readme.txt" or the "Readme" file on the disk for software startup procedures or file access procedures.


Item	Overview	For Windows	For Macintosh	
A "readme.txt" or "Readme" file	A "readme.txt" or "Readme" file			
Monitor information file (INF file)	Available for setting the best resolution and refresh rate for the monitor.	0	-	
Color Profiles (ICC Profiles)	Color profiles	0	0	
Screen Adjustment Program	Available for easy adjustments of the monitor screen following adjustment patterns and procedures on the screen.	0	0	
ScreenManager Pro for LCD (for Windows) application software	A utility software program to control monitor adjustments from a PC using its mouse and keyboard. (A PC must be connected to the monitor with the supplied USB cable.) Refer to the description later.	0	-	
User's Manual of this monitor (PDF file), Specifications Sheet (PDF file)				

To use ScreenManager Pro for LCD

For the installation and use of ScreenManager Pro for LCD, refer to its User's Manual on the disk. To adjust the monitor using ScreenManager Pro for LCD, connect a PC to the monitor with the supplied USB cable.

[Connection]

- (1) Connect the USB port (downstream) of a USB compatible PC (or other USB hub) and the monitor's USB port (upstream) with the supplied USB cable.
- (2) The USB function is set up automatically upon connection of the USB cable.

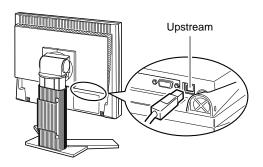

2-2 Screen Adjustment

Digital Input

When digital signals are input, images are displayed correctly based on the preset data of the monitor.

Analog Input

The monitor screen adjustment is used to suppress flickering of the screen or adjust screen position and screen size correctly according to the PC to be used. To use the monitor comfortably, adjust the screen when the monitor is set up for the first time or when the settings of the PC in use are updated.

The auto-adjustment function works in the following cases:

- When a signal is input into the monitor for the first time
- When a signal is input into the monitor for the first time after the resolution or refresh rate of input signals is changed

[Adjustment Procedure]

Automatic Adjustment

1 To adjust screen automatically [Screen]

- (1) Choose <a>Screen from the <Auto Adjustment> menu, and press <a>O.
- (2) Choose <Execute>, and Press (•).
- (3) Flickering, screen position, and screen size are corrected by the auto-adjustment function.

If satisfactory adjustment cannot be obtained with the autoadjustment function, perform the adjustment following the procedure below. When the screen is displayed correctly, go to step 4 "Range Adjustment".

Advanced Adjustment

2 Run the Screen Adjustment Program.

Load the EIZO LCD Utility Disk on the PC, and start the Screen Adjustment Program compatible with the PC in use.

After the program starts up, perform the adjustment in step 3 following the instructions of the program.

Attention

 Wait 20 minutes or more from monitor power on before starting adjustments.

NOTE


• Use "Screen Adjustment Program" on the supplied EIZO LCD Utility Disk.

Attention

- This function works correctly when an image is fully displayed over the Windows or Macintosh display area.
 It does not work properly when an image is displayed only on a part of the screen (DOS prompt window, for example) or when a black background (wallpaper, etc.) is in use.
- This function does not work correctly with some graphics boards.
- "Auto in Progress" appears on the screen during auto adjustment.

NOTE

- For how to start the Screen
 Adjustment Program, refer to
 "readme.txt" or the "Readme" file.
 When you are using a Windows PC,
 you can run the program directly from
 the start menu of the disk.
- If no adjustment program is available for your PC, display a checkerboard pattern on the screen (see below) and go to the following steps.

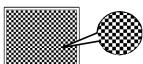


3 Perform advanced adjustments for the following using the <Screen> menu of the Adjustment menu.

• To eliminate vertical bars [Clock]


- (1) Choose Clock> from the <Screen> menu, and press .

 The <Clock> menu appears.
- (2) Adjust the clock with ◀ or ▶, and press ●. The adjustment is completed.

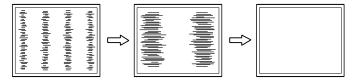

• To remove flickering or blurring [Phase]


- (1) Choose (Choose Phase from the Screen menu, and press (). The Phase menu appears.
- (2) Adjust the phase with **④** or **▶**, and press **⑥**. The adjustment is completed.

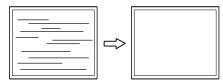

To correct screen position [Horizontal Position], [Vertical Position]

Since the number of pixels and the pixel positions are fixed on the LCD monitor, only one position is provided to display images correctly. The position adjustment is made to shift an image to the correct position.

- (2) Adjust the position with \bigcirc or \bigcirc to display the image properly in the display area of the monitor.

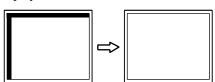

NOTE

- Press the control button slowly so as not to miss the adjustment point.
- When blurring, flickering or bars appear on the screen after adjustment, proceed to [Phase] to remove flickering or blurring.

Attention

 Flickering or blurring may not be eliminated depending on your PC or graphics board.

NOTE

 When vertical bars appear on the screen after adjustment, go back to "To eliminate vertical bars [Clock]." (Clock → Phase → Position)

4 Adjust the signal output range

• To adjust color gradation automatically [Range Adjustment]

Every color gradation (0 to 255) can be displayed by adjusting the signal output level.

- (1) Choose < Range from the Auto Adjustment menu, and press (\overline{\texts}).
- (2) Choose <Execute>, and press (•).
- (3) Color gradation is adjusted correctly by the auto-adjustment function

The output range is adjusted automatically to display images with the maximum color gradation.

All the adjustments using the "Screen Adjustment Program" are completed.

2-3 Color Adjustment

Simple adjustment [FineContrast mode]

This function allows you to select the best display mode for monitor brightness, etc.

- (1) Choose <a>Color <a>Color Mode> from the <Color> menu.
- (2) Choose [Custom], [sRGB] or [Text] with ◀ or ♠, and press ♠.

FineContrast Mode

An appropriate display mode is selectable out of three modes.

Mode	Purpose
Custom	Available for making desired setting.
sRGB	Suitable for color matching with sRGB compatible peripherals.
Text	Suitable for displaying texts for word processing or spreadsheets.

Advanced Adjustments [Adjustment menu]

Independent setting and saving of color adjustment are available for each FineContrast mode.

To select an appropriate mode for images

√: Adjustment/setting available —: Factory setting

Icon	Function	FineContrast mode		
ICON	Function	Custom	sRGB	Text
÷Ċ:	Brightness	V	\checkmark	\checkmark
∄ K	Temperature	√	_	V
•	Gain	√	_	_
Đ	Reset	V	_	V

Menu	Description	Adjustment range		
Brightness	To adjust the full screen brightness as desired	0 to 100%		
	 NOTE You can also adjust the brightness by pressing or ^{*1} You can also adjust the brightness by pressing or ^{*2} 			
Temperature				
	 NOTE The values shown in the Kelvin (K) are available only as reference. While color temperature is adjusted, <gain> is adjusted automatically according to the color temperature.</gain> When <gain> is set, color temperature setting is disabled, and is set to "OFF".</gain> 			
Gain ①	To adjust red, green, and blue to a desired color tone respectively O to 100% Adjust the respective brightner red/green/blue to make a descolor tone. Display an image white or gray background for adjustment.			
	ge are available only as reference. g invalidates this setting. The color temperature.			
Reset	To reset the color settings of the selected FineContrast mode to the default settings.			

To set/adjust color

- (1) Choose <Color> from the Adjustment menu, and press •.
- (2) Select a desired function from the <Color> menu, and press •. The selected function menu appears.
- (3) Adjust the selected item with ◀ or ▶, and press ●. The adjustment is completed.

Attention

- Perform [Range Adjustment] before starting color adjustment for analog input signals.
 Refer to "To adjust color gradation
 - Refer to "To adjust color gradation automatically" on page 13.
- The FineContrast mode cannot be changed during color adjustment. Set the FineContrast mode in advance on the color mode screen.
- Wait 20 minutes or more from monitor power on before starting the color adjustment.
- Choose [Reset] from the Color menu to revert to the default setting (factory setting) of the color tone of the FineContrast mode selected.
- The same image may be seen in different colors on multiple monitors due to their monitor-specific characteristics. Make fine color adjustment visually when matching colors on multiple monitors.
- Adjustable functions vary depending on the type of FineContrast mode.

^{*1 :}Speaker applied model

^{*2 :}Speaker non-applied model

2-4 Off Timer Settings

To set monitor power-off time [Off Timer]

This function allows the monitor to automatically turn off after a specified time has passed. This function serves to reduce afterimages caused when the monitor screen is left on for a long time period without use. Use this function when an image is displayed throughout the day.

[Off Timer System]

Timer	Monitor	Power Indicator			
ON time (1H - 23H)	Operating	Blue			
Last 15 min. in "ON time"	Advance Notice*1	Flashing blue			
"ON time" expired	Power Off	Off			

*1 When (b) is pressed during the advance notice period, the monitor continues to operate for additional 90 minutes. Extension of operation time can be set without limitation.

[Procedure]

- (1) Choose <Others> from the Adjustment menu, and press (•).
- (2) Choose <a>Content <a>Content
- (3) Select "Enable" with \bigcirc or \bigcirc , and press \bigcirc .
- (4) Set a monitor ON time (1 to 23 hours) with ◀ or ▶, and press ●. The Off Timer setting is completed.

[Resumption Procedure]

Press (ひ).

2-5 Power Indicator/EIZO Logo Display Setting

To turn off the Power indicator while a screen is displayed [Power Indicator Setting]

This function enables to turn off the Power indicator (blue) while a screen is displayed.

- (1) Choose <Others> from the Adjustment menu, and press (•).
- (2) Choose Power Indicator> from the <Others> menu, and press .

 The <Power Indicator> menu appears.
- (3) Select "Disable" with ◀ or ▶, and press ●. The Power Indicator setting is completed.

To display EIZO logo [EIZO Logo Hiding Function]

When this unit is turned on, the EIZO logo appears at the center of the screen. Selection to display or not to display the logo is available with this function.

[Procedure]

- (1) Press (b) to power off the unit.
- (2) Press (b) again while pressing (c). The EIZO logo does not appear on the screen.

[Resetting]

- (1) Press (b) to power off the unit.
- (2) Press (4) again while pressing (•). The logo appears again.

Attention

 The Off Timer functions even in the power saving mode, but the advance notice is disabled. The monitor power is turned off without advance notice.

NOTE

 The Power indicator lights up at power on with the default setting.

NOTE

 The logo appears with the default setting.

2-6 Locking Buttons

To lock operation [Adjustment Lock]

This function locks the buttons to retain the status adjusted or set once.

Buttons that can be locked	(Enter button) Adjustments/settings using Adjustment menu
Buttons that cannot be locked	

[Procedure]

- (1) Press (b) to turn off the unit.
- (2) Press (b) again while pressing (S).

 The screen is displayed with the adjustment lock.

[Unlocking]

- (1) Press (b) to turn off the unit.
- (2) Press (b) again while pressing (S).

 The screen is displayed with the adjustment lock released.

2-7 Setting Adjustment menu Display

• To update menu settings [Menu Position]

Menu Position

Adjust the menu position using the following procedure.

- (1) Choose <Others> from the Adjustment menu, and press •).
- (2) Choose (Menu Position From the Others menu, and press). The Others menu appears.
- (3) Select a menu position with \bigcirc or \bigcirc , and press \bigcirc . The menu position setting is completed.

NOTE

 Five positions (center/ upper right/ lower right/ upper left/ lower left) can be selected.

^{*1 :}Speaker applied model

^{*2 :}Speaker non-applied model

2-8 Viewing Information/Setting Language

• To check viewing information, usage time, etc.

[Information]

This function allows you to check viewing information, model name, serial number, and usage time of the monitor.

- (2) Then, press () to check viewing information, etc.

• To set a language to be displayed [Language]

Select the Adjustment menu language.

Selectable languages

English/German/French/Spanish/Italian/Swedish/Mandarin/Cantonese/Japanese

- (1) Choose 💮 <Language> menu from the Adjustment menu, and press .

 The <Language> menu appears.
- (2) Select a language with \bigcirc or \bigcirc , and press \bigcirc . The language setting is completed.

2-9 Setting BrightRegulator

- [BrightRegulator] to set "Enable" or "Disable" for BrightRegulator.
- (1) Choose <Others> from the Adjustment menu, and press (•).
- (3) Select "Enable" or "Disable" with ◀ or ♠, and press ♠. The BrightRegulator setting is completed.

2-10 Resumption of Default Setting

To reset color adjustment [Reset]

Resume the default settings (factory settings) for color adjustment.

- (1) Choose <Color> from the Adjustment menu, and press •.
- (3) Select <Reset> with ◀ or ▶, and press ●. The reset operation is completed.

To reset all settings [Reset]

Reset all adjustments/settings to the factory default settings.

- (1) Choose <Others> from the Adjustment menu, and press •).
- (3) Select <Reset> with **(** or **(**), and press **(**). The reset operation is completed.

NOTE

• The usage time is not always "0" when you purchase the monitor due to factory inspection.

NOTE

 Be careful not to block the sensor on the lower side of the monitor when using the BrightRegulator function.

NOTE


• For default settings, refer to "Main default settings (factory settings)" on page 25.

Chapter 3 Connecting Cables


3-1 Connecting Two PCs to the Monitor

Two PCs can be connected to the monitor through the DVI-D and the D-Sub mini 15 pin connector on the back of the monitor.

Connection examples

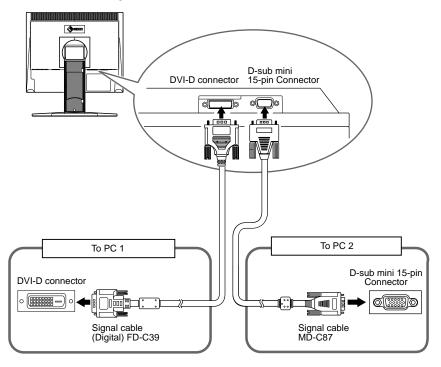

Selecting input signal

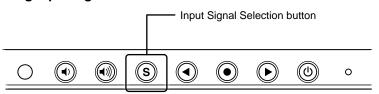

Switch the input signal with **S**. Input signal switches each time **S** is pressed. When the signal is switched, the active signal type (Analog or Digital) appears at the top right corner of the screen for two seconds.

NOTE

 The monitor recognizes the connector through which PC signals are input.
 When either PC is turned off or enters the power-saving mode, the monitor automatically displays signals of another PC.

Chapter 4 Troubleshooting

If a problem still remains after applying the suggested remedies, contact your local dealer.

- No-picture problems \rightarrow See No.1 No.2.
- Imaging problems → See No.3 No.11.
- Other problems \rightarrow See No.12.

	Problems	Possible cause and remedy
	No picture Power indicator does not light.	Check whether the power cord is connected correctly. If the problem persists, turn off the monitor, and then turn it on again a few minutes later.
	Power indicator is lighting blue. Power indicator is lighting orange.	Check Gain setting. (see page 15)Operate the mouse or keyboard.
2.	The message below appears. This message appears when no signal is input. Signal Check Analog No Signal	This message appears when the signal is not input correctly even when the monitor functions properly. The message shown left may appear, because some PCs do not output the signal soon after power-on. Check whether the PC is turned on. Check whether the signal cable is connected properly.
•	The message below shows that the input signal is out of the specified frequency range. (Such signal frequency is displayed in red.) Example: Signal Error Digital fD:162.0MHz fH: 75.0kHz fV: 60.0Hz	Select an appropriate display mode using the graphics board's utility software. Refer to the manual of the graphics board for details.
3.	Display position is incorrect.	Adjust image position so that it is displayed properly
		within the display area using the <pre></pre>
4.	Vertical bars appear on the screen or a part of the image is flickering.	Adjust using
	AMAMAMAMA Asampelpelpelpelpelpelpelpelpelpelpelpelpelp	
5.	Whole screen is flickering or blurring.	Adjust using
6.	The screen is too bright or too dark.	Adjust
7.	Afterimages appear.	 Use a screen saver or off timer function for a long-time image display. Afterimages are particular to LCD monitors. Avoid displaying the same image for a long time.

	Problems	Possible cause and remedy
8.	Green/red/blue/white dots or defective dots remain on the screen.	 This is due to LCD panel characteristics and is not a failure.
9.	Interference patterns or fingerprints remain on the screen.	Leave the monitor with a white screen. The symptom may disappear.
10.	The Main menu of Adjustment menu does not start.	Check for Adjustment Lock function.
11.	The auto-adjustment function does not work correctly.	This function does not work when digital signal is input. This function works correctly when an image is fully displayed over the Windows or Macintosh display area. It does not work properly when an image is displayed only on a part of the screen (DOS prompt window, for example) or when a black background (wallpaper, etc.) is in use. This function does not work correctly with some graphics boards.
12.	No audio output*1	 Check whether <volume> is set to "0".</volume> Check the settings of the PC and the audio playback software.

^{*1:} Speaker applied model.

Chapter 5 Reference


5-1 Attaching an Arm (Option)

The stand can be removed and replaced with an arm (or another stand) to be attached to the monitor. Use an arm or stand of EIZO option.

[Attaching]

- 1 Lay the LCD monitor on a soft cloth spread over on a stable surface with the panel surface facing down.
- Remove the stand. (Prepare a screwdriver.)
 Unscrew the four screws securing the unit and the stand with the screwdriver.
- Attach the monitor to the arm or stand.

 Secure the monitor to the arm or stand using the screws specified in the user's manual of the arm or stand.

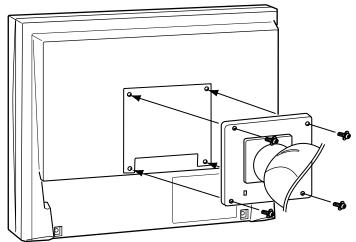

Fixing screws: M4 x 12mm 4 pcs

Attention

- When attaching an arm or stand, follow the instructions of their user's manual.
- When using another manufacturer's arm or stand, confirm the following in advance and select one conforming to the VESA standard. Use the $M4 \times 12$ screws supplied with this monitor.
 - Clearance between the screw holes: $100 \text{ mm} \times 100 \text{ mm}$
 - Thickness of plate: 2.6 mm
 - Strong enough to support weight of the monitor unit (except the stand) and attachments such as cables.
- Attach an arm or stand to meet the following tilt angles of the monitor.
 - Up 60 degrees, down 45 degrees
 - Up 45 degrees, down 45 degrees (vertical display, 90 degrees clockwise)
- Connect the cables after attaching an arm.

5-2 Power Saving Mode

Analog input

This monitor complies with the VESA DPMS standard.

[Power Saving System]

	PC	Monitor	Power Indicator
Operating		Operating	Blue
Power saving	STAND-BY SUSPENDED OFF	Power saving	Orange

[Resumption Procedure]

(1) Operate the mouse or keyboard to resume the normal screen.

Digital input

This monitor complies with the DVI DMPM standard.

[Power Saving System]

The monitor enters the power saving mode in fi ve seconds in connection with the PC setting.

PC	Monitor	PowerIndicator	
Operating	Operating	Blue	
Powersaving	Power saving	Orange	

[Resumption Procedure]

• Operate the mouse or keyboard to resume the normal screen from the PC's power saving mode.

5-3 Cleaning

Clean the monitor periodically to keep the monitor clean and extend its life.

Cabinet

Clean the cabinet with a soft cloth dampened with little mild detergent.

LCD Panel

- Clean the LCD panel with a soft cloth such as cotton cloth or lens cleaning paper.
- Remove persistent stains gently with a cloth dampened with little water, and then clean the LCD panel again with a dry cloth for better finishing.

Attention

 Never use any solvents or chemicals, such as thinner, benzene, wax, alcohol, and abrasive cleaner, which may damage the cabinet or LCD panel.

NOTE

 Optional ScreenCleaner is recommended for cleaning the panel surface.

5-4 Specifications

LCD Panel		19-inch (48 cm) TFT color LCD with anti-glare hard coating Viewing angle: Vertical 178°, Horizontal 178° (CR: 10 or more)			
Dot Pitch		0.294 mm			
Horizontal Scan Frequency		Analog: 24.8 - 80 kHz (Automatic) Digital: 31 - 64 kHz			
Vertical Scan Frequency		Analog: 50 - 75 Hz (Automatic) Digital: 59 - 61 Hz (VGA TEXT: 69 - 71 Hz)			
Resolution	1	1280 dots x 1024 lines			
Max. Dot 0	Clock	Analog: 135 MHz Digital: 108 MHz			
Max. Disp	lay Colors	16.77 million colors			
Display Ar	ea (H x V)	376.3 mm (14.81 inch) × 301.0 mm (11.85 inch)			
Power Sup	oply	100 - 120 VAC ±10% 50/60 Hz, 0.65 A 200 - 240 VAC ±10% 50 Hz, 0.4 A			
Power Consumption		*1Maximum (usually): 38W (speaker not working) / 40W (speaker working) *2Maximum (usually): 38W Power saving mode: 1 W or less (for single signal input with no line input connector connected)			
Input Sign	al Connectors	DVI-D connector, D-sub mini 15-pin connector			
Analog Inp	out Signal (Sync)	H/V Separate, TTL, positive/negative			
Analog Inp	out Signal (Video)	Analog, positive (0.7 Vp-p/75 Ω)			
Digital Sig System	nal Transmission	TMDS (Single Link)			
Video Sigr	nal Memory	Analog signal: 26 (preset: 21)			
Audio outp	out ^{*1}	Speaker output: 0.3W + 0.3W (16Ω, THD: 10% or less) Headphone output: 2mW + 2mW			
Plug & Pla	у	VESA DDC 2B/EDID structure 1.3			
	ns (including stand) (Height) × (Depth)	392.4(15.4) × 404.9(15.9) - 504.9(19.9) × 205(8.1)			
Dimensions (main unit) (Width) × (Height) × (Depth) mm (inch)		392.4(15.4) × 330.8(13.0) × 55(2.17)			
Mass (including stand)		6.8 kg (15.0 lbs)			
Mass (Main unit)		4.7 kg (10.4 lbs)			
Environmental Conditions		Operating temperature: 0 °C - 35 °C (32 °F - 95 °F) Storage temperature: –20 °C - 60 °C (-4 °F - 140 °F) Relative humidity: 30% - 80% (no condensation)			
USB	Standard	Rev. 2.0 compliant			
	Port	Upstream port x 1			


^{*1} Model for built-in speaker

 $^{^{\}ast 2}$ Model for no mount speaker

Main default settings (factory settings)

BrightRegulator	Disabled
FineContrast Mode	Custom
Off Timer	Disabled
Language	English

Outside Dimensions

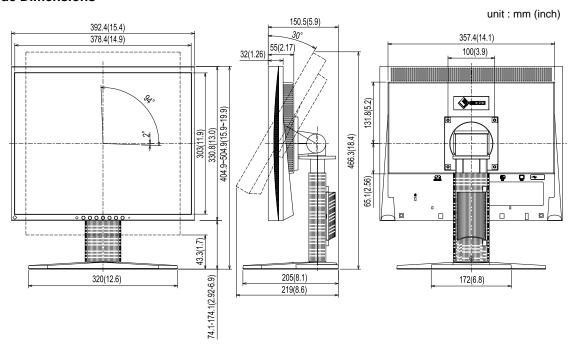

Connector Pin Assignment


• DVI-D connector



Pin No.	Signal	Pin No.	Signal	Pin No.	Signal
1	TMDS Data 2-	9	TMDS Data1-	17	TMDS Data0-
2	TMDS Data 2+	10	TMDS Data1+	18	TMDS Data0+
3	TMDS Data2/4 Shield	11	TMDS Data1/3 Shield	19	TMDS Data0/5 Shield
4	NC*	12	NC*	20	NC*
5	NC*	13	NC*	21	NC*
6	DDC Clock (SCL)	14	+5V Power	22	TMDS Clock shield
7	DDC Data (SDA)	15	Ground (return for +5V, Hsync and Vsync)	23	TMDS Clock+
8	NC*	16	Hot Plug Detect	24	TMDS Clock-

(NC*: No Connection)

• D-sub mini 15-pin connector

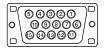

Pin No.	Signal	Pin No.	Signal	Pin No.	Signal
1	Red	6	Red ground	11	Ground
2	Green	7	Green ground	12	Data (SDA)
3	Blue	8	Blue ground	13	H. Sync
4	Ground	9	NC*	14	V. Sync
5	NC*	10	Ground	15	Clock (SCL)

(NC*: No Connection)

• USB port



Contact No.	Signal	Remarks		
1	vcc	Cable power		
2	– Data	Serial data		
3	+ Data	Serial data		
4	Ground	Cable ground		

Option List

Cleaning Kit	EIZO ScreenCleaner
--------------	--------------------

5-5 Glossary

Clock

The analog input monitor needs to reproduce a clock of the same frequency as the dot clock of the graphics system in use, when the analog input signal is converted to a digital signal for image display.

This is called clock adjustment. If the clock pulse is not set correctly, some vertical bars appear on the screen.

DVI (Digital Visual Interface)

DVI is a digital interface standard. DVI allows direct transmission of the PC's digital data without loss.

This adopts the TMDS transmission system and DVI connectors. There are two types of DVI connectors. One is a DVI-D connector for digital signal input only. The other is a DVI-I connector for both digital and analog signal inputs.

DVI DMPM (DVI Digital Monitor Power Management)

DVI DMPM is a digital interface power-saving function. The "Monitor ON (operating mode)" and "Active Off (power-saving mode)" are indispensable for DVI DMPM as the monitor's power mode.

Gain

This is used to adjust each color parameter for red, green and blue. An LCD monitor displays the color by the light passing through the panel color filter. Red, green and blue are the three primary colors. All the colors on the screen are displayed by combining these three colors. The color tone can be changed by adjusting the light intensity (volume) passing through each color's filter.

Phase

Phase means the sampling timing to convert the analog input signal to a digital signal. Phase adjustment is made to adjust the timing. It is recommended that phase adjustment be made after the clock is adjusted correctly.

Resolution

The LCD panel consists of numerous pixels of specified size, which are illuminated to form images. The monitor consists of 1280 horizontal pixels and 1024 vertical pixels. At a resolution of 1280×1024 , all pixels are illuminated as a full screen (1:1).

sRGB (Standard RGB)

International standard for "color reproduction and color space" among peripheral devices (such as monitors, printers, digital cameras, scanners). sRGB allows Internet users to closely match colors as a simple color matching means for the Internet use.

Temperature

Color temperature is a method to measure the white color tone, generally indicated in degrees Kelvin. The screen becomes reddish at a low temperature, and bluish at a high temperature, like the flame temperature.

5000K: Slightly reddish white

6500K: Warm white like paper white

9300K: Slightly bluish white

TMDS (Transition Minimized Differential Signaling)

A signal transmission system for digital interface.

VESA DPMS (Video Electronics Standards Association - Display Power Management Signaling)

VESA provides the standardization of signals from PC (graphics board) for power saving of PC monitors. DPMS defines the signal status between PC and monitor.

5-6 Preset Timing

The following table shows factory preset video timing.

Mode Dot clock Horizontal: kHz Vertical: Hz Vertical: Hz Vertical: Hz Vertical: Hz Vertical: 31.47 Polarity Vertical: Hz Vertical: 31.47 Negative Negative Negative Negative Negative Vertical: 31.47 Negative Negative Negative Negative Negative Negative Vertical: 31.47 Negative Negati						
VGA 640x480@60Hz 25.2 MHz Vertical 59.94 Negative VGA 720x400@70Hz 28.3 MHz Horizontal 31.47 Negative Macintosh 640x 30.2 MHz Vertical 70.09 Positive Macintosh 640x 30.2 MHz Vertical 66.67 Negative Macintosh 832x 57.3 MHz Vertical 49.73 Negative Macintosh 1152x 100.0 MHz Vertical 74.55 Negative Macintosh 1280x 126.2 MHz Vertical 74.76 Positive Macintosh 1280x 126.2 MHz Horizontal 74.76 Positive PC-9801 640x400@76Hz 21.0MHz Horizontal 74.76 Positive PC-9821 640x400@70Hz 25.2 MHz Horizontal 31.5 Negative VESA 640x480@72Hz 31.5 MHz Horizontal 37.86 Negative VESA 640x480@75Hz 31.5 MHz Horizontal 37.86 Negative VESA 800x600@60Hz 40.0 MHz Horizontal 35.16 Positive VESA	Mode	Dot clock			Polarity	
VGA 720x400@70Hz 28.3 MHz Vertical Forestal Signer Programs Vertical Forestal Signer Programs Signer Programs Negative Programs Macintosh 640x 480@67Hz 30.2 MHz Horizontal Signer Programs 35. Negative Programs Macintosh 832x 624@75Hz 57.3 MHz Horizontal Horizontal Forestal Signer Programs 49.73 Negative Programs Macintosh 1152x 870@75Hz 100.0 MHz Horizontal Ge.68 Negative Programs Negative Programs Macintosh 1280x 960@75Hz 126.2 MHz Horizontal Programs 74.76 Positive Programs PC-9801 640x400@56Hz 21.0MHz Horizontal Programs 74.76 Positive Programs PC-9821 640x400@70Hz 25.2 MHz Horizontal Programs 31.5 Negative Programs VESA 640x480@72Hz 31.5 MHz Horizontal Programs 37.86 Negative Programs VESA 800x600@60Hz 36.0 MHz Horizontal Programs 37.5 Negative Programs VESA 800x600@60Hz 40.0 MHz Horizontal Programs 37.8 Positive Programs VESA 800x600@75Hz 49.5 MHz Horizontal Programs 48.8 Positive Programs VESA 1024x768@60Hz 75.0 MHz Horizontal Programs 48.8 Positive Programs <td>VC A 640-490@60H-</td> <td>25 2 MHz</td> <td>Horizontal</td> <td>31.47</td> <td>Negative</td>	VC A 640-490@60H-	25 2 MHz	Horizontal	31.47	Negative	
Vertical Vertical Vertical Vertical Vertical Associative	VGA 640x480@60H2	25.2 IVIHZ	Vertical	59.94	Negative	
Macintosh 640x	VC A 720-400@70U7	20.2 MH=	Horizontal	31.47	Negative	
Macintosh 832x 624@75Hz 77.3 MHz Fortical 49.73 Negative Horizontal 49.73 Negative Horizontal 49.73 Negative Horizontal 49.73 Negative Vertical 74.55 Negative Horizontal 74.55 Negative Horizontal 74.56 Negative Horizontal 74.76 Positive Horizontal 24.83 Negative Horizontal 31.5 Negative Horizontal 31.5 Negative Horizontal 31.5 Negative Horizontal 31.5 Negative Horizontal 37.86 Negative Vertical 72.81 Negative Horizontal 37.86 Negative Vertical 72.81 Negative Horizontal 37.5 Negative Horizontal 37.5 Negative Horizontal 37.5 Negative Horizontal 37.5 Negative Vertical 75 Negative Horizontal 37.5 Negative Horizontal 37.86 Negative Vertical 60.32 Positive Horizontal 48.08 Positive Vertical 72.19 Positive Vertical 72.19 Positive Vertical 75 Positive Vertical 75 Positive Vertical 75 Positive Vertical 75 Positive Vertical 60 Negative Vertical 60 Negative Vertical 60.02 Positive Vertical 75.03 Positive Vertical 75.03 Positive Vertical 75 Positive Vertical 60 Positive Verti	VGA 720x400@70H2	20.3 IVII IZ	Vertical	70.09	Positive	
Wertical G6.67 Negative Horizontal 49.73 Negative Wertical 74.55 Negative Vertical 74.55 Negative Vertical 75.06 Negative Vertical 74.76 Positive Vertical 75.0 Positive Vertical 60.02 Positive Vertical 60.02 Positive Vertical 60.02 Positive Vertical 60.02 Positive Vertical	Macintosh 640×	20 2 M⊔-	Horizontal	35	Negative	
624@75Hz 57.3 MHz Vertical 74.55 Negative Macintosh 1152x 870@75Hz 100.0 MHz Horizontal Vertical 68.68 Negative Macintosh 1280x 960@75Hz 126.2 MHz Horizontal Vertical 74.76 Positive PC-9801 640x400@56Hz PC-9821 640x400@70Hz 21.0MHz Horizontal Vertical 24.83 Sequive Negative VESA 640x480@72Hz 31.5 MHz Horizontal Vertical 31.5 Negative Negative VESA 640x480@75Hz 31.5 MHz Horizontal Vertical 37.86 Negative Negative VESA 800x600@56Hz 36.0 MHz Horizontal Vertical 35.16 Positive Positive VESA 800x600@60Hz 40.0 MHz Horizontal Vertical 37.88 Positive Positive VESA 800x600@75Hz 49.5 MHz Horizontal Vertical 48.08 Positive Positive VESA 1024x768@60Hz 65.0 MHz Horizontal Vertical 46.88 Positive Positive VESA 1024x768@75Hz 78.8 MHz Horizontal Vertical 60.02 Positive Positive VESA 1280x960@60Hz 108.0 MHz Horizontal Vertical 67.5 P	480@67Hz	30.2 IVII IZ		66.67	Negative	
Macintosh 1152x Macintosh 1280x 960@75Hz Macintosh 1280x 960@75Hz 126.2 MHz Merizontal 74.76 Positive Merizontal 74.76 Positive Merical 74.76 Positive 75.0 Merical 74.76 Positive 75.0 Merical 75.0 Positive Merical 60.02 Positive Merical 60.02 Positive Merical 75.04 Positive Merical	Macintosh 832×	57 2 MU-	Horizontal	49.73	Negative	
Negative	624@75Hz	37.3 IVII IZ	Vertical	74.55	Negative	
Macintosh 1280x 960@75Hz 126.2 MHz Horizontal 74.76 Positive Vertical 56.42 Negative Vertical 70.15 Negative Vertical 70.15 Negative Vertical 70.15 Negative Vertical 72.81 Negative Vertical 72.81 Negative Vertical 75 Negative Vertical 75 Negative Vertical 75 Negative Vertical 56.25 Positive Vertical 56.25 Positive Vertical 56.25 Positive Vertical 60.32 Positive Vertical 60.32 Positive Vertical 72.19 Positive Vertical 72.19 Positive Vertical 75 Positive Vertical 70.07 Negative Vertical 70.07 Negative Vertical 75.03 Positive Vertical 75.03 Positive Vertical 75 Positive Vertical 60 Positive Vertical 60.02 Positive Ver	Macintosh 1152x	100 0 MHz	Horizontal	68.68	Negative	
PC-9801 640×400@56Hz	870@75Hz	100.0 1011 12	Vertical	75.06	Negative	
PC-9801 640×400@56Hz	Macintosh 1280x	126.2 M⊔-	Horizontal	74.76	Positive	
PC-9821 640x400@70Hz	960@75Hz	120.2 WII IZ	Vertical	74.76	Positive	
Vertical 56.42 Negative	PC-0801 640×400@56Hz	21 OMH-	Horizontal	24.83	Negative	
VESA 640x480@72Hz	FC-9801 040x400@30112	21.000112	Vertical	56.42	Negative	
VESA 640×480@72Hz 31.5 MHz Vertical Vertical Vertical Vertical 72.81 Negative Negative Vertical 72.81 Negative Negative Vertical 72.81 Negative Negative Vertical 75.81 Negative Negative Negative Vertical 75.82 Negative Nega	PC-9821 640×400@70Hz	25.2 MHz	Horizontal	31.5	Negative	
VESA 640x480@75Hz 31.5 MHz Vertical 72.81 Negative VESA 640x480@75Hz 31.5 MHz Horizontal 37.5 Negative VESA 800x600@56Hz 36.0 MHz Horizontal 35.16 Positive VESA 800x600@60Hz 40.0 MHz Horizontal 37.88 Positive VESA 800x600@72Hz 50.0 MHz Horizontal 48.08 Positive VESA 800x600@75Hz 49.5 MHz Horizontal 46.88 Positive VESA 1024x768@60Hz 65.0 MHz Horizontal 48.36 Negative VESA 1024x768@70Hz 75.0 MHz Horizontal 56.48 Negative VESA 1024x768@75Hz 78.8 MHz Horizontal 60.02 Positive VESA 1152x864@75Hz 108.0 MHz Horizontal 67.5 Positive VESA 1280x1024@60Hz 108.0 MHz Horizontal 63.98 Positive VESA 1280x1024@60Hz 108.0 MHz Horizontal 63.98 Positive VESA 1280x1024@60Hz 108.0 MHz Horizontal 60.02 Positive	1 6-9021 040×400@70112	25.2 1011 12	Vertical	70.15		
VESA 640×480@75Hz 31.5 MHz Vertical 72.81 Negative VESA 800×600@56Hz 36.0 MHz Horizontal 37.5 Negative VESA 800×600@60Hz 40.0 MHz Horizontal 35.16 Positive VESA 800×600@60Hz 40.0 MHz Horizontal 37.88 Positive VESA 800×600@72Hz 50.0 MHz Horizontal 48.08 Positive VESA 800×600@75Hz 49.5 MHz Horizontal 46.88 Positive VESA 1024×768@60Hz 65.0 MHz Horizontal 48.36 Negative VESA 1024×768@70Hz 75.0 MHz Horizontal 56.48 Negative VESA 1024×768@75Hz 78.8 MHz Horizontal 60.02 Positive VESA 1152×864@75Hz 108.0 MHz Horizontal 67.5 Positive VESA 1280×1024@60Hz 108.0 MHz Horizontal 63.98 Positive VESA 1280×1024@75Hz 135.0 MHz Horizontal 79.98 Positive	VESA 640×480@72Hz	31.5 MHz	Horizontal	37.86		
VESA 640x480@75HZ 31.5 MHZ Vertical 75 Negative VESA 800x600@56Hz 36.0 MHz Horizontal 35.16 Positive VESA 800x600@60Hz 40.0 MHz Horizontal 37.88 Positive VESA 800x600@72Hz 50.0 MHz Horizontal 48.08 Positive VESA 800x600@75Hz 49.5 MHz Horizontal 46.88 Positive VESA 1024x768@60Hz 65.0 MHz Horizontal 48.36 Negative VESA 1024x768@70Hz 75.0 MHz Horizontal 56.48 Negative VESA 1024x768@75Hz 78.8 MHz Horizontal 56.48 Negative VESA 1152x864@75Hz 108.0 MHz Horizontal 67.5 Positive VESA 1280x1024@60Hz 108.0 MHz Horizontal 60 Positive VESA 1280x1024@60Hz 108.0 MHz Horizontal 63.98 Positive VESA 1280x1024@75Hz 135.0 MHz Horizontal 79.98 Positive	VEG/(040X400@72112	01.0 WII IZ		_	Negative	
VESA 800x600@56Hz 36.0 MHz Vertical Vertical 75 Negative Positive Positive VESA 800x600@60Hz 40.0 MHz Horizontal S6.25 Positive Vertical 56.25 Positive Positive Positive VESA 800x600@72Hz 50.0 MHz Horizontal Horizontal Horizontal Horizontal Positive Vertical T2.19 Positive Po	VESA 640×480@75Hz	31.5 MHz				
VESA 800x600@56Hz 36.0 MHz Vertical 56.25 Positive VESA 800x600@60Hz 40.0 MHz Horizontal 37.88 Positive VESA 800x600@72Hz 50.0 MHz Horizontal 48.08 Positive VESA 800x600@75Hz 49.5 MHz Horizontal 46.88 Positive VESA 1024x768@60Hz 65.0 MHz Horizontal 48.36 Negative VESA 1024x768@70Hz 75.0 MHz Horizontal 56.48 Negative VESA 1024x768@75Hz 78.8 MHz Horizontal 60.02 Positive VESA 1152x864@75Hz 108.0 MHz Horizontal 67.5 Positive VESA 1280x960@60Hz 108.0 MHz Horizontal 60 Positive VESA 1280x1024@60Hz 108.0 MHz Horizontal 63.98 Positive VESA 1280x1024@75Hz 135.0 MHz Horizontal 79.98 Positive	V26/10/10/100 0/10/12					
VESA 800×600@60Hz 40.0 MHz Vertical Vertical Vertical Foliation (According to the process) 56.25 Fositive Foliative Foliation (According to the process) Vertical Foliation (According to the process) 70.0 MHz Foliation (According to the process) Vertical Foliation (According to the process) 70.0 MHz Foliation (According to the process) Vertical Foliation (According to the process) 70.0 MHz Foliation (According to the process) Horizontal Foliation (According to the process) 48.36 Foliation (According to the process) Negative Foliation (According to the process) Vertical Foliation (According to the process) Negative Foliation (According to the process) Vertical Foliation (According to the process) Negative Foliation (According to the process) Vertical Foliation (According to the process) Positive Foliation (According to the pr	VESA 800×600@56Hz	36.0 MHz				
VESA 800x600@60Hz 40.0 MHz Vertical 60.32 Positive VESA 800x600@72Hz 50.0 MHz Horizontal 48.08 Positive VESA 800x600@75Hz 49.5 MHz Horizontal 46.88 Positive VESA 1024x768@60Hz 65.0 MHz Horizontal 48.36 Negative VESA 1024x768@70Hz 75.0 MHz Horizontal 56.48 Negative VESA 1024x768@75Hz 78.8 MHz Horizontal 60.02 Positive VESA 1152x864@75Hz 108.0 MHz Horizontal 67.5 Positive VESA 1280x960@60Hz 108.0 MHz Horizontal 60 Positive VESA 1280x1024@60Hz 108.0 MHz Horizontal 63.98 Positive VESA 1280x1024@75Hz 135.0 MHz Horizontal 79.98 Positive	V26/ (000/000 000 II					
VESA 800×600@72Hz 50.0 MHz Vertical Vertical Vertical Vertical 72.19 Positive Posi	VESA 800×600@60Hz	40.0 MHz				
VESA 800x600@72Hz 50.0 MHz Vertical 72.19 Positive VESA 800x600@75Hz 49.5 MHz Horizontal 46.88 Positive VESA 1024x768@60Hz 65.0 MHz Horizontal 48.36 Negative VESA 1024x768@70Hz 75.0 MHz Horizontal 56.48 Negative VESA 1024x768@75Hz 78.8 MHz Horizontal 60.02 Positive VESA 1152x864@75Hz 108.0 MHz Horizontal 67.5 Positive VESA 1280x960@60Hz 108.0 MHz Horizontal 60 Positive VESA 1280x1024@60Hz 108.0 MHz Horizontal 63.98 Positive VESA 1280x1024@75Hz 135.0 MHz Horizontal 79.98 Positive	120,1000,1000,000					
VESA 800×600@75Hz 49.5 MHz Horizontal Vertical 46.88 Vertical Positive Positive Positive VESA 1024×768@60Hz 65.0 MHz Horizontal Horizontal Horizontal Fortical Fortica	VESA 800×600@72Hz	50.0 MHz				
VESA 800x600@75Hz 49.5 MHz Vertical 75 Positive VESA 1024x768@60Hz 65.0 MHz Horizontal 48.36 Negative VESA 1024x768@70Hz 75.0 MHz Horizontal 56.48 Negative VESA 1024x768@75Hz 78.8 MHz Horizontal 60.02 Positive VESA 1152x864@75Hz 108.0 MHz Horizontal 67.5 Positive VESA 1280x960@60Hz 108.0 MHz Horizontal 60 Positive VESA 1280x1024@60Hz 108.0 MHz Horizontal 63.98 Positive VESA 1280x1024@75Hz 135.0 MHz Horizontal 79.98 Positive VESA 1280x1024@75Hz 135.0 MHz Horizontal 79.98 Positive						
VESA 1024×768@60Hz 65.0 MHz Horizontal Vertical Foundation of the process of the pro	VESA 800×600@75Hz	49.5 MHz				
VESA 1024x768@60Hz 65.0 MHz Vertical 60 Negative VESA 1024x768@70Hz 75.0 MHz Horizontal 56.48 Negative VESA 1024x768@75Hz 78.8 MHz Horizontal 60.02 Positive VESA 1152x864@75Hz 108.0 MHz Horizontal 67.5 Positive VESA 1280x960@60Hz 108.0 MHz Horizontal 60 Positive VESA 1280x1024@60Hz 108.0 MHz Horizontal 63.98 Positive VESA 1280x1024@75Hz 135.0 MHz Horizontal 79.98 Positive						
VESA 1024×768@70Hz 75.0 MHz Horizontal Vertical Foliation 56.48 Foliation Negative Positive Positive VESA 1024×768@75Hz 78.8 MHz Horizontal Foliation 60.02 Fositive Positive Positive VESA 1152×864@75Hz 108.0 MHz Horizontal Foliation 67.5 Fositive Positive Positive VESA 1280×960@60Hz 108.0 MHz Horizontal Foliation 60 Fositive Positive Positive Positive VESA 1280×1024@60Hz 108.0 MHz Horizontal Foliation 63.98 Fositive Positive Positive VESA 1280×1024@75Hz 135.0 MHz Horizontal Foliation 79.98 Fositive	VESA 1024×768@60Hz	65.0 MHz				
VESA 1024x766@75Hz 75.0 MHz Vertical 70.07 Negative VESA 1024x768@75Hz 78.8 MHz Horizontal 60.02 Positive VESA 1152x864@75Hz 108.0 MHz Horizontal 67.5 Positive VESA 1280x960@60Hz 108.0 MHz Horizontal 60 Positive VESA 1280x1024@60Hz 108.0 MHz Horizontal 63.98 Positive VESA 1280x1024@75Hz 135.0 MHz Horizontal 79.98 Positive						
VESA 1024×768@75Hz 78.8 MHz Horizontal Vertical 60.02 Fositive Positive VESA 1152×864@75Hz 108.0 MHz Horizontal Foreign (Fig. 1) 67.5 Fositive Positive VESA 1280×960@60Hz 108.0 MHz Horizontal Foreign (Fig. 2) 60 Fositive Positive VESA 1280×1024@60Hz 108.0 MHz Horizontal Foreign (Fig. 2) 63.98 Fositive Positive VESA 1280×1024@75Hz 135.0 MHz Horizontal Foreign (Fig. 2) 79.98 Fositive	VESA 1024×768@70Hz	75.0 MHz				
VESA 1024x768@75Hz 78.8 MHz Vertical 75.03 Positive VESA 1152x864@75Hz 108.0 MHz Horizontal 67.5 Positive VESA 1280x960@60Hz 108.0 MHz Horizontal 60 Positive VESA 1280x1024@60Hz 108.0 MHz Horizontal 63.98 Positive VESA 1280x1024@75Hz 135.0 MHz Horizontal 79.98 Positive						
VESA 1152x864@75Hz 108.0 MHz Horizontal Vertical 67.5 Positive VESA 1280x960@60Hz 108.0 MHz Horizontal 60 Positive Vertical 60 Positive VESA 1280x1024@60Hz 108.0 MHz Horizontal 63.98 Positive Vertical 60.02 Positive Vertical 60.02 Positive VESA 1280x1024@75Hz 135.0 MHz Horizontal 79.98 Positive	VESA 1024×768@75Hz	78.8 MHz				
VESA 1152x864@75Hz 108.0 MHz Vertical 75 Positive VESA 1280x960@60Hz 108.0 MHz Horizontal 60 Positive VESA 1280x1024@60Hz 108.0 MHz Horizontal 63.98 Positive VESA 1280x1024@75Hz 135.0 MHz Horizontal 79.98 Positive						
VESA 1280×960@60Hz 108.0 MHz Horizontal Vertical 60 Positive VESA 1280×1024@60Hz 108.0 MHz Horizontal G3.98 Positive Vertical Positive G0.02 Positive VESA 1280×1024@75Hz 135.0 MHz Horizontal Horizontal 79.98 Positive	VESA 1152×864@75Hz	108.0 MHz				
VESA 1280×960@60Hz 108.0 MHz Vertical 60 Positive VESA 1280×1024@60Hz 108.0 MHz Horizontal 63.98 Positive Vertical 60.02 Positive VESA 1280×1024@75Hz 135.0 MHz Horizontal 79.98 Positive						
VESA 1280×1024@60Hz 108.0 MHz Horizontal Vertical 63.98 Fositive Go.02 Positive Foreign For	VESA 1280×960@60Hz	108.0 MHz				
VESA 1280×1024@60Hz 108.0 MHz Vertical 60.02 Positive VESA 1280×1024@75Hz 135.0 MHz Horizontal 79.98 Positive						
VESA 1280×1024@75Hz 135 0 MHz Horizontal 79.98 Positive	VESA 1280×1024@60Hz	108.0 MHz				
I VESA 1280×1024(α) /5Hz 135 () MHz						
I VENICALI 75.03 I POSITIVA I	VESA 1280×1024@75Hz	135.0 MHz	Vertical	75.03	Positive	

Attention

- Display position may be deviated depending on the PC connected, which may require screen adjustment using Adjustment menu.
- If a signal other than those listed in the table is input, adjust the screen using the Adjustment menu. However, screen display may still be incorrect even after the adjustment.
- When interlace signals are used, the screen cannot be displayed correctly even after screen adjustment using the Adjustment menu.



Congratulations!

The display you have just purchased carries the TCO'03 Displays label. This means that your display is designed, manufactured and tested according to some of the strictest quality and environmental requirements in the world. This makes for a high performance product, designed with the user in focus that also minimizes the Impact on our natural environment.

Some of the features of the TCO'03 Display requirements:

Ergonomics

Good visual ergonomics and image quality in order to improve the working environment for the user
and to reduce sight and strain problems. Important parameters are luminance, contrast, resolution,
reflectance, colour rendition and image stability.

Energy

- Energy-saving mode after a certain time beneficial both for the user and environment
- Electrical safety

Emissions

- Electromagnetic fields
- Noise emissions

Ecology

- The products must be prepared for recycling and the manufacturer must have a certified environmental management system such as EMAS or ISO 14000
- Restrictions on
 - chlorinated and brominated flame retardants and polymers
 - heavy metals such as cadmium, mercury and lead.

The requirements includes in this label have been developed by TCO Development in co-operation with scientists, experts, users as well as manufacturers all over the world. Since the end of the 1980s TCO has been involved in influencing the development of IT equipment in a more user-friendly direction. Our labeling system with displays in 1992 and is now requested by users and IT-manufacturers all over the world.

For more information, please visit www.tcodevelopment.com

For U.S.A., Canada, etc. (rated 100-120 Vac) Only

FCC Declaration of Conformity

We, the Responsible Party EIZO NANAO TECHNOLOGIES INC.

5710 Warland Drive, Cypress, CA 90630

Phone: (562) 431-5011

declare that the productTrade name: EIZO

Model: FlexScan S1961

is in conformity with Part 15 of the FCC Rules. Operation of this product is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

- * Reorient or relocate the receiving antenna.
- * Increase the separation between the equipment and receiver.
- * Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- * Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note

Use the attached specified cable below or EIZO signal cable with this monitor so as to keep interference within the limits of a Class B digital device.

- AC Cord
- Shielded Signal Cable (D-SUB mini 15 pin D-SUB mini 15 pin, the enclosed signal cable)
- Stereo mini-jack cable (Speaker applied model)

Canadian Notice

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de le classe B est comforme à la norme NMB-003 du Canada.

Hinweise zur Auswahl des richtigen Schwenkarms für Ihren Monitor

Dieser Monitor ist für Bildschirmarbeitsplätze vorgesehen. Wenn nicht der zum Standardzubehör gehörige Schwenkarm verwendet wird, muss statt dessen ein geeigneter anderer Schwenkarm installiert werden. Bei der Auswahl des Schwenkarms sind die nachstehenden Hinweise zu berücksichtigen:

Der Standfuß muß den nachfolgenden Anforderungen entsprechen:

- a)Der Standfuß muß eine ausreichende mechanische Stabilität zur Aufnahme des Gewichtes vom Bildschirmgerät und des spezifizierten Zubehörs besitzen. Das Gewicht des Bildschirmgerätes und des Zubehörs sind in der zugehörenden Bedienungsanleitung angegeben.
- b)Die Befestigung des Standfusses muß derart erfolgen, daß die oberste Zeile der Bildschirmanzeige nicht höher als die Augenhöhe eines Benutzers in sitzender Position ist.
- c)Im Fall eines stehenden Benutzers muß die Befestigung des Bildschirmgerätes derart erfolgen, daß die Höhe der Bildschirmmitte über dem Boden zwischen 135 150 cm beträgt.
- d)Der Standfuß muß die Möglichkeit zur Neigung des Bildschirmgerätes besitzen (max. vorwärts: 5°, min. nach hinten ≥ 5°).
- e)Der Standfuß muß die Möglichkeit zur Drehung des Bildschirmgerätes besitzen (max. ±180°). Der maximale Kraftaufwand dafür muß weniger als 100 N betragen.
- f) Der Standfuß muß in der Stellung verharren, in die er manuell bewegt wurde.
- g)Der Glanzgrad des Standfusses muß weniger als 20 Glanzeinheiten betragen (seidenmatt).
- h)Der Standfuß mit Bildschirmgerät muß bei einer Neigung von bis zu 10° aus der normalen aufrechten Position kippsicher sein.

Hinweis zur Ergonomie:

Dieser Monitor erfüllt die Anforderungen an die Ergonomie nach EK1-ITB2000 mit dem Videosignal, 1280×1024 RGB analog, 0.7 Vp-p und mindestens 60.0 Hz Bildwiederholfrequenz, non interlaced. Weiterhin wird aus ergonomischen Gründen empfohlen, die Grundfarbe Blau nicht auf dunklem Untergrund zu verwenden (schlechte Erkennbarkeit, Augenbelastung bei zu geringem Zeichenkontrast.)

"Maschinenlärminformations-Verordnung 3. GPSGV: Der höchste Schalldruckpegel beträgt 70 dB(A) oder weniger gemäss EN ISO 7779"

Recycle Auskunft

Die Rücknahme dieses Produktes nach Nutzungsende übernimmt EIZO in Deutschland zusammen mit dem Partner eds-r gmbh rucknahmesysteme. Dort werden die Geräte in ihre Bestandteile zerlegt, die dann der Wiederverwertung zugeführt werden. Um einen Abholtermin zu vereinbaren und die aktuellen Kosten zu erfahren, benutzen Sie bitte folgende Rufnummer: 02153-73 35 00. Weitere Informationen finden Sie auch unter der Internet-Adresse: http://www.eizo.de.

Recycling Information for customers in Switzerland:

All recycling information is placed in the SWICO's website. http://www.swico.ch

Recycling-Information für Kunden in der Schweiz:

Alle Informationen zum Thema Recycling finden Sie auf der Homepage des Brancheverbandes SWICO. http://www.swico.ch

Renseignements de recyclage pour les clients en Suisse:

Vous trouvez tous les renseignements pour le sujet de recyclage sur la page WEB de l'UNION DE BRAN CHE SWICO.

http://www.swico.ch

Recycling Information for customers in USA:

All recycling information is placed in the EIZO Nanao Technologies, Inc's website. http://www.eizo.com

Återvinnings information för kunder i Sverige:

All information om återvinning finns på Eizo Europe AB:s hemsida: http://www.eizo.se



EIZO NANAO CORPORATION

153 Shimokashiwano, Hakusan, Ishikawa 924-8566 Japan Phone: +81 76 277 6792 Fax: +81 76 277 6793

EIZO EUROPE AB

Lovangsvagen 14 194 61, Upplands Väsby, Sweden Phone: +46 8 594 105 00 Fax: +46 8 590 91 575