



## 15-Inch Monitor with LED Backlight and 5-Year Warranty

### LED Backlight

With an energy-saving LED backlight, the FlexScan S1503 uses only 6 watts during typical operation. The LED backlight does not contain any mercury for minimal environmental impact when the monitor is eventually disposed of.


### Digital and Analog Inputs

With both DVI-D and D-Sub mini 15-pin inputs, you can use a computer that has either a digital or an analog graphics board (or both if connected to two computers), and quickly switch between the inputs via a front panel button.



### Optimized Brightness with Auto EcoView

The Auto EcoView function is a sensor on the front of the monitor that measures ambient light and optimizes the screen's brightness. Since the screen is never too bright, eye strain is reduced while power consumption is cut by up to 50% compared to operating the monitor with Auto EcoView turned off and set to the default factory brightness of 100%.

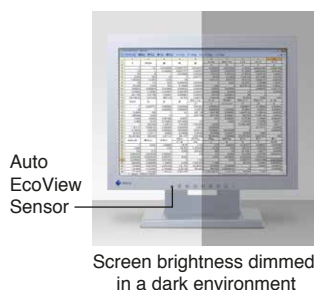

### Preset Modes for Optimum Viewing

With EIZO's Fine Contrast function you can choose from several preset modes for the various applications you work with. Toggling between modes can be done manually in the OSD menu or automatically by assigning a mode to a particular application with the bundled ScreenManager Pro for LCD software.



### Prevents Eye Fatigue in Dimly-Lit Offices

Fine Contrast includes an EyeCare mode that reduces the screen's brightness to just 3 cd/m<sup>2</sup>. This ultra-low brightness helps prevent eye fatigue and increase productivity when working in an environment with very dim ambient lighting.

### Built-In Speakers

0.5-watt speakers are tucked away at the back of the monitor and out of view so you can enjoy sound while bezel size is kept to a minimum. A headphone jack is also built into the monitor.

## Anti-Glare Treatment

A non-glare screen reduces eye fatigue by dissipating reflective light that otherwise makes the screen difficult to view. Furthermore, the surface of the bezels is treated to prevent light reflection.


## Flicker Prevention

A modulated light adjustment function prevents flicker at low brightness settings to reduce eye fatigue.

## Built to Last Five Years

EIZO's five-year warranty is two years or 67% longer than the standard three-year warranty of most brands. Even if the initial purchase price of the FlexScan S1503 is higher than another 15-inch monitor, the TCO (total cost of ownership) will likely be lower due to the significantly longer buying cycle and less need for repair.

### 5-Year vs. 3-Year Warranty

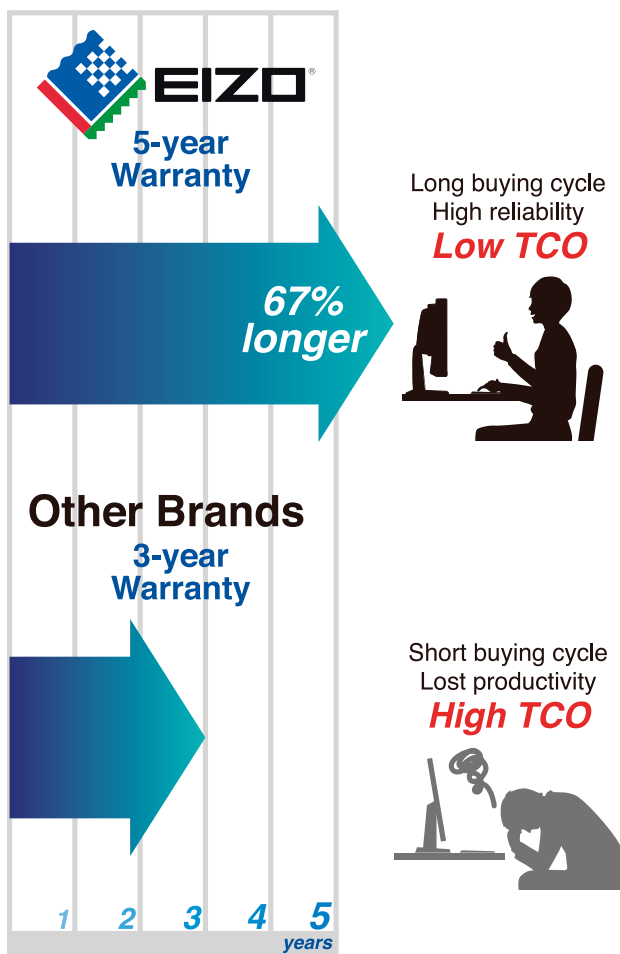

## SPECIFICATIONS

Cabinet Colors	Gray, Black
Panel Type	TN
Backlight	LED
Size	15" / 38 cm (380 mm diagonal)
Native Resolution	1024 x 768 (4:3 aspect ratio)
Display Size (H x V)	304.1 x 228.0 mm
Pixel Pitch	0.297 x 0.297 mm
Display Colors	16.77 million from a palette of 1.06 billion
Viewing Angles (H / V, typical)	160°, 160°
Brightness (typical)	400 cd/m <sup>2</sup>
Contrast Ratio (typical)	600:1
Response Time (typical)	8 ms (black-white-black)
Video Signals	D-Sub mini 15 pin x 1, DVI-D 24 pin x 1 (with HDCP)
Digital Scanning Frequency (H / V)	31 - 49 Hz, 59 - 61 Hz (VGA Text: 69 - 71 Hz)
Analog Scanning Frequency (H / V)	24.8 - 60.5 kHz, 55 - 75.5 kHz
Sync Formats	Separate
Speakers	0.5 W + 0.5 W
Input Terminals	3.5 mm stereo jack
Output Terminals	3.5 mm headphone jack
Sound Adjustment	Volume
Power Requirements	AC 100 - 120 V / 200 - 240 V, 50 / 60 Hz
Maximum Power Consumption	16 W
Typical Power Consumption	6 W
Power Save Mode	1 W or less
Power Management	Power Save (VESA DPM), Eco Timer
Preset Modes	EyeCare, Text, sRGB, Custom
Auto EcoView	Yes
OSD Languages	English, French, German, Italian, Japanese, Simplified and Traditional Chinese, Spanish, Swedish
Others	Screen Adjustment (Clock, Phase, Position, Range (Auto)), Smoothing (5 stages), Color Adjustment (Brightness, Contrast, Temperature, Gain, Reset), Signal Switching, Power Indicator, Product Information (name, serial number, resolution, operating time, etc.), OSD Menu Position, Adjustment Lock, Reset, DDC/CI Lock
Dimensions (Landscape, W x H x D)	346 x 349 x 157 mm
Dimensions (Without Stand, W x H x D)	346 x 280 x 69 mm
Net Weight	4.7 kg
Net Weight (Without Stand)	3.4 kg
Tilt	30° Up, 0° Down
Hole Spacing (VESA Standard)	100 x 100 mm
Temperature	5 - 35 °C
Humidity (R.H., non condensing)	20 - 80 %
Certifications & Standards	TUV/Ergonomics (including ISO9241-307), TUV/GS, C-Tick, CE, CB, cTUVus, FCC-B, Canadian ICES-003-B, TUV/S, VCCI-B, RoHS, WEEE, China RoHS, CCC, GOST-R
Supplied Accessories	AC power cord, signal cables (DVI-D - DVI-D, D-Sub mini 15 pin - D-Sub mini 15 pin), EIZO LCD Utility Disk (PDF user's manual, ScreenManager Pro for LCD [DDC/CI], EIZO ScreenSlicer software), setup guide
Warranty	Five Years

## EIZO Corporation

153 Shimokashiwano, Hakusan, Ishikawa 924-8566 Japan

Phone +81-76-277-6792 Fax +81-76-277-6793

www.eizoglobal.com

All product names are trademarks or registered trademarks of their respective companies. EIZO and FlexScan are registered trademarks of EIZO Corporation. Specifications are subject to change without notice.

Copyright©2013 EIZO Corporation. All rights reserved.