

The FlexScan S1961 is an ultra-slim 19" monitor, featuring side bezels that are only 6.9 mm wide. This makes it ideal for desktop use in any business environment, especially in space-critical places like trading rooms. Versatile positioning and an energy-saving BrightRegulator add to its appeal. The S1961's high contrast and resolution, three viewing modes and 178° viewing angles ensure vivid clarity with all types of text and images.

- 1280 × 1024 native resolution
- 1500:1 contrast ratio
- 250 cd/m<sup>2</sup> brightness
- 5-year warranty



## FEATURES

### Ultra-Thin Bezels

EIZO has succeeded in decreasing the width of the side bezels to only 6.9 mm — about half the size of our other 19" SlimEdge monitors. This slim design saves space on the desktop, and works especially well in multi-monitor setups, letting the screens fit closely together.

### Flexible Positioning and Mounting

The S1961 comes with a stand that has a height adjustment range of 100 mm, as well as tilt and swivel angles of 30° and 70° for optimum positioning. The screen pivots 90° into portrait orientation for viewing text documents or web pages. The power supply unit is in the panel rather than the stand, so you can detach the stand and mount the monitor on an arm or wall in accordance with VESA standards.

### BrightRegulator

This function keeps the monitor at the ideal brightness level under all lighting conditions. A sensor on the front bezel measures the ambient light and signals

the backlight to adjust the screen brightness accordingly. In addition to providing greater clarity, this also saves energy by dimming the screen when room brightness levels are low. If you prefer a constant brightness level regardless of ambient lighting, you can easily disable the BrightRegulator.

### Brightness Stabilization

At startup or upon wakeup, an EIZO-patented drift correction function quickly stabilizes the brightness level. In addition, a sensor measures the backlight brightness and compensates for brightness fluctuations caused by the ambient temperature and the passage of time.

### 1500:1 Contrast Ratio

This outstanding contrast performance makes images on dark backgrounds appear more vivid, brings out the subtle differences in similar shades of color, and ensures that colors retain their richness even in brightly lit rooms.

# FlexScan S1961

19" Color LCD Monitor



## Optional Speakers

The S1961 is also available with optional dual speakers built in, convenient for listening to voice audio. The speakers are located on the back, so they are unobtrusive and do not take up extra space on the desktop. The monitor's appearance is the same with or without them, so you can have one model with speakers in a multi-monitor configuration and still maintain design consistency.



## Digital and Analog Input Terminals

DVI-D and D-Sub input terminals allow the monitor to accept both digital and analog inputs. If both types are connected, you can switch between them via a front panel button.

## Three Fine Contrast Modes

You can select three Fine Contrast modes for optimum viewing with various applications. The Text mode is for viewing documents, the sRGB mode is for web browsing and the Custom mode is for setting your own viewing preferences.

## Customer Assurance


A five-year warranty offers a long service life, and compliance with leading industry standards such as TCO'03 and TÜV Ergonomics ensures a better working environment. The EIZO Eco Products 2006 label indicates these products meet strict internal requirements for design, manufacturing, packaging, and usage, including the introduction of lead-free solder and chrome-free steel plates.



## Accessories

Various mounting arms and stands are available for expanding positioning options and usability. For more information, please see [www.eizo.com/products/accessories/](http://www.eizo.com/products/accessories/)

## Dimensions

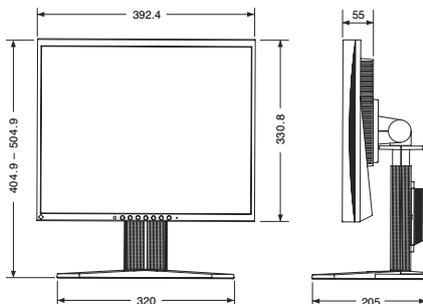

## Specifications

<b>Model Variations</b>		With or without speakers
<b>Panel</b>	<b>Panel Size and Type</b>	48 cm (19") TFT color LCD panel
	<b>Viewing Angles (H, V)</b>	178°, 178° (at contrast ratio of 10:1)
	<b>Brightness / Contrast</b>	250 cd/m <sup>2</sup> / 1500:1
	<b>Response Time</b>	20 ms (typical)
	<b>Native Resolution</b>	1280 × 1024
	<b>Active Display Size (H × V)</b>	376 × 301 mm
	<b>Viewable Image Size</b>	Diagonal: 481 mm
	<b>Pixel Pitch</b>	0.294 × 0.294 mm
<b>Display Colors</b>		16.77 million from a palette of 1.06 billion
<b>Available Cabinet Colors</b>		Gray, Black
<b>Dot Clock</b>		Analog: 135 MHz, Digital: 108 MHz
<b>Scanning Frequency (H, V)</b>	<b>Analog</b>	24.8 – 80 kHz, 50 – 75 Hz
	<b>Digital</b>	31 – 64 kHz, 59 – 61 Hz (VGA Text: 69 – 71 Hz)
<b>Input Signals</b>		Analog: RGB Analog, Digital: DVI Standard 1.0
<b>Input Terminals</b>		D-Sub mini 15 pin, DVI-D 24 pin (switchable)
<b>USB Port / Standard</b>		1 upstream / USB Standard Rev. 2.0
<b>Plug &amp; Play</b>		VESA DDC 2B
<b>Power</b>	<b>Power Requirements</b>	AC 100 – 120 V, 200 – 240 V: 50 / 60 Hz
	<b>Power Consumption</b>	40 W (maximum)
	<b>Power Save Mode</b>	Less than 1 W
<b>Physical Specifications</b>	<b>Height Adjustment Range</b>	100 mm
	<b>Tilt / Swivel / Pivot</b>	30° Up, 0° Down / 35° Right, 35° Left / 90°
	<b>Dimensions (W × H × D)</b>	With Stand: 392.4 × 404.9 – 504.9 × 205 mm Without Stand: 392.4 × 330.8 × 55 mm
	<b>Net Weight</b>	With Stand: 6.8 kg, Without Stand: 4.7 kg
<b>Auto Brightness Functions</b>		Auto Brightness Stabilization, BrightRegulator
<b>Auto Adjustment Function (Analog Only)</b>		Auto Setup
<b>Auto Power Save Functions</b>		Analog: VESA DPMS, Digital: DVI DMPM
<b>Display Mode Options</b>		Fine Contrast (Text, sRGB, Custom), Auto Fine Contrast <sup>1</sup>
<b>Screen-Manager OSD Adjustment Functions</b>	<b>Screen Adjustment (analog only)</b>	Clock, Phase, Position, Range Adjustment (RGB)
	<b>Color Adjustment</b>	Brightness, Temperature, Gain, Reset
	<b>Audio (speaker option only)</b>	Volume
	<b>Other Settings</b>	Signal Switching, Product Information (product name, serial number, operating time), OSD Menu Position, BrightRegulator, Power Indicator, Adjustment Lock, Languages (English, German, French, Italian, Japanese, Simplified Chinese, Spanish, Swedish, Traditional Chinese), Off Timer, Reset
<b>Audio (speaker option only)</b>		Dual 0.3 W built-in speakers, input / headphone jacks
<b>Certifications and Standards</b>		TCO'03, TÜV/Ergonomics (including ISO 13406-2), TÜV/GS, C-Tick, CE, CB, UL (cTÜVus), CSA (cTÜVus), FCC-B, Canadian ICES-003-B, TÜV/S, VCCI-B, EPA ENERGY STAR®, RoHS, WEEE, EIZO Eco Products 2006
<b>Supplied Accessories</b>		AC power cord, signal cables (D-Sub – D-Sub, DVI-D – DVI-D), USB cable, audio cable (speaker option only), setup manual, CD-ROM (PDF user's manual, ScreenManager Pro for LCD <sup>2</sup> , ICC profiles), 4 screws for mount option, warranty registration card
<b>Warranty</b>		Five Years <sup>3</sup>

<sup>1</sup> Bundled ScreenManager Pro for LCD is necessary to activate Auto Fine Contrast. <sup>2</sup> ScreenManager Pro for LCD is compatible with the Microsoft® Windows® 98SE/Me/2000/XP operating systems only. <sup>3</sup> The usage time is limited to 30,000 hours or less, and the warranty period of the LCD panel and backlight is limited to three years from the date of purchase.

With current LCD technology, a panel may contain a limited number of missing or flickering pixels.

All product names and logos are trademarks or registered trademarks of their respective companies. ScreenManager, SlimEdge, FlexScan, and EIZO are registered trademarks of Eizo Nanao Corporation. Specifications are subject to change without notice.

© 2006 Eizo Nanao Corporation.

**EIZO NANA O CORPORATION**

153 Shimokashiwano, Hakusan, Ishikawa 924-8566 Japan

Phone +81-76-277-6792 Fax: +81-76-277-6793

[www.eizo.com](http://www.eizo.com)

