

User's Manual

FP-1901


Panel Protector for EIZO 48.0 cm (19 inch) class LCD Monitors

Note

- Please be careful not to scratch the LCD panel or the cabinet with the panel protector during installation. Also please do not remove the panel protector often. It may scratch or result in damage to the LCD panel.
- The panel protector has a non-glare treatment side and a glossy side. Use preferable side.
- When using LCD monitor with optional panel protector, it is preferable to avoid using downwards. In this condition, the panel protector might become bend or slip out from the monitor.

● Installation

Before installation, please remove dust and stains from the LCD panel.

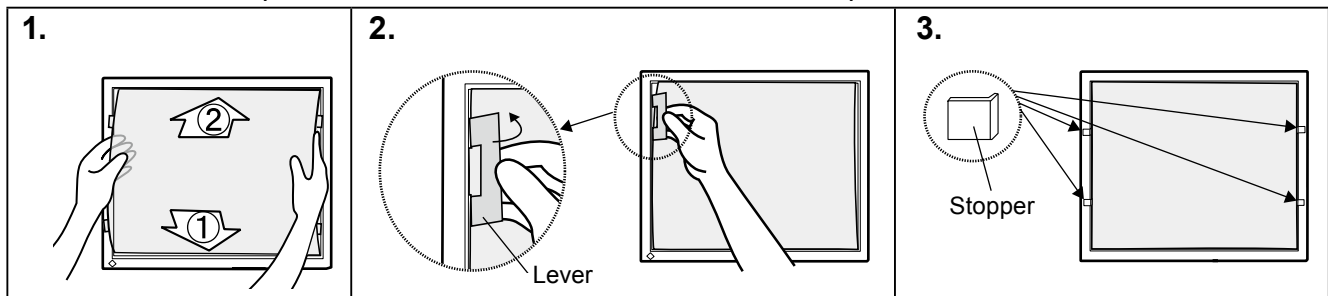

- 1. Set the panel protector into the grooves of the panel frame; the lower first (1), then the upper (2).**
- 2. With the enclosed tool (Lever) set the tabs of the panel protector into the side grooves (4 tabs).**
Put the lever on the tabs of the panel protector and move it toward the LCD panel to install. Position the protector into the LCD panel tightly without leaving an opening.
- 3. Attach the stoppers, from which the release paper has been removed, to the cabinet.**

● Removing

- 1. Remove the stoppers.**
- 2. Put the lever on the tabs of panel protector and move it toward the cabinet to remove.**

● Cleaning

The panel surface can be cleaned with a soft cloth such as cotton or lens paper.

If necessary stubborn stains can be removed by moistening part of the cloth with water to enhance its cleaning power. For a better finish, wipe the panel surface again using a dry cloth.

Note

- Please be sure to keep the panel protector immobilized while cleaning it. Otherwise it may scratch the surface of the LCD panel. To hold the panel protector by hand, use a soft cloth to avoid dust or finger prints.
- Chemicals such as alcohol and antiseptic solution may cause gloss variation, tarnishing, and fading of the cabinet or panel, and also quality deterioration of the image.
- Never use any solvents or chemicals, such as thinner, benzene, wax, and abrasive cleaner, which may damage the cabinet or panel.

Tips

- The optional ScreenCleaner is recommended for cleaning the cabinet and panel surface.

● Specification

Surface treatment	Non-glare side: non glare hard coating / Glossy side: hard coating
Coating strength	2H
Light transmission	More than 90 %
Dimension/ Weight	377.8 mm (W) × 302.8 mm (H) × 1.0 mm (D) / Approx. 140 g
Accessories	Lever (for Panel Protector), User's Manual, Stoppers (4 pcs)



EIZO Corporation

153 Shimokashiwano, Hakusan, Ishikawa 924-8566 Japan
Phone: +81 76 277 6792 Fax: +81 76 277 6793

EIZO Europe GmbH

Helmut-Grashoff-Strasse 18, 41179 Mönchengladbach, Germany
Phone: +49 2161 8210210 Fax: +49 2161 8210150

EIZO株式会社

〒 924-8566 石川県白山市下柏野町 153 番地

<http://www.eizoglobal.com>
<http://www.eizo.co.jp>

Copyright © 2016 EIZO Corporation All rights reserved.

1st Edition-June, 2016

Printed in Japan.

00N0L971A1
(UM-FP-1901-AL)